



Nokia Mini Speaker MD-9



9217491/1

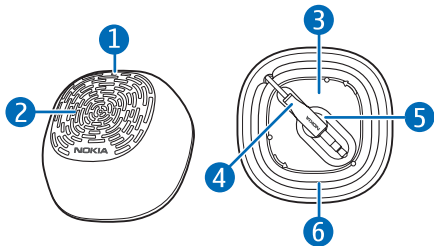

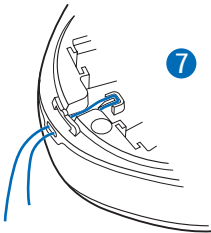

© 2009 Nokia. All rights reserved.

Nokia, Nokia Connecting people and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation.

Introduction

With the Nokia Mini Speaker MD-9, you can listen to music from your compatible mobile phone or music player and enjoy high-quality audio. The speaker has a standard 3.5 mm audio connector. The speaker cable also serves as an FM radio antenna.

Read this user guide carefully before using the speaker. Also, read the user guide for the device that you connect to the speaker.

This product may contain small parts. Keep them out of the reach of small children. The plug of this device may contain a small amount of nickel. Persons who are sensitised to nickel may have symptoms from prolonged skin contact with the plug.

Parts

The speaker contains the parts shown at the start of this guide: indicator light (1), speaker element (2), battery cover (3), speaker cable with an audio plug (4), power key (5, shown under the audio plug), and coil for the speaker cable (6).

Parts of the speaker are magnetic. Metallic materials may be attracted to the speaker. Do not place credit cards or other magnetic storage media near the speaker, because information stored on them may be erased.

Install the batteries

The speaker is powered by two AAA batteries. To open the battery cover, lift the audio plug from the slot at the bottom of the speaker, uncoil the

speaker cable, turn the cover to the direction indicated by arrows, and lift the cover. To install the batteries, insert them as indicated in the battery compartment. To close the battery cover, align the slot at the side of the cover with the speaker cable, press the cover against the speaker, and turn the cover to the opposite direction.

To remove the batteries, open the battery cover, and lift the batteries from the compartment.

During long periods where the speaker is not used, remove the batteries to prevent damage from battery leakage.

Use the speaker

Lift the audio plug from the slot at the bottom of the speaker, and uncoil the speaker cable.

To connect the speaker to a compatible Nokia device that has a Nokia 3.5 mm AV connector or a compatible device (such as a PC or music player)

that has a standard 3.5 mm audio connector, insert the audio plug into the connector in your device.

To connect the speaker to a compatible Nokia device that has a Nokia 2.5 mm AV connector, connect the appropriate adapter (if supplied) to the device and the audio plug to the adapter.

To switch on the speaker, slide the power key to the ON position. The indicator light turns on. To switch off, slide the power key to the OFF position. The indicator light turns off.

To listen to music when the speaker is connected to a compatible device, start the music playback on the device.

To set the volume, use the volume controls on your device. If the sound level of the speaker becomes too low or you hear a continuous beep from the speaker, change the speaker batteries.



Warning: Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

To attach a strap, open the battery cover, thread the strap through the hole at the side of the speaker so that the loop runs around the small pin (7), tighten the strap, and close the cover.

To take the speaker with you, switch it off, coil the speaker cable, and insert the audio plug into the slot at the bottom of the device.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the batteries, and allow the device to dry completely before replacing them.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.

- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the product is not working properly, take it to the nearest authorised service facility for service.



Recycle

The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more environmental information, see the product Eco-Declarations at www.nokia.com/environment.

Always return your used electronic products, batteries, and packaging materials to a dedicated collection point. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. More detailed information is available from the product retailer, local waste authorities, national producer responsibility organisations, or your local Nokia representative. Check how to recycle your Nokia products at www.nokia.com/werecycle, or if browsing on a mobile device, www.nokia.mobi/werecycle.