

Nokia Wireless Audio Adapter AD-47W

The AD-47W adapter allows you to connect a compatible headset supporting Bluetooth wireless technology to your computer (or other compatible device). In this way you can use the headset to listen to music using the music player application on your computer.

The adapter is compliant with the USB specification version 2.0 and Bluetooth Specification 1.2 supporting the following profiles: Advanced Audio Distribution Profile 1.0 (source role) and Audio Video Remote Control Profile 1.0 (target role). The adapter can be used with the Windows XP and Windows 2000 operating systems. To use the adapter, pair and connect it with the headset.

Pair and connect the adapter

To pair the adapter with your headset and connect them for the first time, turn on the computer, and set the headset ready for pairing as instructed

in the headset user guide. The adapter can be paired with compatible headsets that use the Bluetooth passcode 0000.

When the headset is ready for pairing, plug the adapter into a compatible USB port on your computer. The adapter searches for the headset, and the blue indicator light on the adapter flashes quickly. When the adapter finds the headset, the adapter and headset are automatically paired and connected, and the blue indicator light is continuously shown. Now you can start to listen to music through the headset.

If the blue indicator light starts to flash slowly before the adapter is paired with the headset, or to pair the adapter with another compatible headset, set the headset ready for pairing, and press and hold the pairing button on the adapter until the blue indicator light starts to flash quickly.

Use the adapter

To use the adapter, plug it into the USB port of your computer, and switch on the headset. The adapter tries to connect to the headset that was last used with it. Once the adapter is connected to the headset, the blue

indicator light is continuously shown. Start to play music with the music player application on your computer, and place the headset on your ears to hear the music.

If you cannot hear music from your headset even though the adapter is connected to the headset and the music player application is playing, in Windows, select the adapter as the default sound playback device, and ensure that only the default audio devices are used. For example, in Windows XP Professional, go to the Control Panel, select Sounds and Audio Devices and the Audio tab, select the adapter from the Sound playback list, and check the Use only default devices box. If you still cannot hear music, restart the music player application, or see the user guide of the application.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep all accessories and enhancements out of the reach of small children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.

- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the product is not working properly, take it to the nearest authorized service facility for service.

DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product AD-47W is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

CE 0560



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

Copyright © 2006 Nokia. All rights reserved.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.