


# Nokia Music Headset HS-20/AD-41

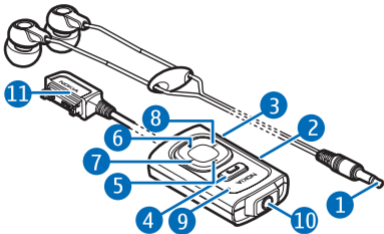

9246131/1

## DECLARATION OF CONFORMITY

We, NOKIA CORPORATION declare under our sole responsibility that the product HS-20 is in conformity with the provisions of the following Council Directive: 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).



The crossed-out wheeled bin means that within the European Union the product must be taken to separate collection at the product end-of-life. Do not dispose of these products as unsorted municipal waste.

Copyright © 2005 Nokia. All rights reserved.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

Nokia, Nokia Connecting People and Pop-Port are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Under no circumstances shall Nokia be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of particular products may vary by region. Please check with the Nokia dealer nearest to you.

### Export Controls

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.



**Note:** Parts of the headset are magnetic. Metallic materials may be attracted to the headset. Do not place credit cards or other magnetic storage media near the headset, because information stored on them may be erased.

### Get started

Insert the headset plug (see part 1 at the start of this guide) into the headset connector (part 10). Insert the Pop-Port™ plug (part 11) into the Pop-Port connector on your compatible phone. The headset is now ready for use.



**Warning:** When using the headset your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

## Adjust the earpiece volume

To adjust the volume, press either end of the volume key (part 2) on the side of the device. To adjust the volume quickly, press and hold the key.

## Call handling

To make a call, use your phone in the normal way when the device is connected to your phone. During the call, speak into the microphone (part 9) of the device.

If your phone supports voice dialing, press and hold the call key (part 4), and proceed as described in the user guide of your phone.

To answer an incoming call, press the call key, or use the phone keys. To reject an incoming call, press the call key twice.

To end a call, press the call key, or use the phone keys.

## Listen to music

You can use the headset to listen to music on your compatible phone.



**Warning:** Listen to music at a moderate level. Continuous exposure to high volume may damage your hearing.

To play a track, select it in the music player of your phone, and press the play/pause key (part 5). See the user guide of your phone for details.

To select the next track, press the fast forward key (part 7). To select the previous track, press the rewind key (part 8). To scroll through the tracks quickly during playback, press and hold either key.

To pause or restart the music player, press the play/pause key.

To stop the music player, press the stop key (part 6).

## Listen to the radio

To listen to the FM radio, start the radio feature of your phone. See the user guide of your phone for details.

To search for a previously saved radio channel, press the fast forward or rewind key repeatedly.

## Lock or unlock the keys

To lock all keys except the call key, slide the lock switch (part 3) on the side of the device towards the Nokia text. To unlock the keys, slide the lock switch to the opposite direction.

## Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep all accessories and enhancements out of the reach of small children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow the device to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.



- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the headset is not working properly, take it to the nearest authorized service facility for service.