

## Nokia Mini Speakers MD-4

These compact stereo speakers offer high-quality audio when you listen to music or the radio on your compatible Nokia phone or audio device. The speakers have a 3.5-mm stereo audio plug.

Read this user guide carefully before using the speakers. Also read the user guide for your phone, which provides important safety and maintenance information, or the user guide for the compatible audio device. Keep all accessories and enhancements out of the reach of small children.

### Install the batteries

The speakers are powered by four AAA batteries. Alkaline batteries are recommended. To install the batteries in pairs, slide the battery cover on the outer side of each speaker to the direction indicated with arrows, place the batteries as indicated in the battery compartment, and close the battery cover by sliding it to the opposite direction. During long periods

where the speakers are not used, remove the batteries to prevent damage from battery leakage.

### Use the speakers

You can use the speakers folded together or unfolded (for example, to form a V shape). The speakers are convenient to carry when folded. The speakers can be unfolded up to approximately 180 degrees. Do not try to force the speakers open more.

To connect the speakers to the phone or audio device, plug the speaker cable into the connector on the device. The speakers can be used with compatible Nokia adapters. To use the speakers with a Nokia adapter, connect the adapter to the device and the speaker cable to the adapter.

To switch on the speakers, slide the power switch located inside the unfolded speakers toward the hinged end. The green indicator light turns on. To switch off, slide the power switch to the opposite direction, or fold the speakers closed. The indicator light turns off.

To set the volume, use the volume controls on your audio device. If the sound level of the speakers becomes too low, change the batteries.

To carry the speakers, fold them and place them in the supplied pouch.

### Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, allow it to dry completely.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.

- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

If the product is not working properly, take it to the nearest authorized service facility for service.

## DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this MD-4 product is in compliance with the essential requirements and other relevant provisions

of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).



### Disposal

The crossed-out wheeled-bin symbol on your product, literature, or packaging reminds you that in the European Union all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. Do not dispose of these products as unsorted municipal waste.

Return the products to collection to prevent possible harm to the environment or human health from uncontrolled waste disposal and to promote the sustainable reuse of material resources. Collection information is available from the product retailer, local waste authorities,

national producer responsibility organizations, or your local Nokia representative. For more information, see product Eco-Declaration or country-specific information at [www.nokia.com](http://www.nokia.com).

© 2007 Nokia. All rights reserved.

Nokia and Nokia Connecting People are registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.