



**NOKIA**  
Nseries

Get **started**

Nokia N76-1

9254304 Issue 2 EN




# Keys and parts (cover and fold open)

 
Hereinafter referred to as Nokia N76.

- 1 Right cover key ►►
- 2 Middle key ►||
- 3 Left cover key ◀◀
- 4 Secondary camera with lower resolution
- 5 Light sensor
- 6 Selection keys ⏏ and ⏏
- 7 Menu key ⏏ to access the main menu
- 8 Multimedia key ⏏ to access the multimedia menu
- 9 Call key 📞
- 10 End key ⏏
- 11 Edit key ⏏ to open a list of commands when you edit text
- 12 Clear key ⏏
- 13 Navi™ scroll key ⏏, ⏏, ⏏, ⏏ (hereinafter referred to as the scroll key) and middle selection key ⏏
- 14 Numeric keypad



## Keys and parts (top and back)

- 1 Power key 
- 2 Mini USB connector to connect to a compatible PC (under USB cover)
- 3 Nokia AV connector for compatible headsets and headphones
- 4 Zoom/volume/scroll keys
- 5 Mode key 
- 6 Capture key 
- 7 Main camera for high-resolution image capture and video recording
- 8 Camera flash
- 9 Charger connector
- 10 Memory card slot for a compatible microSD card

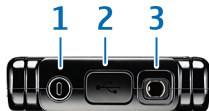

## Insert the USIM card and battery

A USIM card is an enhanced version of the SIM card and is supported by UMTS mobile phones.


Keep all SIM cards out of the reach of small children.

Always switch the device off and disconnect the charger before removing the battery.


For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider or other vendor.

During extended operation, such as an active video sharing session or high-speed data connection, the device may feel warm. In most cases, this condition is normal. If you suspect the device is not working properly, take it to the nearest authorized service facility.


- 1 Remove the instructive foil from the battery cover.

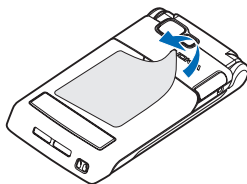


- 2 With the back of the device facing you, remove the cover by sliding it downwards.

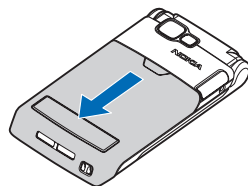


- 3 To remove the SIM tray from the SIM tray slot, pull the foil or the SIM tray handle out.

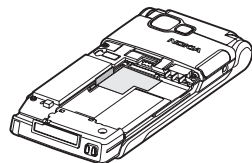


- 4 Insert the USIM card into the SIM tray. Make sure that the contact area on the card is facing upwards, and that the bevelled corner on the card is facing the bevelled corner on the tray.

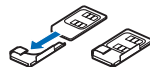


 **Tip!** You can remove the foil from the bottom of the SIM tray.


- 5 Slide the SIM tray all the way into the SIM tray slot. Make sure that the contact area on the card is facing upwards, and that the bevelled corner is facing towards the slot.

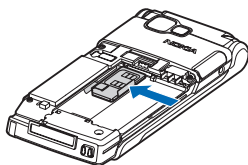


Note that the upper flap of the SIM tray fits against the SIM tray slot.

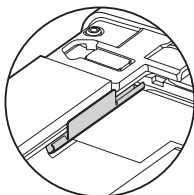

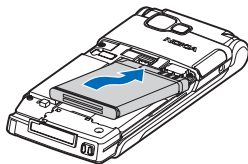

- 6 Insert the battery.

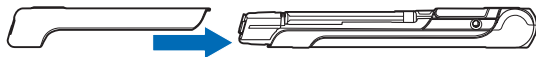 


- 7 Replace the back cover.




## Switch the device on


- 1 Press and hold .
- 2 If the device asks for a UPIN code or lock code, enter it, and press . The factory setting for the lock code is 12345.

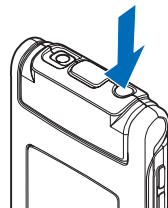

When you switch your device on for the first time, it may ask you to select a country and city and set the time and date. To find the country or city, enter the first letters of the name.

Your device has internal antennas.

 **Note:** As with any radio transmitting device, avoid touching an antenna unnecessarily when the antenna is in use. For example, avoid touching the cellular antenna during a phone call. Contact with a transmitting or receiving antenna affects the quality of the radio communication, may

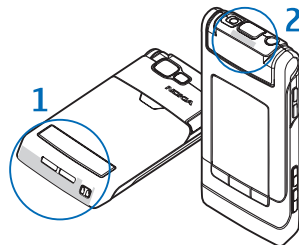


cause the device to operate at a higher power level than otherwise needed, and may reduce the battery life.

- 1 Cellular antenna
- 2 Bluetooth technology


## Insert a memory card

Use only compatible microSD cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.


- 1 To insert the memory card, pull the microSD cover out.

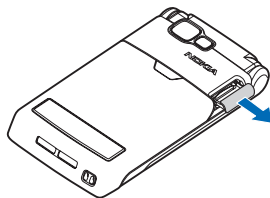


- 2 Swing the microSD cover open.
- 3 Insert the memory card in the slot. With the back of the device facing you, make sure that the contact area of the card is facing down and towards the slot.

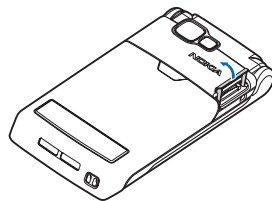


- 4 Push the card in. You hear a click when the card locks into place.
- 5 Close the cover. You cannot use the memory card if the cover is open.

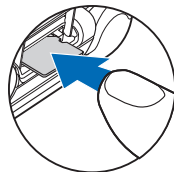


### Eject the memory card

- 1 Before you eject the memory card, press , and select **Remove memory card**. All applications are closed.
- 2 When **Removing memory card will close all open applications. Remove anyway?** is displayed, select **Yes**.

- 3 When Remove memory card and press 'OK' is displayed, open the door of the memory card slot.
- 4 Press the memory card to release it from the slot.
- 5 Pull out the memory card. If the device is switched on, select **OK**.

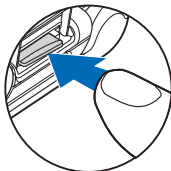

 **Important:** Do not remove the memory card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

## Play music

Do not connect products that create an output signal as this may cause damage to the device. Do not connect any voltage source to the Nokia AV connector.

When connecting any external device or any headset, other than those approved by Nokia for use with this device, to the Nokia AV connector, pay special attention to volume levels.


To listen to music in digital format with the **Music Player**, plug a headset into the audio connector. The **Music Player** has two views: **Music menu** to select music and **Now playing** to listen to music.

### Play music with the fold closed

- 1 In the standby mode, press **⏮** to enter **Music menu**.
- 2 Select the music you want to play, and press **▶ ||**.

In **Now playing**, use the quick cover keys to control playback:

- Press **▶ ||** to play or pause a song.  
When you pause a song, a list of the tracks you are currently listening to is displayed.
- Press **⏮** to rewind the track or to skip backwards.

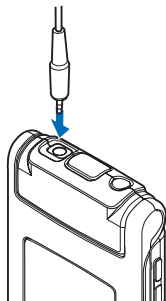


- Press **▶▶** to fast forward the track or to skip forward.
- To switch between **Now playing** and **Music menu**, press **⏮**.

## Use the camera

Your device has two cameras, a high-resolution camera on the back of the device and a lower resolution secondary camera on the inside of the fold. Both cameras can be used to take still pictures and videos.

### Take pictures with the main camera

- 1 To start the camera, press and hold the capture key for more than 1 second.  
The viewfinder opens.
- 2 To take a picture, press the capture key again.  
To record video, open the fold and select **Options > Video mode**.  
To use the secondary camera, open the fold and select **Options > Use secondary camera**.

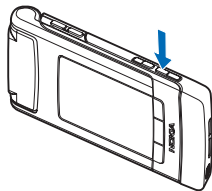



## Support

### Help

The help function provides instructions when using the device. To access it from an application, select **Options > Help**.

### User guide

Refer to the user guide for other important information about your device.

### Online

Check [www.nseries.com/support](http://www.nseries.com/support) or your local Nokia website for the latest version of the user guide, additional information, downloads, and services related to your Nokia product.

mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.

© 2007 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nseries, N76, and Navi are trademarks or registered trademarks of Nokia Corporation. Other product and company names