

# NOKIA N92



Get started



Nokia N92-1

 
# Get Started

## Modes

Model number: Nokia N92-1.

Hereinafter referred to as Nokia N92.

Your device has four modes: Fold closed mode (1), View mode (2), Fold open mode (3), and Imaging mode (4). For more information, see 'Modes' in the user guide.

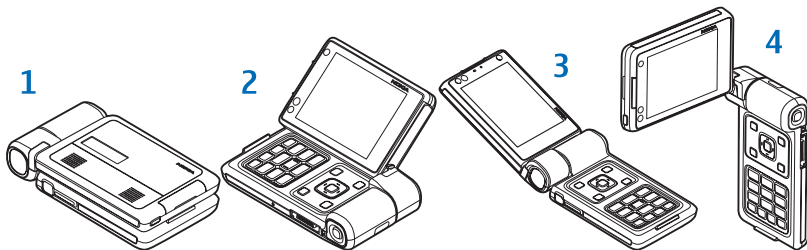

In the **Fold closed mode**, you can continue listening to the radio, TV, or music player, and adjust the volume. You can change the profile or switch the device off with the power key. If the TV is switched on, you can view the Mobile TV channel and program information, program schedule, and recording status on the cover display. If the TV is off, you can view the message status and check the time.

If you lift the side of the swing axis display when the fold is closed, the **View mode** is activated. Besides using other applications, you can use the View mode to watch TV programs and videos, view your images, browse the Web, and make hands-free calls.



In the **Fold open** mode, you can navigate in the main menu with the scroll key, select and open applications and files, and use all the basic phone functions. The secondary camera above the top left corner of the display is available for video calls. The fold opens about 160 degrees, as shown in the picture. Do not force the fold to open more.


Use the **Imaging mode** to record videos and take pictures quickly and easily. To activate the Imaging mode, open the fold up to 90 degrees, hold the device sideways, and turn the fold up so that the main display faces you. The main camera is activated, and you see the view to be captured.

# Mobile TV

With **Mobile TV**, you can watch, listen to, and record digital TV programs and access interactive mobile television and radio services (network service).

Check the Mobile TV network coverage and the availability of and instructions on accessing datacast services and pricing with your service provider.

To open the Mobile TV application, press and hold the multimedia key . The system shows the program guides that are available in your location. In the first start-up, this may take a few minutes. To select a program guide, scroll to it, and press . The system arranges the available channels according to the program guide. This may take some time. You can change the program guide later in the settings.

 
To view a list of available channels, scroll up or down, and press  to select a channel. To change the channel, you can also use the media keys on both sides of the scroll key. You can also press the number keys to change the channel. To switch between full screen and normal screen size, press **\*** on the keypad.


In some countries, owners of a television receiver are required to pay a television licence fee. Contact your local authorities for more information.

For more information, see 'Mobile TV' in the user guide.



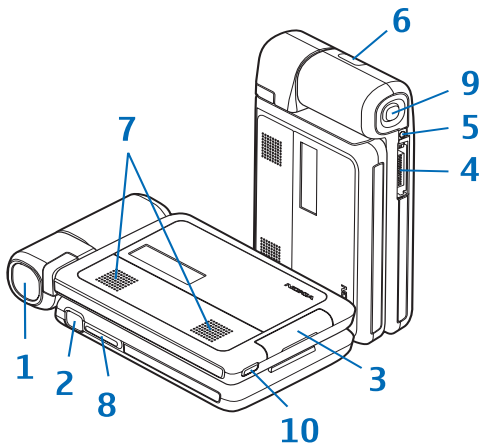


# Keys and parts—Fold closed mode



- Main camera unit and lens (1).
- LED flash (2)
- Memory card slot for a miniSD card (3)
- Pop-Port™ interface system connector for compatible enhancements (4)
- Charger connector (5)
- Infrared port (6)
- Stereo loudspeakers (7)
- Volume key to adjust volume and zoom in and out when you use the camera (8)
- Capture key to take pictures and record videos (9)
-  Power key (10)

# Keys and parts—Fold open mode

 - Secondary camera for video calls (1)
- Selection keys to select the commands and items in the View mode (2)
- Selection keys to select the commands and items in the Imaging and Fold open mode. Press and hold to use voice commands. (3)
- Call key (4)
- Menu key (5)
- Press and hold as a shortcut to a web connection. (6)
-  Multimedia key (7)
- Clear key (8)
- Two-way number keypad (9)
- End key (10)
- Navi™ scroll key (hereinafter referred to as the scroll key) to move left, right, up, or down in menus. Press the key in the middle () to select, accept, or activate. (11)
- Media keys to control the Mobile TV, video player, music player, and radio. (12)

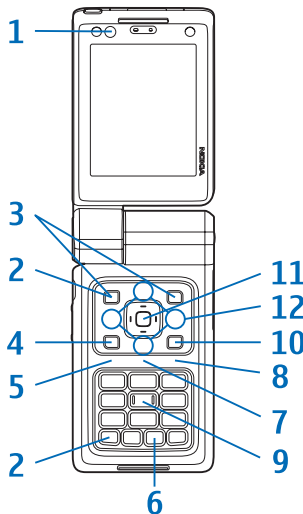

# Insert the (U)SIM card and battery

The USIM card is an enhanced version of the SIM card and is supported by UMTS mobile devices.

For availability and information on using SIM card services, contact your SIM card vendor. This may be the service provider or other vendor.

- 1 With the back of the device facing you, slide the back cover downwards (1) and lift it up (2).

Always switch the device off, and disconnect the charger before removing the battery.

 
 
 
- 2 To release the (U)SIM card holder, slide the holder, and lift the holder up (3).

- 3 Insert the (U)SIM card into the holder (4). Ensure that the beveled corner on the card is facing upward from the holder, and that the contact area on the card is facing the connectors on the device.

- 4 Close the holder, and slide it to lock it into place (5).

- 5 Insert the battery (6). Ensure that the contacts on the top of the battery are facing the connectors on the device.


- 6 To replace the back cover, slide it upwards starting from the bottom, until it clicks into place.



# Charge the battery


- 1 Connect a compatible charger to a wall outlet.
- 2 Connect the power cord to the device. If the battery is completely discharged, it may take a while before the charging indicator starts scrolling. The device can be used while charging.
- 3 When the battery is fully charged, the bar stops scrolling. Disconnect the charger from the device, then from the wall outlet.

 You can also use the Nokia Charger Adapter (CA-44) to charge the battery with previous compatible Nokia charger models. For enhancements, batteries, and chargers, see the user guide 'Enhancements, batteries, and chargers', p. 9.

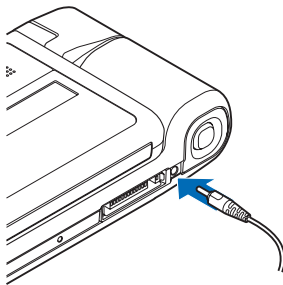



# Switch the device on

 
- 1 Press and hold the power key on top of the device.
- 2 If the device asks for a (U)PIN code or lock code, enter it, and press . The factory setting for the lock code is **12345**.
- 3 The tutorial starts.

Your device has internal antennas.



**Note:** As with any radio transmitting device, avoid touching an antenna unnecessarily when the antenna is in use. For example, avoid touching the cellular antenna during a phone call. Contact with a transmitting or receiving antenna affects the quality of the radio communication, may cause the device to operate at a higher power level than otherwise needed, and may reduce the battery life.


- 1 DVB-H antenna for receiving Mobile TV broadcasts
- 2 Bluetooth and Wireless LAN technology
- 3 Cellular antennas

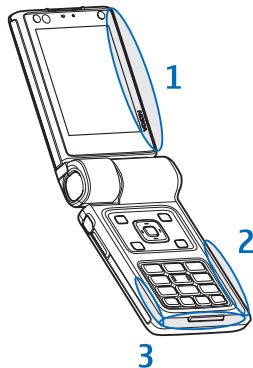

When you switch on the device for the first time, it may ask you to set the following information: **Select current city:**, **Time:**, and **Date:**. Use the scroll keys and the number keys. To find the city, enter the first letters of the city name. The city you select also defines the time zone for the clock in your device.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have a special configuration such as changes in menu names, menu order, and icons. Contact your service provider for more information.

# Headset

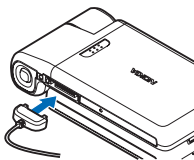 

Connect the compatible headset to the Pop-Port interface system connector of your device.



**Warning:** When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.



# Insert the memory card

  You can use a compatible miniSD card as extra storage space to save the memory on your device. You can also back up information from your device to the memory card.

Use only compatible miniSD cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.


## To insert the memory card:

- 1 Open the door (11) of the memory card slot on top of the device.
- 2 Insert the memory card in the slot (12). Ensure that the contact area on the card is facing down, and the beveled corner is facing towards the slot.
- 3 Push the card in (13). You hear a click when the card locks into place.



## Eject the memory card

 - 1 Before you eject the card, press **(i)**, and select **Remove mem. card**. All applications are closed.
- 2 When **Remove memory card and press 'OK'** is displayed, open the memory card slot door.
- 3 Press the memory card to release it from the slot (14).
- 4 Remove the memory card, and if required by the device, select **OK** to confirm.



**Important:** Do not remove the memory card in the middle of an operation when the card is being accessed. Removing the card in the middle of an operation may damage the memory card as well as the device, and data stored on the card may be corrupted.

# Settings

Your device normally has MMS, GPRS, streaming, and mobile internet settings automatically configured in the device, based upon your network service provider information.

For more information, see 'Connectivity' in the user guide.

# Displays

Remove any protective plastic film covering the displays and the camera lens.

A small number of missing, discolored, or bright dots may appear on the screen. This is a characteristic of this type of display. Some displays may contain pixels or dots that remain on or off. This is normal, not a fault.

# Transfer content from another device

To use the transfer application, see the user guide, 'Transfer content from another device', p. 14.


To use the Nokia Content Copier in Nokia PC Suite to copy content from a compatible Nokia device, see the CD-ROM supplied with your device. Nokia Content Copier supports several Nokia device models. For more information on the devices supported by each Nokia PC Suite, refer to the [www.nokia.com/pcsuite](http://www.nokia.com/pcsuite) pages.

# Support

## Help

The help function provides instructions for using the device. To access it from an application, select **Options** > **Help**.

## Tutorial

The tutorial gives you information about some of the features of your device. The tutorial starts automatically at first start-up. To access it in the menu, press , and select **My own** > **Tutorial**.

## User guide

Refer to the user guide for other important information about your device.

## Online

Check <http://www.nokia.com/support> or your local Nokia Web site for the latest version of this guide, additional information, downloads, and services related to your Nokia product

Copyright © 2007 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nseries, N92, Navi, and Pop-Port are trademarks or registered trademarks of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited.