

Contents	
Safety	6
About your device	6
Network services	7
Shared memory	7
Mail for Exchange	8
Find help	9
Support	9
In-device help	9
Do more with your device	9
Update device software	9
Settings	10
Access codes	11
Remote lock	11
Prolong battery life	11
Free memory	12
Get started	13
Keys and parts (top)	13
Keys and parts (front)	13
Keys and parts (back)	14
Keys and parts (sides)	14
Insert the SIM card and battery	15
Memory card	16
Antenna locations	17
Switch the device on and off	17
Charge the battery	18
Headset	18

Attach wrist strap	19
Touch screen actions	19
Write text	21
Lock the keys and touch screen	24
Nokia Switch	24
Profiles	26

Your device	27
Home screen	27
Display indicators	29
Shortcuts	30
Search	30
Volume and loudspeaker control	31
Offline profile	32
Fast downloading	32
Ovi (network service)	32

Make calls	35
Touch screen during calls	35
Make a voice call	35
During a call	36
Voice and video mailboxes	36
Answer or reject a call	37
Make a conference call	37
Speed dial a phone number	37
Call waiting	38
Voice dialling	38
Make a video call	38
During a video call	39
Answer or reject a video call	40

Internet calls	40	Wireless LAN	65
Video sharing	41	Access points	67
Log	43	Active data connections	69
Contacts (phonebook)	45	Synchronisation	69
Save and edit names and numbers	45	Bluetooth connectivity	70
Contacts toolbar	45	USB	73
Manage names and numbers	45	PC connections	73
Default numbers and addresses	46	Administrative settings	74
Contact cards	46	Internet	75
Set contacts as favourites	46	Browse the web	75
Ring tones, images, and call text for contacts	46	Browser toolbar	75
Copy contacts	47	Navigate pages	76
SIM services	47	Web feeds and blogs	76
Contact groups	48	Content search	76
Ovi Contacts	48	Bookmarks	77
Messaging	54	Empty the cache	77
Messaging main view	54	End the connection	77
Write and send messages	55	Connection security	77
Messaging inbox	56	Web settings	78
Mailbox	56	Positioning (GPS)	79
View messages on a SIM card	58	About GPS	79
Cell broadcast messages	58	Assisted GPS (A-GPS)	80
Service commands	59	Hold your device correctly	80
Messaging settings	59	Tips on creating a GPS connection	80
Mail for Exchange	63	Position requests	81
Connectivity	64	Landmarks	81
Data connections and access points	64	GPS data	82
Network settings	64	Positioning settings	83

Ovi Maps	84	Organise images and video clips	100
Maps overview	84	Photos toolbar	100
Use the compass	84	Albums	100
View your location and the map	85	Tags	100
Map view	85	Slide show	101
Change the look of the map	85	TV-out mode	101
Find a location	86	Edit images	102
View location details	86	Edit video clips	103
Plan a route	87	Image print	103
Save places and routes	88	Share online	104
View and organise places or routes	88		
Send places to your friends	89	Music	104
Synchronise your Favourites	89	Play a song or a podcast	104
Share location	89	Playlists	105
Get voice guidance	90	Podcasts	106
Walk to your destination	90	Transfer music from a computer	106
Drive to your destination	91	Ovi Music	106
Navigation view	91	FM transmitter	107
Get traffic and safety information	91	Nokia Podcasting	108
		FM radio	111
Camera	92	Videos	112
Activate the camera	92	Download and view video clips	112
Image capture	92	Video feeds	113
Video recording	96	My videos	113
Camera settings	97	Transfer videos from your PC	114
Photos	98	Video settings	114
About Photos	98		
View images and videos	98	Personalise your device	115
View and edit file details	99	Change the look of your device	115
		Profiles	115

3-D tones	115
Modify the home screen	116
Modify the main menu	116
Applications	116
Calendar	116
Clock	117
RealPlayer	118
Recorder	119
Notes	120
Office	120
Settings	125
Phone settings	125
Application manager	131
Calling settings	133
Troubleshooting	135
Green tips	137
Save energy	137
Recycle	137
Product and safety information	138
Index	144

Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

SWITCH ON SAFELY



Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

SWITCH OFF IN RESTRICTED AREAS



Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

QUALIFIED SERVICE



Only qualified personnel may install or repair this product.

ACCESSORIES AND BATTERIES



Use only approved accessories and batteries. Do not connect incompatible products.

WATER-RESISTANCE



Your device is not water-resistant. Keep it dry.

About your device

The wireless device described in this guide is approved for use on the (E)GSM 850, 900, 1800, 1900 MHz, and UMTS 900, 1900, 2100 MHz networks. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights.

Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.

Your device supports several methods of connectivity. Like computers, your device may be exposed to viruses and other harmful content. Exercise caution with messages, connectivity requests, browsing, and downloads. Only install and use services and other software from trustworthy sources that offer adequate security and protection against harmful software, such as applications that are Symbian Signed or have passed the Java Verified™ testing. Consider

installing antivirus and other security software on your device and any connected computer.

Important: Your device can only support one antivirus application. Having more than one application with antivirus functionality could affect performance and operation or cause the device to stop functioning.

Your device may have preinstalled bookmarks and links for third-party internet sites. You may also access other third-party sites through your device. Third-party sites are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you choose to access such sites, you should take precautions for security or content.

Warning:

To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

The office applications support common features of Microsoft Word, PowerPoint, and Excel (Microsoft Office 2000, XP, and 2003). Not all file formats can be viewed or modified.

Remember to make back-up copies or keep a written record of all important information stored in your device.

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

The images in this guide may differ from your device display.

Network services

To use the device you must have service from a wireless service provider. Some features are not available on all networks; other features may require that you make specific arrangements with your service provider to use them. Network services involve transmission of data. Check with your service provider for details about fees in your home network and when roaming on other networks. Your service provider can explain what charges will apply. Some networks may have limitations that affect how you can use some features of this device requiring network support such as support for specific technologies like WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols and language-dependent characters.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have customized items such as menu names, menu order, and icons.

Shared memory

The following features in this device may share memory: multimedia messaging (MMS), e-mail application, instant messaging. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. Your device may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing.

During extended operation such as an active video call and high speed data connection, the device may feel warm. In

most cases, this condition is normal. If you suspect the device is not working properly, take it to the nearest authorised service facility.

Mail for Exchange

Use of the Mail for Exchange is limited to over-the-air synchronisation of PIM information between the Nokia device and the authorised Microsoft Exchange server.

Find help

Support

When you want to learn more about how to use your product or you are unsure how your device should function, go to www.nokia.com/support, or using a mobile device, nokia.mobi/support. You can also select **Menu > Applications > Help** in your device.

If this does not resolve your issue, do one of the following:

- Reboot your device. Switch off the device, and remove the battery. After about a minute, replace the battery, and switch on the device.
- Restore the original factory settings.
- Update your device software.

If your issue remains unsolved, contact Nokia for repair options. Go to www.nokia.com/repair. Before sending your device for repair, always back up the data in your device.

In-device help

Your device contains instructions to help to use the applications in your device.

To open help texts from the main menu, select **Menu > Applications > Help** and the application for which you want to read instructions.

When an application is open, to access the help text for the current view, select **Options > Help**.

When you are reading the instructions, to change the size of the help text, select **Options > Decrease font size** or **Increase font size**.

You may find links to related topics at the end of the help text. If you select an underlined word, a short explanation is displayed.

Help texts use the following indicators:

-  Link to a related help topic.
-  Link to the application being discussed.

When you are reading the instructions, to switch between help texts and the application that is open in the background, select **Options > Show open apps**, and the desired application.

Do more with your device

There are various applications provided by Nokia and third party software developers, that help you do more with your device. To find and download applications, visit the Ovi Store at store.ovi.com. These applications are explained in the guides that are available on the product support pages at www.nokia.com/support or your local Nokia website.

Update device software

About device software and application updates

With device software updates and application updates, you can get new features and enhanced functions for your device.

Updating the software may also improve your device performance.



It is recommended that you back up your personal data before updating your device software.

Warning:

If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted. Be sure to back up data before accepting installation of an update.

Downloading software updates may involve the transmission of large amounts of data (network service).

Make sure that the device battery has enough power, or connect the charger before starting the update.

After you update your device software or applications, the instructions in the user guide may no longer be up to date.

Update software using your device

You can check if there are updates available for your device, and download them to your device (network service).

Select **Menu > Settings > Phone > Phone mgmt. > Device updates and Options > Check for updates.**

Update device software using your PC

You can use the Nokia Software Updater PC application to update your device software. To update your device software, you need a compatible PC, a high-speed internet connection, and a compatible USB data cable to connect your device to the PC.

To get more information and to download the Nokia Software Updater application, go to www.nokia.com/softwareupdate.

Settings

Your device normally has MMS, GPRS, streaming, and mobile internet settings automatically configured, based on your network service provider information. You may have settings from your service providers already installed in your device, or you may receive or request the settings from the network service providers as a special message.

You can change the general settings in your device, such as language, standby mode, display, and keypad lock settings.

Access codes

If you forget any of the access codes, contact your service provider.

Personal identification number (PIN) code — This code protects your SIM card against unauthorised use. The PIN code (4 - 8 digits) is usually supplied with the SIM card. After three consecutive incorrect PIN code entries, the code is blocked, and you need the PUK code to unblock it.

UPIN code — This code may be supplied with the USIM card. The USIM card is an enhanced version of the SIM card and is supported by 3G mobile phones.

PIN2 code — This code (4 - 8 digits) is supplied with some SIM cards, and is required to access some functions in your device.

Lock code (also known as security code) — The lock code helps you to protect your device against unauthorised use. The preset code is 12345. You can create and change the code, and set the device to request the code. Keep the new code secret and in a safe place separate from your device. If you forget the code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted. For more information, contact a Nokia Care Point or your device dealer.

Personal Unblocking Key (PUK) code and PUK2 code — These codes (8 digits) are required to change a blocked PIN code or PIN2 code, respectively. If the codes are not supplied with the

SIM card, contact the network service provider whose SIM card is in your device.

UPUK code — This code (8 digits) is required to change a blocked UPIN code. If the code is not supplied with the USIM card, contact the network service provider whose USIM card is in your device.

International Mobile Equipment Identity (IMEI) number — This number (15 or 17 digits) is used to identify valid devices on the GSM network. Devices that are, for example, stolen, can be blocked from accessing the network. The IMEI number for your device can be found under the battery.

Remote lock

To prevent unauthorised use of your device, you can lock your device and memory card remotely using a text message. You must define the text message, and to lock your device, send the text message to your device. To unlock your device, you need the lock code.

To enable remote locking, and to define the text message, select **Menu > Settings and Phone > Phone mgmt. > Security settings > Phone and SIM card > Remote phone locking > Enabled**. Tap the text input field to enter the text message content (5-20 characters), select , and verify the message. Enter the lock code.

Prolong battery life

Many features in your device increase the demand on battery power and reduce the battery lifetime. To save battery power, note the following:

- Features that use Bluetooth technology, or allowing such features to run in the background while using other features, increase the demand on battery power. Deactivate Bluetooth technology when you do not need it.
- Features that use wireless LAN (WLAN), or allowing such features to run in the background while using other features, increase the demand on battery power. WLAN on your Nokia device deactivates when you are not trying to connect, not connected to an access point, or not scanning for available networks. To further reduce battery consumption, you can specify that your device does not scan, or scans less often, for available networks in the background.
- If you have set **Packet data connection to When available** in connection settings, and there is no packet data coverage (GPRS), the device periodically tries to establish a packet data connection. To prolong the operating time of your device, select **Packet data connection > When needed**.
- The Maps application downloads new map information when you scroll to new areas on the map, which increases the demand on battery power. You can prevent the automatic download of new maps.
- If the signal strength of the cellular network varies much in your area, your device must scan for the available network repeatedly. This increases the demand on battery power.

If the network mode is set to dual mode in the network settings, the device searches for the 3G network. You can set the device to use only the GSM network. To use only

the GSM network, select **Menu > Settings and Connectivity > Network > Network mode > GSM**.

- The backlight of the display increases the demand on battery power. In the display settings, you can change the length of the time-out period after which the backlight is switched off. Select **Menu > Settings and Phone > Display > Light time-out**. To adjust the light sensor that observes lighting conditions and adjusts the display brightness, in the display settings, select **Light sensor**.
- Leaving applications running in the background increases the demand on battery power. To close the applications you are not using, if they are not responding, select **Options > Show open apps.**, and go to the application using the menu key. Press and hold the menu key to open the application, and select **Options > Exit**.

Free memory

To view how much space is available for different data types, select **Menu > Applications > Office > File mgr..**

Many features of the device use memory to store data. The device notifies you if the memory in different memory locations is low.

 
To free memory, transfer data to a compatible memory card (if available) or to a compatible computer.

To remove data you no longer need, use File manager or open the respective application. You can remove the following:

- Messages in the folders in Messaging and retrieved e-mail messages in the mailbox
- Saved web pages
- Contact information
- Calendar notes
- Applications shown in Application manager that you do not need
- Installation files (.sis or .sisx) of applications you have installed. Transfer the installation files to a compatible computer.
- Images and video clips in Photos. Back up the files to a compatible computer.


Get started

Keys and parts (top)



- 1 Power key
- 2 Nokia AV connector (3.5 mm) for compatible headsets, headphones, and TV-out connectors

Keys and parts (front)

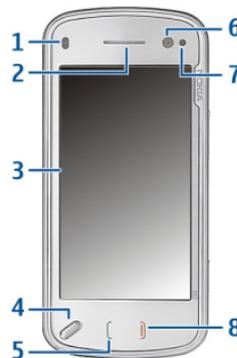

- 1 Proximity sensor
- 2 Earpiece
- 3 Touch screen
- 4 Menu key

- 5 Call key
- 6 Secondary camera lens
- 7 Light sensor
- 8 End key



Do not cover the area above the touch screen, for example, with protective film or tape.

Keys and parts (back)



- 1 Camera flash
- 2 Camera lens
- 3 Lens cover

Keys and parts (sides)



- 1 Stereo speaker
- 2 Micro USB connector
- 3 Charging indicator light
- 4 Lock switch
- 5 Volume up/Zoom in key
- 6 Volume down/Zoom out key
- 7 Capture key

Note: The surface of this device does not contain nickel in the platings. The surface of this device contains stainless steel.

Insert the SIM card and battery


Follow the instructions carefully, to avoid damaging the back cover.

Always switch the device off and disconnect the charger before removing the battery.


- 1 Remove the back cover by lifting it from the bottom end of the device.




- 2 If the battery is inserted, lift the battery in the direction of the arrow to remove it.

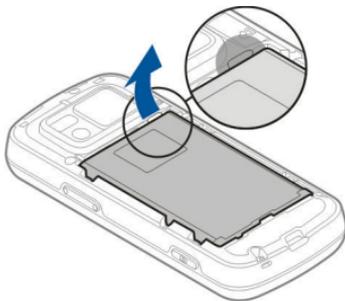


- 3 Pull out the SIM card holder, and insert the SIM card. Ensure that the gold-coloured contact area on the card is facing down and that the bevelled corner on the card is facing the bevelled corner on the holder. Push the SIM card holder back in.

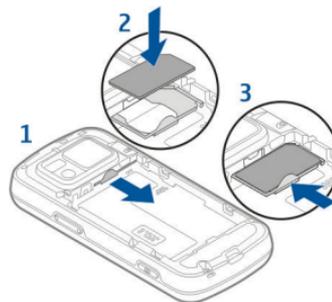

- 4 Align the contacts of the battery with the corresponding connectors on the battery compartment, and insert the battery in the direction of the arrow.

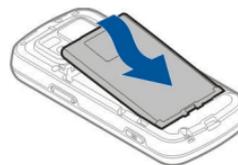

- 5 To replace the back cover, direct the top locking catches toward their slots, and press down until the cover locks into place.

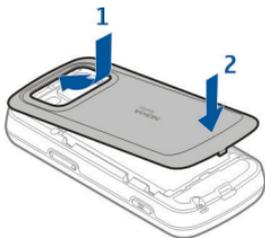

Memory card



Use only compatible microSD cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Insert the memory card

A memory card may be already inserted in the device. If not, do the following:

- 1 Remove the back cover of the device.



- 2 Insert a compatible memory card in the slot. Ensure that the contact area on the card is facing down and towards the slot.



- 3 Push the card in. You can hear a click when the card locks into place.
- 4 Replace the back cover. Keep the device facing down when replacing the cover. Ensure that the cover is properly closed.

Remove the memory card

Important: Do not remove the memory card during an operation when the card is being accessed. Doing so may damage the memory card and the device, and corrupt data stored on the card.

- 1 Before you remove the card, press the power key, and select **Remove memory card**. All applications are closed.
- 2 When **Removing memory card will close all open applications. Remove anyway?** is displayed, select **Yes**.
- 3 When **Remove memory card and press 'OK'** is displayed, remove the back cover of the device.
- 4 Press the memory card to release it from the slot.
- 5 Pull out the memory card. If the device is switched on, select **OK**.
- 6 Replace the back cover. Ensure that the cover is properly closed.

Antenna locations

Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.



Switch the device on and off

To switch on the device:

- 1 Press and hold the power key.



- 2 If the device asks for a PIN code or lock code, enter it, and select **OK**. The preset lock code is **12345**. If you forget the code and your device is locked, your device will require service and additional charges may apply. For more


information, contact a Nokia Care point or your device dealer.

To switch off the device, press the power key briefly, and select **Switch off!**.

Charge the battery

Your battery has been partially charged at the factory. There is no need to charge the device in advance. If the device indicates a low charge, do the following:

Regular charging

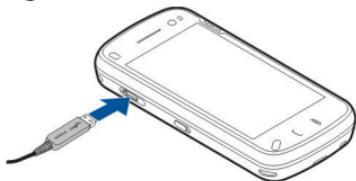

- 1 Connect the charger to a wall outlet.
- 2 Connect the charger to the device. The charging indicator light next to the USB connector is lit when the battery is being charged.
- 3 When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet.

You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Tip: Disconnect the charger from the wall outlet when the charger is not in use. A charger that is connected to the outlet consumes power even when it is not connected to the device.

USB charging


You can use USB charging when a wall outlet is not available. With USB charging, you can also transfer data while charging the device.

- 1 Connect a compatible USB device to your device using a compatible USB cable.
Depending on the type of device that is used for charging, it may take a while for charging to start.
- 2 If your device is switched on, you can select from the available USB mode options on the display of the device.

Note: During extended operation or charging, the device or the charger may feel warm. In most cases, this condition is normal. If you suspect that the device or the charger are not working properly, take them to the nearest authorised service facility.

Headset

You can connect a compatible headset or compatible headphones to your device. You may need to select the cable mode.

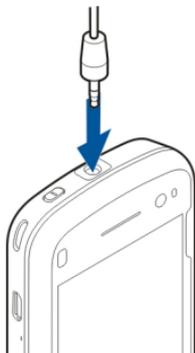

Warning:

When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Do not connect products that create an output signal as this may cause damage to the device. Do not connect any voltage source to the Nokia AV Connector.

When connecting any external device or any headset, other than those approved by Nokia for use with this device, to the Nokia AV Connector, pay special attention to volume levels.

Attach wrist strap

- 1 Open the back cover.



- 2 Thread a wrist strap, and tighten it.
- 3 Close the back cover.

Touch screen actions

Use the touch screen with your finger or with a stylus (if available).

Important: Use only a stylus approved by Nokia for use with this device. Using any other stylus may invalidate any warranty applying to the device and may damage the touch screen. Avoid scratching the touch screen. Never use an actual pen or pencil or other sharp objects to write on the touch screen.

Tap and double-tap

To open an application or other element on the touch screen, you normally tap it with your finger. However, to open the following items, you must tap them twice.

- List items in an application, such as the Drafts folder in the Messaging application.

- Files in a file list, for example, an image in the Captured folder in the Photos application.

Tip: When you open a list view, the first item is already highlighted. To open the highlighted item, tap it once.

If you tap a file or similar item once, it is not opened, it becomes highlighted. To see the options available for the item, select **Options** or, if available, select an icon from a toolbar.


Select

In this user documentation, to open applications or items by tapping them once or twice, you "select" them.

Example: To select **Options** > **Help**, tap **Options**, and then tap **Help**.

Drag


To drag, place your finger on the screen, and slide it across the screen.

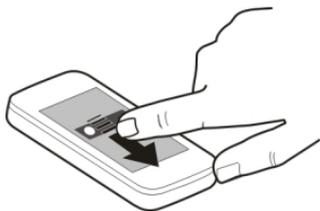

Example: To scroll up or down on a web page, drag the page with your finger.

Swipe

To swipe, slide your finger quickly left or right on the screen.

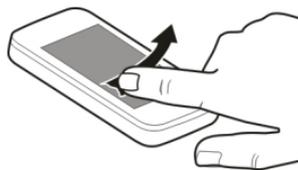

Flick

To flick, place your finger on the screen, slide it quickly across the screen, then quickly lift your finger. The content of the screen will continue scrolling with the speed and direction it had at the moment of release. To select an item from a scrolling list and to stop the movement, tap the item. In your device, flicking is available in Music player.



Scroll

To scroll up or down in lists that have a scroll bar, drag the slider of the scroll bar.

In some list views, you can place your finger on a list item and drag up or down.

Tip: To view a brief description of an icon, place your finger on the icon. Descriptions are not available for all icons.

Touch screen backlight

To turn the screen backlight on, unlock the screen and keys, if necessary, and press the menu key.

Write text

You can enter text in different modes. The full keyboard works as a traditional keyboard, and the on-screen alphanumeric keypad mode allow you to tap characters. The

handwriting recognition modes allow you to write characters directly on the screen.


To activate text input mode, tap any text input field.

In the text input view, to switch between the available text input modes, tap  and select the desired input mode.

The input methods and languages supported by the handwriting recognition vary by region.


Keyboard input

Keyboard

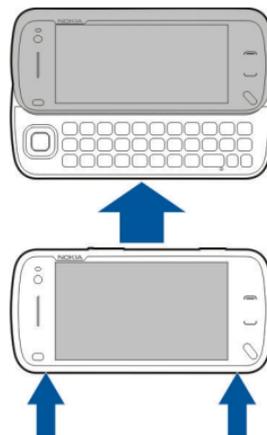

Your device has a full keyboard. To open the keyboard, push the touch screen up. In all applications, the screen rotates

automatically from portrait to landscape when you open the keyboard.

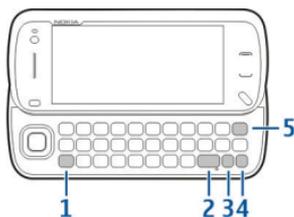

- 1 Shift key.** To change between uppercase and lowercase modes, press the shift key twice. To enter a single uppercase letter in lowercase mode, or a single lowercase letter in uppercase mode, press the shift key once, and then the desired alphabet key.
- 2 Space key**
- 3 Sym key.** To insert special characters not shown on the keyboard, press the sym key once, and select the desired character from the table.
- 4 Function key.** To insert special characters printed at the top of keys, press the function key once, and then press the desired key. To enter several special characters in a row, press the function key twice quickly. To return to normal mode, press the function key once.
- 5 Backspace key.** To erase a character, press the backspace key. To erase several characters, press and hold the backspace key.

Insert letters not shown on the keyboard

It is possible to insert variations of letters, for example, letters with accents. To insert á, press and hold the sym key, and simultaneously press the A key repeatedly, until the desired character is displayed. The order and availability of letters depends on the selected writing language.

Touch input Handwriting

The input methods and languages supported by the handwriting recognition vary by region and may not be available for all languages.

To activate handwriting mode, select  > **Handwriting**.

Write legible, upright characters on the text input area, and leave a space between each character.

To teach the device your handwriting style, select  > **Handwriting training**.

To enter letters and numbers (default mode), write words as you would normally. To select number mode, select . To enter non-Latin characters, select the corresponding icon, if available.



To enter special characters, write them as you would normally, or select ***#** and the desired character.

To delete characters or move the cursor back, swipe backwards (see Figure 1).

To insert a space, swipe forwards (see Figure 2).



Touch input settings

Select **Menu > Settings and Phone > Touch input**.

To configure text input settings for the touch screen, select from the following:

Handwriting training — Open the handwriting training application. Train the device to recognise your handwriting better. This option is not available in all languages.

Writing language — Define which language-specific characters in your handwriting are recognised and how your on-screen keyboard is laid out.

Writing speed — Adjust the speed at which handwriting is recognised.

Guiding line — Show or hide the guiding line in the writing area. The guiding line helps you write in a straight line, and it also helps the device recognise your writing. This option may not be available in all languages.

Pen trail width — Change the thickness of the text.

Writing colour — Change the colour of the text.

Virtual keypad

With the virtual keypad (**Alphanumeric keypad**), you can enter characters like you would with a traditional physical keypad with numbers on the keys.



- 1 Close - Closes the virtual keypad (**Alphanumeric keypad**).
- 2 Input menu - Opens the touch input menu, which includes commands such as **Activate predictive text** and **Writing language**.
- 3 Text input indicator - Opens a pop-up window, in which you can activate or deactivate predictive text input modes, change the character case, and switch between letter and number modes.
- 4 Input mode - Opens a pop-up window, in which you can select the input mode. When you tap an item, the current input method view closes, and the selected one opens. The availability of input modes may vary depending on

whether the automatic input mode (sensor settings) is activated or not.

- 5 Arrow keys - Scroll left or right.
- 6 Backspace
- 7 Numbers
- 8 Star - Opens a special characters table.
- 9 Shift - Changes the character case, activates or deactivates predictive text input modes, and switches between letter and number modes.

Lock the keys and touch screen

To lock or unlock the touch screen and the keys, slide the lock switch on the side of the device.

When the touch screen and keys are locked, the touch screen is switched off and the keys are inactive.

To change settings for automatic screen and key locking, select **Menu > Settings and Phone > Phone mgmt. > Auto. keyguard**.

Nokia Switch Transfer content

You can use the Switch application to copy content such as phone numbers, addresses, calendar items, and images from your previous Nokia device to your device.

The type of content that can be transferred depends on the model of the device from which you want to transfer content.

If that device supports synchronisation, you can also synchronise data between the devices. Your device notifies you if the other device is not compatible.

If the other device cannot be switched on without a SIM card, you can insert your SIM card in it. When your device is switched on without a SIM card, the Offline profile is automatically activated, and transfer can be done.

Transfer content for the first time

- 1 To retrieve data from the other device for the first time, on your device, select **Menu > Settings > Connectivity > Data transfer > Phone switch**.
- 2 Select the connection type you want to use to transfer the data. Both devices must support the selected connection type.
- 3 If you select Bluetooth connectivity as the connection type, connect the two devices. To have your device search for devices with Bluetooth connectivity, select **Continue**. Select the device from which you want to transfer content. You are asked to enter a code on your device. Enter a code (1-16 digits), and select **OK**. Enter the same code on the other device, and select **OK**. The devices are now paired.
Some earlier Nokia devices may not have the Switch application. In this case, the Switch application is sent to the other device as a message. To install the Switch application on the other device, open the message, and follow the instructions on the display.
- 4 On your device, select the content you want to transfer from the other device.

When the transfer has started, you can cancel it and continue later.

Content is transferred from the memory of the other device to the corresponding location in your device. The transfer time depends on the amount of data to be transferred.

Synchronise, retrieve, or send content

Select **Menu > Settings > Connectivity > Data transfer > Phone switch**.

After the first transfer, select from the following to start a new transfer, depending on the model:



to synchronise content between your device and the other device, if the other device supports synchronisation. The synchronisation is two-way. If an item is deleted in one device, it is deleted in both. You cannot restore deleted items with synchronisation.



to retrieve content from the other device to your device. With retrieval, content is transferred from the other device to your device. You may be asked to keep or delete the original content in the other device, depending on the device model.



to send content from your device to your other device

If you cannot send an item, depending on the type of the other device, you can add the item to the Nokia folder, to **C:\Nokia** or **E:\Nokia** in your device. When you select the folder to transfer, the items are synchronised in the corresponding folder in the other device, and vice versa.

Use shortcuts to repeat a transfer

After a data transfer, you can save a shortcut with the transfer settings to the main view to repeat the same transfer later.

To edit the shortcut, select **Options > Shortcut settings**. For example, you can create or change the name of the shortcut.

A transfer log is shown after every transfer. To view the log of the last transfer, select a shortcut in the main view and **Options > View log**.

Handle transfer conflicts

If an item to be transferred has been edited in both devices, the device attempts to merge the changes automatically. If this is not possible, there is a transfer conflict. Select **Check one by one**, **Priority to this phone**, or **Priority to other phone** to solve the conflict.

Profiles

Select **Menu > Settings and Profiles**.

You can use profiles to set and customise the ringing tones, message alert tones, and other tones for different events, environments, or caller groups. The name of the selected profile is displayed at the top of the home screen.

To change a profile, scroll to the profile, and select **Options > Activate**.

To personalise a profile, scroll to the profile, and select **Options > Personalise**. Select the setting you want to change.

To set the profile to be active until a certain time within the next 24 hours, scroll to the profile, select **Options > Timed**, and set the time. When the time expires, the profile changes back to the previously active non-timed profile. When the profile is timed, ⌚ is displayed in the home screen. The Offline profile cannot be timed.

To create a new profile, select **Options > Create new**.

Your device

Home screen

About the home screen

In the home screen, you can quickly access your most frequently used applications, control applications, such as the music player, view your favourite contacts, and view at a glance if you have missed calls or new messages.

Interactive home screen elements

To open the clock application, tap the clock (1).

To open calendar or change profiles in the home screen, tap the date or the profile name (2).

To view or change connectivity settings () to see the available wireless LANs if WLAN scanning is enabled, or to view the missed events, tap the top right corner (3).

To make a phone call, select  (4).

To open the main menu, press the menu key (5).

To hide and show content, swipe the home screen with your finger.

Add items to the home screen

To add an item to the home screen, select **Options** > **Edit content** > **Options** > **Add content**, and select the item from the list.

Using widgets may involve the transmission of large amounts of data (network service).

To move an item, select **Options** > **Edit content**, select the desired item, and drag and drop it to a new location.

Remove an item from the home screen

Select **Options** > **Edit content** and the item to be removed.

Select **Options** > **Remove** > **Done**.

E-mail notifications

About e-mail notifications

E-mail notifications in the home screen help you keep track of e-mail messages in your mailbox. You can set the device to show a preview of e-mail headers or just the number of unread e-mail.

Work with e-mail in the home screen

Set up your e-mail account in the home screen

Select **Set up e-mail**, and follow the instructions. When the set-up is complete, the e-mail icon appears in the home screen. To open your e-mail mailbox, select the icon.

To define how you want to be notified of new e-mail messages in the home screen, select **Menu > Settings and Personal > Home screen > E-mail widget**, and from the following:

Mailbox — Select from which mailbox you want to see notifications.

Show message details — To see only the number of unread messages in the home screen, select **Off**. To see also the sender and subject of the message, select **On**.

The available options may vary.

Music player in the home screen

You can use the music player from the home screen. To activate the music player controls, select **Options > Edit content > Options > Add content > Music player**.

Go to Music appears in the home screen.

To open the music player, tap **Go to Music**, and select the items you want to listen to.

The music player control keys, and, if available, the title of the song, artist, and album art are displayed when a song is played.

Favourite contacts in the home screen

You can add several contacts directly to the home screen, and quickly make calls or send messages to the contacts, view the contacts' web feeds, or access the contact information and settings.

- 1 To add your favourite contacts to the home screen, select **Options > Edit content > Options > Add content > Favourite contacts**.
A row of  icons is displayed in the home screen.
- 2 Select any of the icons () and a contact from Contacts.

Add your favourite Share online feed to your home screen

By adding the Share online widget to your home screen, you can quickly access your favourite Share online feed.

- 1 In the home screen, select **Options > Edit content > Options > Add content > Share online**.
- 2 Select the feed you want to add. You may need to register to a service of your service provider before you are able to add a feed.

The widget displays thumbnail images from a selected feed of any of your Share online accounts. The latest images are displayed first.

Display indicators

General indicators

	The touch screen and keys are locked.
	The device alerts silently for incoming calls or messages.
	You have set a clock alarm.
	You are using a timed profile.

Call indicators

	Someone has tried to call you.
2	You are using your second phone line (network service).
	You have set your device to divert incoming calls to another number (network service). If you have two phone lines, a number indicates the active line.
	Your device is ready for an internet call.
D	You have an ongoing data call (network service).

Messaging indicators

	You have unread messages. If the indicator is blinking, the SIM card memory for messages may be full.
--	---

	You have received new mail.
	You have messages waiting to be sent in the Outbox folder.

Network indicators

	Your device is connected to a GSM network (network service).
3G	Your device is connected to a 3G network (network service).
	You have a GPRS packet data connection (network service).  indicates that the connection is on hold and  that a connection is being established.
	You have an EGPRS packet data connection (network service).  indicates that the connection is on hold and  that a connection is being established.
	You have a 3G packet data connection (network service).  indicates that the connection is suspended and  that a connection is being established.
	You have a high-speed downlink packet access (HSDPA) connection (network service).  indicates that the connection is suspended and  that a connection is being established.

	A WLAN connection is available (network service).  indicates that the connection is encrypted and  that the connection is not encrypted.
---	--

Connectivity indicators

	Bluetooth is active.  indicates that your device is sending data. If the indicator is blinking, your device is trying to connect to another device.
	You have connected a USB cable to your device.
	GPS is active.
	The device is synchronising.
	The FM transmitter is active, but it is not transmitting.  indicates that the FM transmitter is transmitting.
	You have connected a compatible headset to the device.
	You have connected a compatible TV-out cable to the device.
	You have connected a compatible text phone to the device.

Shortcuts

To switch between open applications, press and hold the menu key.

Leaving applications running in the background increases the demand on battery power and reduces the battery life.

To open the browser application, in the dialler, tap and hold **0**.

To change the profile, press the power key, and select a profile.

To call your voice mailbox (network service), in the dialler, tap and hold **1**.

To open a list of last dialled numbers, in the home screen, press the call key.

To use voice commands, in the home screen, press and hold the call key.

When writing, to change the writing language, press  and the sym key.

Search

About Search

Select Menu > Applications > Search.

Search (network service) enables you to use various internet-based search services to find, for example, websites and images. The content and availability of the services may vary.

Start a search

Select **Menu** > **Applications** > **Search**.

To search the contents of your mobile device, enter search terms in the search field, or browse the content categories. While you enter the search terms, the results are organised into categories. The most recently accessed results appear at the top of the result list, if they match your search terms.

To search for web pages on the internet, select **Search the Internet** and a search provider, and enter your search terms in the search field. The search provider you selected is set as your default internet search provider.

If a default search provider is already set, select it to start a search, or select **Search more** to use another search provider.

To change the default search provider, select **Options** > **Settings** > **Search services**.

To change the country or region setting to find more search providers, select **Options** > **Settings** > **Country or region**.

Search settings

Select **Menu** > **Applications** > **Search**.

To change the Search application settings, select **Options** > **Settings** and from the following:

Country or region — Select the country or region you want to search from.

Connection — Select the access point, and allow or deny network connections.

Search services — Select whether service providers and search categories are shown.

General — Enable or disable tooltips, and clear the search history.

Volume and loudspeaker control

To adjust the volume level when you have an active call or are listening to a sound clip, use the volume key.



The built-in loudspeaker allows you to speak and listen from a short distance without having to hold the device to your ear.

To use the loudspeaker during a call, select **Loudspeaker**.

To turn off the loudspeaker, select **Activate handset**.

Offline profile

The offline profile lets you use the device without connecting to the wireless cellular network. When the offline profile is active, you can use your device without a SIM card.

Activate the offline profile

Press the power key briefly, and select **Offline**.

When you activate the offline profile, the connection to the cellular network is closed. All radio frequency signals to and from the device to the cellular network are prevented. If you try to send messages using the cellular network, they are placed in the Outbox folder to be sent later.

Important: In the Offline profile you cannot make or receive any calls, or use other features that require cellular network coverage. Calls may still be possible to the official emergency number programmed into your device. To make calls, you must first activate the phone function by changing profiles. If the device has been locked, enter the lock code.

When you have activated the offline profile, you can still use a wireless LAN, for example, to read your e-mail or browse on the internet. You can also use Bluetooth connectivity while in the offline profile. Remember to comply with any applicable safety requirements when establishing and using wireless LAN or Bluetooth connections.

Fast downloading

High-speed downlink packet access (HSDPA, also called 3.5G, indicated by **3.5G**) is a network service in UMTS networks and provides high-speed data downloads. When HSDPA support in the device is activated and the device is connected to a UMTS network that supports HSDPA, downloading data such as messages, e-mail, and browser pages through the cellular network may be faster. An active HSDPA connection is indicated by .

You can activate or deactivate support for HSDPA in packet data settings.

For availability and subscription to data connection services, contact your service provider.

HSDPA only affects the download speed; sending data to the network, such as messages and e-mail, is not affected.

Ovi (network service)

Visit Ovi by Nokia

 With Ovi by Nokia, you can find new places and services, and stay in touch with your friends. You can do, for example, the following:

- Create a mail account
- Plan trips and view locations on a map
- Download games, applications, videos, and ringing tones to your device
- Purchase music

Some downloadable items are free of charge, others you may need to pay for.

The available services may vary by country or region, and not all languages are supported.

To access Nokia's Ovi services, go to www.ovi.com, and register your own Nokia account.

For more information, go to www.ovi.com/support.

Ovi store

About Ovi Store

 In Ovi Store, you can download mobile games, applications, videos, images, themes, and ringing tones to your device. Some items are free of charge; others you need to pay for with your credit card or in your phone bill. The availability of payment methods depends on your country of residence and your network service provider. Ovi Store offers content that is compatible with your mobile device and relevant to your tastes and location.

Create a Nokia account

When you create a Nokia Account, you can access Ovi and all its services with a single user name and password.

- 1 Select **Create a Nokia account**.
- 2 Enter a user name.
- 3 Select your country from the list.
- 4 Enter your date of birth.
- 5 Enter your e-mail address or phone number.

- 6 Enter a password, and confirm it.
- 7 Enter the characters displayed in the box on the right.
- 8 Select **Submit**.

Sign in to Ovi Store

Sign in

Select **Sign in**, and enter your Nokia account user name and password.

Retrieve forgotten user name or password

Select **Options > Retrieve**.

Search Ovi Store

Items in Ovi Store are organised into categories. You can browse the categories, or search with a keyword.

You can also select the type of items you want to see: free or most popular items, or items recommended for you.

View details of an item

Select an item to see detailed information and other users' reviews. If you have signed in to Ovi Store, you can also write your own reviews.

Read more reviews from others

Select **More reviews**.

Write a review

Select the link to write a review, enter your review, and assign a rating to from 1 to 3 stars.

View information about the publisher

Select the publisher profile link.

Find related items

Select **More related**.

Purchase content

- 1 Select the item you want to purchase.
- 2 Select **Buy**.
- 3 Enter your Nokia account user name and password. If you do not have an account, select **Create a Nokia account**, and enter the required information.
- 4 Select to pay using your credit card or through your phone bill. If you already have your credit card information stored in your Nokia account, and you want to use another credit card, select **Edit payment settings**, and enter the required information. To save your credit card information to your Nokia account, select the Save this card to my Nokia account check box.
- 5 Select the e-mail address to which you want to receive a receipt of your purchase.
- 6 Select **Purchase**.

Share favourites with friends

Ovi Store enables you to send a text message containing a link to items in Ovi Store.

- 1 Select the item you want to share.
- 2 Select **Send to friend**.
- 3 Enter a phone number in the international format.
- 4 Select **Send**.

Report inappropriate content

Contact Nokia if you find inappropriate content in Ovi Store.

- 1 Select the item with inappropriate content.
- 2 Select **Report issue**.
- 3 Select the reason from the list, and enter additional details, if needed.
- 4 Select **Submit**.

Edit the Ovi Store settings

In the Ovi Store settings, you can change your account information, grant your friends permission to see your activities in Ovi Store, and change your password and security question.

To change the Ovi Store settings, select **Options > Settings** and from the following:

Ovi sharing — Allow your Ovi contacts to see your activities in Ovi Store.

Account information — Change the details of your Nokia account.

Change password — Change your Nokia account password.
Change security question — Change the security question with which you can retrieve your user name and password.
Installation preferences — Select how you want to install content in your device.

Make calls

Touch screen during calls

Your device has a proximity sensor. To extend battery life and prevent accidental selections, the touch screen is disabled automatically during calls, when you place the device next to your ear.



Do not cover the proximity sensor, for example, with protective film or tape.

Make a voice call

- 1 In the home screen, select  to open the dialler, and enter the phone number, including the area code. To remove a number, select C.
For international calls, select * twice for the + character (which replaces the international access code), and enter the country code, area code (omit the leading zero if necessary), and phone number.
- 2 To make the call, press the call key.
- 3 To end the call (or to cancel the call attempt), press the end key.
Pressing the end key always ends a call, even if another application is active.

Call a contact

- 1 Select **Menu** > **Contacts**.
- 2 Go to the desired name. Or, enter the first letters or characters of the name in the search field, and go to the name.
- 3 To call the contact, press the call key. If you have saved several numbers for a contact, select the desired number from the list, and press the call key.

End a call

Press the end key.

During a call

To mute or unmute the microphone, select  or .

To put the call on hold or unhold it, select  or .

To activate the loudspeaker, select . If you have attached a compatible headset with Bluetooth connectivity, to route the sound to the headset, select **Options** > **Activate BT handsfree**.

To switch back to the handset, select .

To end the call, select .

To switch between the active and held calls, select .

Tip: When you have only one active voice call, to put the call on hold, press the call key. To unhold the call, press the call key again.

- 1 To send DTMF tone strings (for example, a password), select **Options** > **Send DTMF**.
- 2 Enter the DTMF string, or search for it in the contacts list.
- 3 To enter a wait character (w) or a pause character (p), press * repeatedly.
- 4 To send the tone, select **OK**. You can add DTMF tones to the phone number or DTMF field in contact details.

To end an active call and replace it by answering the waiting call, select **Options** > **Replace**.

To end all your calls, select **Options** > **End all calls**.

Many of the options that you can use during a voice call are network services.

Voice and video mailboxes

To call your voice or video mailbox (network services, video mailbox available only in UMTS networks), in the home screen, select  to open the dialler, tap and hold **1**, and select **Voice mailbox** or **Video mailbox**.

- 1 To change the phone number of your voice or video mailbox, select **Menu** > **Settings and Calling** > **Call mailbox**, a mailbox, and **Options** > **Change number**.

- 2 Enter the number (obtained from your network service provider), and select **OK**.

Answer or reject a call

To answer a call, press the call key.

To answer the call when the touch screen is locked, swipe **Swipe to answer** from left to right.

To unlock the touch screen without answering a call, swipe **Swipe to unlock** from right to left, and then answer or reject the call, or send a reject call text message. The ringing tone is muted automatically.

If you do not want to answer a call, to reject the call, press the end key. If the call divert feature (network service) is activated, rejecting an incoming call also diverts the call.

To mute the ringing tone of an incoming call, select **Silence**.

To send a reject call text message without actually rejecting the call, informing the caller that you cannot answer the call, select **Silence** and **Send msg.**, edit the message text, and press the call key.

To activate the reject call text message feature, and to write a standard message, select **Menu > Settings and Calling > Call > Reject call with message**, and **Message text**.

Make a conference call

Your device supports conference calls between a maximum of six participants, including yourself.

- 1 Make a call to the first participant.
- 2 To make a call to another participant, select **Options > New call**. The first call is put on hold.
- 3 When the new call is answered, to join the first participant in the conference call, select .
To add a new person to the call, make a call to another participant, and add the new call to the conference call. To have a private conversation with one of the participants, select .
Go to the participant, and select . The conference call is put on hold on your device. The other participants can still continue the conference call.
To return to the conference call, select .
- 4 To drop a participant, select , go to the participant, and select .
- 4 To end the active conference call, press the end key.

Speed dial a phone number

To activate the feature, select **Menu > Settings and Calling > Call > Speed dialling**.

- 1 To assign a phone number to one of the number keys, select **Menu > Settings and Calling > Speed dialling**.
- 2 Scroll to the key to which you want to assign the phone number, and select **Options > Assign**.
1 and 2 are reserved for the voice and video mailboxes.

To call in the home screen, select  to open the dialler, select the assigned key number, and press the call key.

To call in the home screen when speed dialling is active, select  to open the dialler, and tap and hold the assigned key number.

Call waiting

You can answer a call when you have another call in progress.

To activate call waiting (network service), select **Menu** > **Settings and Calling** > **Call** > **Call waiting**.

- 1 To answer the waiting call, press the call key. The first call is put on hold.
- 2 To switch between the two calls, select **Options** > **Swap**.
- 3 To connect a call on hold with an active call, and to disconnect yourself from the calls, select **Options** > **Transfer**.
- 4 To end the active call, press the end key.
- 5 To end both calls, select **Options** > **End all calls**.

Voice dialling

Your device automatically creates a voice tag for contacts.

Listen to a voice tag for a contact

- 1 Select a contact and **Options** > **Voice tag details**.

- 2 Go to a contact detail, and select **Options** > **Play voice tag**.

Make a call with a voice tag

Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

When you use voice dialling, the loudspeaker is in use. Hold the device at a short distance away when you say the voice tag.

- 1 To start voice dialling, in the home screen, press and hold the call key. If a compatible headset with the headset key is attached, press and hold the headset key to start voice dialling.
- 2 A short tone sounds, and **Speak now** is displayed. Say clearly the name that is saved for the contact.
- 3 The device plays a synthesised voice tag for the recognised contact in the selected device language, and displays the name and number. To cancel the voice dialling, select **Quit**.

If several numbers are saved for a name, you can say also the name and the number type, such as mobile or telephone.

Make a video call

When you make a video call (network service), you can see a real-time, two-way video between you and the recipient of the call. The live video image, or video image captured by the camera in your device is shown to the video call recipient.

To be able to make a video call, you must have a USIM card and be in the coverage of a UMTS network. For availability, pricing and subscription to video call services, contact your network service provider.

A video call can only be made between two parties. The video call can be made to a compatible mobile device or an ISDN client. Video calls cannot be made while another voice, video, or data call is active.

Icons



You are not receiving video (the recipient is not sending video or the network is not transmitting it).



You have denied video sending from your device. To send a still image instead, select **Menu > Settings and Calling > Call > Image in video call**.

Even if you denied video sending during a video call, the call is still charged as a video call. Check the pricing with your service provider.

1 In the home screen, select  to open the dialler, and enter the phone number.

2 Select **Options > Call > Video call**.

The secondary camera on the front is used by default for video calls. Starting a video call may take a while. If the call is not successful (for example, video calls are not supported by the network, or the receiving device is not compatible), you are asked if you want to try a normal call or send a message instead.

The video call is active when you see two video images, and hear the sound through the loudspeaker. The call

recipient may deny video sending (indicated by ) and you only hear the voice of the caller and may see a still image or a grey screen.

3 To end the video call, press the end key.

During a video call

To change between showing video or hearing the voice of the caller only, select  or .

To mute or unmute the microphone, select  or .

To activate the loudspeaker, select . If you have attached a compatible headset with Bluetooth connectivity, to route the sound to the headset, select **Options > Activate BT handsfree**.

To switch back to the handset, select .

To use the camera in the back of your device to send video, select **Options > Use secondary camera**.

To switch back to the camera in the front of your device, select **Options > Use main camera**.

To take a snapshot of the video you are sending, select **Options > Send snapshot**. Video sending is paused and the snapshot is shown to the recipient. The snapshot is not saved.

To zoom your image in or out, select **Options > Zoom**.

To change the video quality, select **Options > Adjust > Video preference > Normal quality, Clearer detail or Smoother motion**.

Answer or reject a video call

When a video call arrives,  is displayed.

- 1 To answer the video call, press the call key.
- 2 To start sending live video image, select **Yes**.

If you do not activate the video call, you only hear the voice of the caller. A grey screen replaces the video image. To replace the grey screen with a still image captured by the camera in your device, select **Menu > Settings and Calling > Call > Image in video call**.

Internet calls

About internet calls

With the internet call network service, you can make and receive calls over the internet. Internet call services may support calls between computers, between mobile phones, and between a VoIP device and a traditional telephone. For availability and costs, contact your internet call service provider.

To make or receive an internet call, you must be in the service area of a wireless LAN (WLAN) or have a packet data (GPRS) connection in a UMTS network, and be connected to an internet call service.

Your device may offer you an installation widget, to install internet call services.

Log into an internet call service

When an internet call service has been installed, a tab for the service is displayed in the contacts list.

To log into a service, select **Menu > Contacts**, the service, and **Options > Log in**.

To add contacts as service contacts to the friends list manually or from the contacts list, select **Options > New contact**.

Make internet calls

To call a contact when you are logged into a service, tap the contact in the friends list, and select .

To make an internet call in the home screen, select , enter the number, and select **Options > Call > Internet call**.

To make an internet call to an internet call address, in the home screen, select  and **Options > Open keyboard**. Enter the address, and select .

Internet communication settings

Select **Menu > Settings and Connectivity > Admin. settings > Net settings**.

To view and edit the settings for a service, select the service name.

To remove a service from your service list, select **Options > Delete service**.

Internet call service settings

Select **Menu > Contacts**, open a service tab, and select **Options > Settings**.

To set an internet call service as the default service, select **Default service**. When you press the call key to call a number, your device makes an internet call using the default service if the service is connected. You can set only one service at a time as the default service.

To edit the service destination, select **Service connectivity**.

Video sharing

Use video sharing (network service) to send live video or a video clip from your mobile device to another compatible mobile device during a voice call.

The loudspeaker is active when you activate video sharing. If you do not want to use the loudspeaker for the voice call while you share video, you can also use a compatible headset.

Warning:

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Video sharing requirements

Video sharing requires a UMTS connection. Your ability to use video sharing depends on the availability of the UMTS network. For more information on the service, UMTS network availability, and fees associated with using this service, contact your service provider.

To use video sharing, ensure the following:

- Your device is set up for person-to-person connections.
- You have an active UMTS connection and are within UMTS network coverage. If you move outside the UMTS network during a video sharing session, the sharing stops while your voice call continues.
- Both the sender and recipient are registered to the UMTS network. If you invite someone to a sharing session and the recipient's device is not within UMTS network coverage or does not have video sharing installed or person-to-person connections set up, the recipient does not receive invitations. You receive an error message that indicates that the recipient cannot accept the invitation.

Settings

To set up video sharing, you need person-to-person and UMTS connection settings.

Person-to-person connection settings

A person-to-person connection is also known as a Session Initiation Protocol (SIP) connection. The SIP profile settings must be configured in your device before you can use video sharing. Ask your service provider for the SIP profile settings, and save them to your device. Your service provider may send you the settings or give you a list of the needed parameters.

To add a SIP address to a contact:

- 1 Select **Menu** > **Contacts**.
- 2 Open the contact or create a new contact.
- 3 Select **Options** > **Edit**.
- 4 Select **Options** > **Add detail** > **Share video**.
- 5 Enter the SIP address in the format `username@domainname` (you can use an IP address instead of a domain name).

If you do not know the SIP address for the contact, you can use the phone number of the recipient, including the country code, to share video (if supported by the network service provider).

UMTS connection settings

To set up your UMTS connection:

- Contact your service provider to establish an agreement for you to use the UMTS network.
- Ensure that the UMTS access point connection settings for your device are configured properly. For more information about the settings, contact your service provider.

Share live video or video clips

During an active voice call, select **Options** > **Share video**.

- 1 To share live video during the call, select **Live video**.
To share a video clip, select **Video clip**. A list of video clips saved in the device memory, the mass memory, or a memory card (if available) opens. Select the clip you want to share.
You may need to convert the video clip into a suitable format to be able to share it. If your device notifies you that the video clip must be converted, select **OK**. Your device must have a video editor for the conversion to work.
- 2 If the recipient has several SIP addresses or phone numbers including the country code saved in **Contacts**, select the desired address or number. If the SIP address or phone number of the recipient is not available, enter the address or number of the recipient including the country code, and select **OK** to send the invitation. Your device sends the invitation to the SIP address.
Sharing begins automatically when the recipient accepts the invitation.

Options during video sharing



to mute or unmute the microphone
to switch the loudspeaker on and off
to pause and resume video sharing
to switch to full screen mode (available for receiver only)

- 3 To end the sharing session, select **Stop**. To end the voice call, press the end key. When you end the call, video sharing also ends.

To save the live video you shared, select **Yes** when prompted. The device notifies you of the location of the saved video.

If you access other applications while you are sharing a video clip, the sharing is paused. To return to the video sharing view and to continue sharing, in the home screen, select **Options > Continue**.

Accept an invitation

When someone sends you a video sharing invitation, the invitation message displays the sender's name or SIP address.

If someone sends you a sharing invitation and you are not within 3G network coverage, you will not know that you received an invitation.

When you receive an invitation, select from the following:
Yes — Accept the invitation, and activate the sharing session.

No — Reject the invitation. The sender receives a message that you rejected the invitation. You can also press the end key to reject the invitation and end the voice call.

To end the sharing session, select **Stop**. To end the voice call, press the end key. When you end the call, video sharing also ends.

Log

The log stores information about the communication history of the device. The device registers missed and received calls only if the network supports these functions, the device is switched on, and within the network service area.

Recent calls

Select **Menu > Applications > Log and Recent calls**.

To view missed, received, and dialled calls, select **Missed calls**, **Received calls** or **Dialled numbers**.

Tip: To open the dialled numbers list in the home screen, press the call key.

Tip: To open the dialled numbers list in the home screen, press the call key.

On the toolbar, select from the following:

 **Call** — Call the desired contact.

 **Create message** — Send a message to the desired contact.

 **Open Contacts** — Open the contacts list.

Select **Options** and from the following:

Save to Contacts — Save the highlighted phone number from a recent calls list to your contacts.

Clear list — Clear the selected recent calls list.

Delete — Clear a highlighted event in the selected list.

Settings — Select **Log duration** and the length of time that the communication information is saved in the log. If you select **No log**, no information is saved in the log.

Call duration

Select **Menu** > **Applications** > **Log**.

To view the approximate duration of your last call, dialled and received calls, select **Call duration**.

Note: The actual invoice for calls and services from your service provider may vary, depending on network features, rounding off for billing, taxes, and so forth.

Packet data

Select **Menu** > **Applications** > **Log**.

You may be charged for your packet data connections by the amount of data sent and received.

Check the amount of data sent or received during packet data connections

Select **Packet data** > **All sent data** or **All received data**.

Clear both sent and received information

Select **Packet data** > **Options** > **Clear counters**. You need the lock code to clear the information.

Monitor all communication events

Select **Menu** > **Applications** > **Log**.

To open the general log where you can monitor all voice calls, text messages, or data and wireless LAN connections registered by the device, select the general log tab   .

Subevents, such as a text message sent in more than one part and packet data connections, are logged as one communication event. Connections to your mailbox, multimedia messaging centre, or web pages are shown as packet data connections.

To view how much data was transferred and how long a certain packet data connection lasted, scroll to an incoming or outgoing event indicated by **GPRS**, and select **Options** > **View**.

To copy a phone number from the log to the clipboard, and paste it into a text message, for example, select **Options** > **Use number** > **Copy**.

To filter the log, select **Options** > **Filter** and a filter.

To set the log duration, select **Options** > **Settings** > **Log duration**. If you select **No log**, all the log contents, recent calls register, and messaging delivery reports are permanently deleted.

Contacts (phonebook)

To open Contacts, select **Menu > Contacts**.

You can save and update contact information, such as phone numbers, home addresses, or e-mail addresses of your contacts. You can add a personal ringing tone or a thumbnail image to a contact. You can also create contact groups, which allow you to send text messages or e-mail to many recipients at the same time.

Save and edit names and numbers

- 1 To add a new contact to the contacts list, tap .
- 2 Tap a field to enter the information in the field. To close the text input, select . Fill in the fields that you want, and select **Done**.

To edit contacts, select a contact and **Options > Edit**.

Contacts toolbar

On the contacts list toolbar, select from the following:

-  **Call** — Call the desired contact.
-  **Create message** — Send a message to the desired contact.
-  **New contact** — Create a new contact.

Manage names and numbers

Select **Menu > Contacts**.

Delete contacts

Select a contact and **Options > Delete**.

To delete several contacts at the same time, select **Options > Mark/Unmark** to mark the desired contacts, and to delete, select **Options > Delete**.

Copy contacts

Select the contact, **Options > Copy**, and the desired location.

Send a contact to another device

Tap and hold a contact, and select **Send business card**.

Add contacts to favourites

Tap and hold a contact, and select **Add to favourites**.

Listen to the voice tag assigned to a contact

Select the contact and **Options > Voice tag details > Options > Play voice tag**.

Before using voice tags, note the following:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags and use them in a quiet environment.
- Very short names are not accepted. Use long names, and avoid similar names for different numbers.

Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

Default numbers and addresses

You can assign default numbers or addresses to a contact. If a contact has several numbers or addresses, you can easily call or send a message to a certain number or address. The default number is also used in voice dialling.

- 1 In the contacts list, select a contact.
- 2 Select **Options** > **Defaults**.
- 3 Select a default to which you want to add a number or an address, and select **Assign**.
- 4 Select a number or an address you want to set as a default.
- 5 To exit the Defaults view and save the changes, tap outside the view.

Contact cards

Select **Menu** > **Contacts** and a contact. All available communication methods for the selected contact are displayed in the contact cards view.

Select a contact from the list, the desired communication method, **Options**, and from the following:

Edit — Edit, add, or delete the contact card fields.

Defaults — Define the numbers and addresses to use by default when you communicate with the contact, if a contact has more than one number or address defined.

Voice tag details — View the voice tag details, or listen to the voice tag for the contact.

The available options and communication methods may vary.

Set contacts as favourites

Select **Menu** > **Contacts**.

Favourites are the contacts you have set as your favourite contacts. These contacts appear at the top of the contacts list.

To set a contact as a favourite, select a contact and **Options** > **Add to favourites**. Favourites are marked with a star icon.

To remove a contact from favourites, select a contact and **Options** > **Remove from favourites**. The removed contact is moved back to the standard contacts list.

Ringing tones, images, and call text for contacts

You can define a ringing tone for a contact or group, and an image and a call text for a contact. When the contact calls you, the device plays the selected ringing tone and shows the call text or image (if the caller's phone number is sent with the call and your device recognises it).

To define a ringing tone for a contact or a contact group, select the contact or contact group and **Options** > **Edit** > **Ringing tone**, and a ringing tone.

To add more fields to a contact details view, select the contact and **Options** > **Edit** > **Options** > **Add detail**.

To define a call text for a contact, select the contact and **Options > Edit > Options > Add detail > Call alert text**. Tap the text field to enter the call text, and select .

To add an image for a contact saved in the device memory, select the contact, **Options > Edit > Add image**, and an image from Photos.

To remove the ringing tone, select **Default tone** from the list of ringing tones.

To view, change or remove the image from a contact, select the contact, **Options > Image**, and the desired option.

Copy contacts

When you open the contacts list for the first time, the device asks if you want to copy names and numbers from the SIM card to your device.

To start copying, select **OK**.

If you do not want to copy the contacts from the SIM card to your device, select **Cancel**. The device asks if you want to view the SIM card contacts in the contacts directory. To view the contacts, select **OK**. The contacts list opens, and the names stored on your SIM card are indicated with .

SIM services

For availability and information on using SIM card services, contact your SIM card vendor. This may be the network service provider or other vendor.

SIM contacts

To set the names and numbers stored on the SIM card to be shown on the contacts list, select **Options > Settings > Contacts to display > SIM memory**. You can add and edit SIM contacts, or call them.

The numbers you save in the contacts list may not be automatically saved to your SIM card. To save numbers to the SIM card, select a contact and **Options > Copy > SIM memory**.

To select whether the new contacts you enter are saved to your device or your SIM card, select **Options > Settings > Default saving memory > Phone memory or SIM memory**.

Fixed dialling

Select **Menu > Contacts and Options > SIM numbers > Fixed dial contacts**.

With the fixed dialling service, you can restrict calls from your device to certain phone numbers. Not all SIM cards support the fixed dialling service. For more information, contact your service provider.

When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialling), calls may be possible to the official emergency number programmed into your device. Call barring and call diverting cannot be active at the same time.

You need your PIN2 code to activate and deactivate fixed dialling or edit your fixed dialling contacts. Contact your service provider for your PIN2 code.

Select **Options** and from the following:

Activate fixed dialling — Activate the fixed dialling.

Deactivate fixed dialling — Deactivate the fixed dialling.

New SIM contact — Enter the contact name and phone number to which calls are allowed.

Add from Contacts — Copy a contact from the list of contacts to the fixed dialling list.

To send text messages to the SIM contacts while the fixed dialling service is active, you need to add the text message centre number to the fixed dialling list.

Contact groups

To open the group list, open the contacts list, and tap .

Create contact groups

- 1 To create a new group, in the group list, select **Options > New group**. Use the default name or enter a new name. Select **OK**.
- 2 To add members to the group, select the group and **Options > Add members**.

- 3 Mark each contact you want to add, and select **OK**.

Manage contact groups

To send a message to all group members, to set a ringing tone for a group, or to rename or delete a group, tap and hold the group, and select **Create message**, **Ringing tone**, **Rename**, or **Delete**.

To add a contact to a group, select the group and **Options > Add members**.

To check which other groups a contact belongs to, select the group, scroll to the contact, and select **Options > Belongs to groups**.

To remove a contact from a group, select the group, scroll to the contact, and select **Options > Remove from group**.

Ovi Contacts

About Ovi Contacts

 With Ovi Contacts, you can stay connected to your friends and family, follow what they are up to, and discover new friends in the Ovi community. You can also back up contacts from your device to Ovi.

Additionally, you can share your location with your friends.

To use Ovi Contacts, go to www.ovi.com.

Start using Ovi Contacts

Select **Contacts**, and open the Ovi tab.

The Ovi Contacts service is part of Ovi, and uses the same account information.

If you are new to Ovi and its services, to start using the Ovi Contacts application, you must register to Ovi by creating a Nokia account.

Create a Nokia account

- 1 Select **Ovi Chat**, and when prompted, connect to the internet.
- 2 Enter the required information.
- 3 In the **My profile** view, enter your profile information. Your first and last name are mandatory details.
- 4 Select **Done**.

If you have already registered to Ovi using your PC or mobile device, you can start using Ovi Contacts with the same account details.

Sign in to Ovi Contacts and activate the service

Select **Ovi Chat**, and enter your user name and password.

If you have not yet provided your profile information for Ovi Contacts, do so, and select **Done**. Your first and last name are mandatory details.

Connect to the service

Select **Menu** > **Contacts**, and open the Ovi tab.

Connect to Ovi Contacts

Select **Go online** and the connection method. Use a wireless LAN (WLAN) connection where available.

Cancel the connection

Select **Options** > **Cancel connecting**.

A packet data connection may generate additional data transmission charges. For pricing details, contact your network service provider.

Select **Go online** > **Options** and from the following:

Select — Select the item.

Go online — Connect to the service if you are offline.

My profile — Edit your profile information.

Recommend to friend — Invite a contact to join Ovi Contacts. The invitation is sent as a text message.

Settings — Modify the Ovi Contacts settings.

The available options may vary.

Create and edit your profile

Edit your profile information

Select **My profile**.

View the profiles of your Ovi Contacts friends

Select a friend and **Options** > **Profile**.

Your profile information is visible to your Ovi Contacts friends. Only the following profile details are displayed to other Ovi Contacts users, for example, during a search: first name and last name. To modify your privacy settings, access Ovi on your PC, and sign in to your Nokia account.

Change your profile image

Select the profile image, **Select existing image**, and the new image. You can also edit or remove the current profile image or capture a new one.

Change your availability

By default, your availability is set to **Available**. To change your availability, select the icon.

Tell your friends what you are doing at the moment

Select **What are you doing?**, and enter text in the field.

Show your friends what music you are currently listening to

Select **Now playing**. To do this, you must allow your now playing information to be shared in the presence settings.

Edit your contact information

Select a field, and enter text.

In the My profile view, select **Options** and from the following:

Edit — Cut, copy, or paste text.

Change — Change your status (when the status field is selected).

Activate — Start broadcasting your location or your now playing information to your friends (when either field is selected).

Undo changes — Undo the changes you made in the profile view.

Edit shared locations — Select the landmarks you want to broadcast to your friends (when the My location field is selected).

Stop sharing — Stop broadcasting your location to your friends (when the My location field is selected).

The available options may vary.

Find and add friends

Select **Options** > **Invite friend**.

Search for a friend

Enter the name of the friend in the Search friends field, and select the search icon. You cannot search for friends based on their mobile number or e-mail address.

Browse the search results

Select **Next results** or **Previous results**.

Start a new search

Select **New search**.

If the friends you searched for could not be found, they are not registered Ovi members, or they have chosen to be invisible in searches. When prompted, send a text message to your friends to invite them to join Ovi Contacts.

Send an invitation to join Ovi Contacts

Select **Select service**: and the service you know your friend uses. Enter your friend's user name, and select the send icon.

Select **Options** and from the following:

Select — Select an item.

Open — Open an item.

Invite as friend — Send an invitation to the contact.

Show profile — View the profile of the contact.

Renew invitation — Resend an invitation to join Ovi Contacts to a pending friend.

Search — Search for the contact whose name or other related keyword you entered in the Search friends field.

Edit text — Cut, copy, or paste text.

The available options may vary.

Chat with your friends

Start a chat with a friend

Select the friend.

Send a chat message

Enter the text in the message field, and select the send icon.

In the chat view, select **Options** and from the following:

Send — Send the message.

Send file — Send an image, video clip, audio file, or other file to your chat partner.

Send my location — Send your location details to your chat partner (if supported by both devices).

Add smiley — Insert a smiley.

Profile — View the details of a friend.

My profile — Select your presence status or profile image, personalise your message, or change your details.

Edit text — Copy or paste text.

End chat — End the active chat.

Exit — End all active chats, and close the application.

The available options may vary.

To receive location information from your friend, you must have the Maps application. To send and receive location information, both the Maps and Positioning applications are needed.

To receive any files, you or the recipient must accept the file. To cancel sending or receiving while the file is being transferred, select **Cancel**.

View the location of your friend

Select **Show on map**.

Return to the Ovi Contacts main view without ending the chat

Select **Back**.

Add, call, or copy phone numbers from a chat

Go to a phone number in a chat, and select **Options** and the appropriate option.

Ovi Sync

To sync your device with Ovi, you must have a Nokia account and activate the Ovi Contacts service on your device.

Sync your device with Ovi

- 1 If you sync your device with Ovi for the first time, use the Sync wizard to select what content you want to sync, and the sync interval.
- 2 Select **Synchronise**. If your device is in the Offline profile, connect to the internet when prompted.

Select **Options** and from the following:

Start — Sync your device with Ovi.

Cancel — Cancel an ongoing sync.

Synchronisation settings — Modify your sync settings.

The available options may vary.

Share your location

Open the Contacts application and the Ovi tab.

To share your location, select **Options > Settings > Presence > Share my location** and from the following:

Sharing allowed — Allow your friends to see your location.

My shared landmarks — Select the landmarks from where your location is broadcast to your friends.

Refresh interval — Select how often you broadcast your current location.

Add and select landmarks:

To add a location to the landmarks list, select **Share my location > My shared landmarks > Options > New landmark**.

To add your current location as a landmark, select **Current position**.

To browse for a location on a map, select **Select from map**.

To add a landmark manually, select **Enter manually**.

To select the locations you want to share with your friends, select **Share my location > My shared landmarks**, and select the landmarks from the list. Select **Options** to edit, mark, and unmark items on the list.

Whenever you are online with the Contacts on Ovi service, and in one of the selected locations, your friends can see your location.

Ovi Contacts settings

Select **Options > Settings**.

Select from the following:

Account — Access your account details, and define your visibility to others in a search.

Presence — Show information about your location to your friends, and allow them to see when you are making a phone call (call status).

Personalisation — Modify the settings related to the startup and tones of the Ovi Contacts application, and automatically accept friend invitations.

Connection — Select the network connection to use, and activate roaming warnings.

Using a packet data connection may involve the transmission of large amounts of data through your service provider's network. For information about data transmission charges, contact your network service provider.

Exit — End all active chats, and close the application.

Nokia account settings

Select **Options** > **Settings** > **Account**.

Edit your account details

Select **My account**.

Define your visibility in searches

Select **My account** > **Visibility in search**. You must be online to change your visibility.

Presence settings

Select **Options** > **Settings** > **Presence**.

Modify presence settings

Select from the following:

Share my location — Allow your friends to see your location.

Share now playing — Allow your friends to see what music you are currently listening to on your mobile device.

Share call status — Allow your friends to see your call status.

Share your location

Select **Share my location** and from the following:

Sharing allowed — Allow your friends to see your location in selected landmarks.

My shared landmarks — Select the landmarks from where your location is broadcast to your friends.

Refresh interval — Select how often you broadcast your current location.

Add a location to the landmarks list

Select **Share my location** > **My shared landmarks** > **Options** > **New landmark**.

Add your current location as a landmark

Select **Current position**.

Browse for a location on a map

Select **Select from map**.

Add a landmark manually

Select **Enter manually**.

Select locations you want to share with your friends

- 1 Select **Share my location** > **My shared landmarks**.
- 2 Select the landmarks from the list.
- 3 Select **Options** to edit, mark, and unmark items on the list. Depending on your settings, your friends can see

your location when you are in one of the selected locations.

Personalisation settings

Select **Options** > **Settings** > **Personalisation**.

Select from the following:

Login on start-up — Sign in automatically to Ovi Contacts when you switch on your mobile device.

Auto-accept friend invit. — Accept friend requests automatically without notification.

Message tone — Select a tone for new messages.

Friend online tone — Select the tone that sounds when a friend comes online.

Icon on Home screen — Add the Ovi Contacts shortcut icon to your device home screen.

Connection settings

Select **Options** > **Settings** > **Connection**.

Modify connection settings

Select **Network connection** and the desired connection. To use the default connection defined in your device connection settings, select **Default connection**.

Set the device to notify you when your home network is not available

To receive a warning when your device is trying to connect to another network, select **Roaming warning** > **On**.

Messaging

Messaging main view

Select **Menu** > **Messaging** (network service).

To create a new message, select **New message**.

Tip: To avoid rewriting messages that you send often, use texts in the **Templates** folder in **My folders**. You can also create and save your own templates.

Messaging contains the following folders:

 **Inbox** — Received messages, except e-mail and cell broadcast messages, are stored here.

 **My folders** — Organise your messages into folders.

 **Mailbox** — Connect to your remote mailbox to retrieve your new e-mail messages, or view your previously retrieved e-mail messages offline.

 **Drafts** — Draft messages that have not been sent are stored here.

 **Sent** — The last messages that have been sent, excluding messages sent using Bluetooth connectivity, are stored here. You can change the number of messages to save in this folder.

 **Outbox** — Messages waiting to be sent are temporarily stored in the outbox, for example, when your device is outside network coverage.

 **Delivery reports** — You can request the network to send you a delivery report of the text messages and multimedia messages you have sent (network service).

Write and send messages

Select **Menu** > **Messaging**.

Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

Before you can create a multimedia message or write a mail, you must have the correct connection settings defined.

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

Check the size limit of mail messages with your service provider. If you attempt to send a mail message that exceeds the size limit of the mail server, the message is left in the Outbox folder, and the device attempts to resend it periodically. Sending a mail requires a data connection, and continuous attempts to resend the mail may incur charges from your service provider. In the Outbox folder, you can delete such a message or move it to the Drafts folder.

Messaging requires network services.

Send a text or multimedia message

Select **New message**.

Send an audio or mail message

Select **Options** > **Create message**, and the relevant option.

Select recipients or groups from the contacts list

Select  from the toolbar.

Enter the number or mail address manually

Tap the **To** field.

Enter the subject of the mail or multimedia message

Enter it in the Subject field, . If the Subject field is not visible, select **Options** > **Message header fields** to change the fields that are visible.

Write the message

Tap the message field.

Add an object to a message or mail

Select  and the relevant type of content.

The message type may change to multimedia message based on the inserted content.

Send the message or mail

Select , or press the call key.

Your device supports text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly.

Characters with accents, other marks, or some language options take more space, and limit the number of characters that can be sent in a single message.

Messaging inbox Receive messages

Select **Menu** > **Messaging** and **Inbox**.

In the Inbox folder,  indicates an unread text message,  an unread multimedia message,  an unread audio message, and  data received through Bluetooth connectivity.

When you receive a message,  and **1 new message** are displayed in the home screen. To open the message, select **Show**. To open a message in the Inbox folder, select the message. To reply to a received message, select **Options** > **Reply**.

Multimedia messages

Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

You may receive a notification that a multimedia message is waiting in the multimedia message centre. To start a packet data connection to retrieve the message to your device, select **Options** > **Retrieve**.

When you open a multimedia message () , you may see an image and a message.  is shown if sound is included, or

 if video is included. To play the sound or the video, select the indicator.

To see the media objects that have been included in the multimedia message, select **Options** > **Objects**.

If the message includes a multimedia presentation,  is displayed. To play the presentation, select the indicator.

Data, settings, and web service messages

Your device can receive many kinds of messages that contain data, such as business cards, ringing tones, operator logos, calendar entries, and e-mail notifications. You may also receive settings from your service provider in a configuration message.

To save the data from the message, select **Options** and the corresponding option.

Web service messages are notifications (for example, news headlines) and may contain a text message or a link. For availability and subscription, contact your service provider.

Mailbox Define e-mail settings

Select **Menu** > **Messaging** and **Mailbox**.

To use e-mail, you must have defined a valid internet access point (IAP) in the device and have defined your e-mail settings correctly.

You must have a separate e-mail account. Follow the instructions given by your remote mailbox and internet service provider (ISP).

If you select **Messaging > Mailbox** and have not set up your e-mail account, you are prompted to do so. To start creating the e-mail settings with the mailbox guide, select **Start**.

When you create a new mailbox, the name you give to the mailbox replaces Mailbox in the Messaging main view. You can have up to six mailboxes.

Open the mailbox

Select **Menu > Messaging** and a mailbox.

When you open the mailbox, the device asks if you want to connect to the mailbox.

Connect to your mailbox and retrieve new e-mail headers or messages

Select **Yes**. When you view messages online, you are continuously connected to a remote mailbox using a data connection.

View previously retrieved e-mail messages offline

Select **No**.

Create a new e-mail message

Select **Options > Create message > E-mail**.

Close the data connection to the remote mailbox

Select **Options > Disconnect**.

Retrieve e-mail messages

Select **Menu > Messaging** and a mailbox.

If you are offline, select **Options > Connect** to open a connection to the remote mailbox.

Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

- 1 When you have an open connection to a remote mailbox, select **Options > Retrieve e-mail > New** to retrieve all new messages, **Selected** to retrieve only selected messages, or **All** to retrieve all messages from the mailbox.
To stop retrieving messages, select **Cancel**.
- 2 To close the connection and view the e-mail messages offline, select **Options > Disconnect**.
- 3 To open an e-mail message, select the message. If the e-mail message has not been retrieved and you are offline, you are asked if you want to retrieve this message from the mailbox.

To view e-mail attachments, open the message, and select the attachment field indicated by . If the attachment has not been retrieved to the device, select **Options > Retrieve**.

To retrieve e-mail messages automatically, select **Options > E-mail settings > Automatic retrieval**.

Setting the device to retrieve e-mail automatically may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

Delete e-mail messages

Select **Menu** > **Messaging** and a mailbox.

To delete the contents of an e-mail message from the device while still retaining it in the remote mailbox, select **Options** > **Delete** > **Phone only**.

The device mirrors the e-mail headers in the remote mailbox. Although you delete the message content, the e-mail header stays in your device. If you want to remove the header as well, you must be connected to the server when deleting the message from your device and the remote mailbox. If there is no connection to the server, the header is deleted when you make a connection from your device to the remote mailbox again to update the status.

To delete an e-mail from the device and the remote mailbox, select **Options** > **Delete** > **Phone and server**.

To cancel deleting an e-mail that has been marked to be deleted from the device and server during the next connection () , select **Options** > **Restore**.

Disconnect from the mailbox

When you are online, to end the data connection to the remote mailbox, select **Options** > **Disconnect**.

View messages on a SIM card

Select **Menu** > **Messaging** and **Options** > **SIM messages**.

Before you can view SIM messages, you must copy them to a folder in your device.

- 1 Select **Options** > **Mark/Unmark** > **Mark** or **Mark all** to mark messages.
- 2 Select **Options** > **Copy**. A list of folders opens.
- 3 To start copying, select a folder. To view the messages, open the folder.

Cell broadcast messages

Select **Menu** > **Messaging** and **Options** > **Operator msgsgs..**

Cell broadcast (network service) allows you to receive messages on various topics, such as weather or traffic conditions, from your service provider. For available topics and relevant topic numbers, contact your service provider. This service may not be available for all regions.

Cell broadcast messages cannot be received in UMTS networks. A packet data connection may prevent cell broadcast reception.

Service commands

Select **Menu > Messaging and Options > Service commands**.

With service commands (network service) you can enter and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider. This service may not be available for all regions.

Messaging settings

The settings may be preconfigured in your device, or you may receive them in a message. To enter settings manually, fill in all fields marked with **Must be defined** or an asterisk.

Some or all message centres or access points may be preset for your device by your service provider, and you may not be able to change, create, edit, or remove them.

Text message settings

Select **Menu > Messaging and Options > Settings > Text message**.

Select from the following:

Message centres — View a list of all text message centres that have been defined.

Message centre in use — Select which message centre to use to deliver text messages.

Character encoding — To use character conversion to another encoding system when available, select **Reduced support**.

Receive report — Select whether the network sends delivery reports on your messages (network service).

Message validity — Select how long the message centre resends your message if the first attempt fails (network service). If the message cannot be sent within the validity period, the message is deleted from the message centre.

Message sent as — To learn if your message centre is able to convert text messages into these other formats, contact your service provider.

Preferred connection — Select the connection to use.

Reply via same centre — Select whether you want the reply message to be sent using the same text message centre number (network service).

Multimedia message settings

Select **Menu > Messaging and Options > Settings > Multimedia message**.

Select from the following:

Image size — Define the size of the image in a multimedia message.

MMS creation mode — If you select **Guided**, the device informs you if you try to send a message that may not be supported by the recipient. If you select **Restricted**, the device prevents you from sending messages that may not be supported. To include content in your messages without notifications, select **Free**.

Access point in use — Select which access point is used as the preferred connection.

Multimedia retrieval — Select how you want to receive messages, if available. To receive messages automatically in your home network, select **Auto in home netw..** Outside your home network, you receive a notification that there is a message to retrieve in the multimedia message centre. If you select **Always automatic**, your device automatically makes an active packet data connection to retrieve the message both in and outside your home network. Select **Manual** to retrieve multimedia messages from the message centre manually, or **Off** to prevent receipt of any multimedia messages. Automatic retrieval may not be supported in all regions.

Allow anonymous msgsg. — Reject messages from anonymous senders.

Receive adverts — Receive multimedia message advertisements (network service).

Receive reports — Display the status of sent messages in the log (network service).

Deny report sending — Prevent your device from sending delivery reports of received messages.

Message validity — Select for how long the message centre resends your message if the first attempt fails (network service). If the message cannot be sent within this time period, the message is deleted from the message centre.

The device requires network support to indicate that a sent message has been received or read. Depending on the network and other circumstances, this information may not always be reliable.

E-mail settings

Manage mailboxes

Select **Menu > Messaging and Options > Settings > E-mail**.

To select which mailbox you want to use to send and receive e-mail, select **Mailbox in use** and a mailbox.

To remove a mailbox and its messages from your device, select **Mailboxes**, tap the mailbox to be removed if it is not already highlighted, and select **Options > Delete**.

To create a new mailbox, select **Mailboxes > Options > New mailbox**. The name you give to the new mailbox replaces Mailbox in the Messaging main view. You can have up to six mailboxes.

Select **Mailboxes** and a mailbox to change the connection settings, user settings, retrieval settings, and automatic retrieval settings.

Connection settings

Select **Menu > Messaging and Options > Settings > E-mail > Mailboxes**, a mailbox, and **Connection settings**.

To edit the settings for the e-mail you receive, select **Incoming e-mail**, and from the following:

User name — Enter your user name given to you by your service provider.

Password — Enter your password. If you leave this field blank, you are prompted for the password when you try to connect to your remote mailbox.

Incoming mail server — Enter the IP address or host name of the mail server that receives your e-mail.

Access point in use — Select an internet access point (IAP).

Mailbox name — Enter a name for the mailbox.

Mailbox type — Defines the e-mail protocol that your remote mailbox service provider recommends. The options are POP3 and IMAP4. This setting cannot be changed.

Security — Select the security option used to secure the connection to the remote mailbox.

Port — Define a port for the connection.

APOP secure login (for POP3 only) — Use with the POP3 protocol to encrypt the sending of passwords to the remote e-mail server while connecting to the mailbox.

To edit the settings for the e-mail you send, select **Outgoing e-mail** and from the following:

My e-mail address — Enter the e-mail address given to you by your service provider.

Outgoing mail server — Enter the IP address or host name of the mail server that sends your e-mail. You may only be able to use the outgoing server of your service provider. For more information, contact your service provider.

The settings for user name, password, access point, security, and port are similar to the ones in incoming e-mail.

User settings

Select **Menu > Messaging and Options > Settings > E-mail > Mailboxes**, a mailbox, and **User settings**.

Select from the following:

My name — Enter your own name. Your name replaces your e-mail address in the recipient's device if the recipient's device supports this function.

Send message — Define how e-mail is sent from your device. Select **Immediately** for the device to connect to the mailbox when you select **Send message**. If you select **During next conn.**, e-mail is sent when the connection to the remote mailbox is available.

Send copy to self — Select whether you want to send a copy of the e-mail to your own mailbox.

Include signature — Select whether you want to attach a signature to your e-mails.

New e-mail alerts — Select whether you want to receive the new e-mail indications (a tone, a note, and a mail indicator) when new e-mail is received.

E-mail deletion — Select whether you want to delete e-mails from phone only, from phone and server, or to be asked each time separately.

Reply-to address — Define an e-mail address to which replies to e-mails sent from the mailbox in question are delivered.

Retrieval settings

Select **Menu > Messaging and Options > Settings > E-mail > Mailboxes**, a mailbox, and **Retrieval settings**.

Select from the following:

E-mail retrieval — Define which parts of the e-mail are retrieved: **Headers only**, **Size limit** (POP3), or **Msgs. & attachments** (POP3).

Retrieval amount — Define how many new e-mail messages are retrieved to the mailbox.

IMAP4 folder path (for IMAP4 only) — Define the folder path for folders to be subscribed.

Folder subscriptions (for IMAP4 only) — Subscribe to other folders in the remote mailbox, and retrieve content from those folders.

Automatic retrieval settings

Select Menu > Messaging and Options > Settings > E-mail > Mailboxes, a mailbox, and Automatic retrieval.

Select from the following:

E-mail notifications — To automatically retrieve the headers to your device when you receive new e-mail in your remote mailbox, select **Auto-update** or **Only in home netw.**

E-mail retrieval — To automatically retrieve the headers of new e-mail from your remote mailbox at defined times, select **Enabled** or **Only in home netw.** Define when and how often the e-mails are retrieved.

E-mail notifications and **E-mail retrieval** cannot be active at the same time.

Setting the device to retrieve e-mail automatically may involve the transmission of large amounts of data through

your service provider's network. Contact your service provider for information about data transmission charges.

Web service message settings

Select Menu > Messaging and Options > Settings > Service message.

Select whether you want to receive service messages. To set the device to automatically activate the browser and start a network connection to retrieve content when you receive a service message, select **Download messages > Automatically**.

Cell broadcast settings

Select Menu > Messaging and Options > Settings > Operator message.

Check the available topics and related topic numbers with your service provider.

Select from the following:

Reception — Select whether you want to receive cell broadcast messages.

Language — Select the languages in which you want to receive messages: **All**, **Selected**, or **Other**.

Topic detection — Select whether the device automatically searches for new topic numbers, and saves the new numbers without a name to the topic list.

Other settings

Select Menu > Messaging and Options > Settings > Other.

Select from the following:

Save sent messages — Select whether you want to save copies of the text, multimedia, or e-mail messages that you send to the Sent folder.

Number of saved msgs. — Define how many sent messages are saved to the sent folder at a time. When the limit is reached, the oldest message is deleted.

Memory in use — Select the memory where you want to save your messages.

Show messages in groups — Define whether you want to group the messages in Inbox, Sent, Drafts and My folders.

Show e-mails in groups — Define whether you want to group your e-mail messages.

Mail for Exchange

With Mail for Exchange, you can receive your work e-mail to your device. You can read and reply to your e-mails, view and edit compatible attachments, view calendar information, receive and reply to meeting requests, schedule meetings, and view, add, and edit contact information.

Mail for Exchange

Use of the Mail for Exchange is limited to over-the-air synchronisation of PIM information between the Nokia device and the authorised Microsoft Exchange server.

Mail for Exchange can be set up only if your company has Microsoft Exchange Server. In addition, your company's IT administrator must have activated Mail for Exchange for your account.

Before starting to set up Mail for Exchange, ensure that you have the following:

- A corporate e-mail ID
- Your office network user name
- Your office network password
- Your network domain name (contact your company's IT department)
- Your Mail for Exchange server name (contact your company's IT department)

Depending on your company's Mail for Exchange server configuration, you may need to enter other information in addition to those listed. If you do not know the correct information, contact your company's IT department.

With Mail for Exchange, the use of the lock code may be mandatory. The default lock code of your device is 12345, but your company's IT administrator may have set a different one for you to use.

You can access and modify the Mail for Exchange profile and settings in the Messaging settings.

Connectivity

Your device offers several options to connect to the internet or to another compatible device or PC.

Data connections and access points

Your device supports packet data connections (network service), such as GPRS in the GSM network. When you use your device in GSM and UMTS networks, multiple data connections can be active at the same time, and access points can share a data connection. In the UMTS network, data connections remain active during voice calls.

You can also use a WLAN data connection. Only one connection in one wireless LAN can be active at a time, but several applications can use the same internet access point.

To establish a data connection, an access point is required. You can define different kinds of access points, such as the following:

- MMS access point to send and receive multimedia messages
- Internet access point (IAP) to send and receive e-mail and connect to the internet

Check the type of access point you need with your service provider for the service you want to access. For availability and subscription to packet data connection services, contact your service provider.

Network settings

Select **Menu > Settings and Connectivity > Network**.

Your device can automatically switch between GSM and UMTS networks. GSM networks are indicated with **G**. UMTS networks are indicated with **3G**.

An active high-speed downlink packet access (HSDPA) connection (network service) is indicated with **3.5G**.

Select from the following:

Network mode — Select which network to use. If you select **Dual mode**, the device uses the GSM or UMTS network automatically, according to the network parameters and the roaming agreements between the wireless service providers. For details and roaming costs, contact your network service provider. This option is shown only if supported by the wireless service provider.

A roaming agreement is an agreement between two or more service providers to enable the users of one service provider to use the services of other service providers.

Operator selection — Select **Automatic** to set the device to search for and select one of the available networks, or **Manual** to manually select the network from a list. If the connection to the manually selected network is lost, the device sounds an error tone and asks you to reselect a network. The selected network must have a roaming agreement with your home network.

Cell info display — Set the device to indicate when it is used in a cellular network based on microcellular network (MCN) technology and to activate cell info reception.

Wireless LAN

Your device can detect and connect to wireless local area networks (WLAN). Using a WLAN, you can connect your device to the internet and compatible devices that have WLAN support.

About WLAN

To use a wireless local area network (WLAN) connection, it must be available in the location, and your device must be connected to the WLAN. Some WLANs are protected, and you need an access key from the service provider to connect to them.

Using WLAN may be restricted in some countries. For example, in France, you are only allowed to use WLAN indoors. For more information, contact your local authorities.

Features that use WLAN, or that are allowed to run in the background while using other features, increase the demand on battery power and reduce the battery life.

Important: Always enable one of the available encryption methods to increase the security of your wireless LAN connection. Using encryption reduces the risk of unauthorised access to your data.

WLAN connections

To use a wireless LAN (WLAN) connection, you must create an internet access point (IAP) for WLAN. Use the access point for applications that need to connect to the internet.

A WLAN connection is established when you create a data connection using a WLAN internet access point. The active WLAN connection ends when you end the data connection.

You can use WLAN during a voice call or when packet data is active. You can only be connected to one WLAN access point device at a time, but several applications can use the same internet access point.

When the device is in the offline profile, you can still use WLAN (if available). Remember to comply with any applicable safety requirements when establishing and using a WLAN connection.

Tip: To check the unique media access control (MAC) address that identifies your device, open the dialler and enter ***#62209526#**.

WLAN wizard

Select **Menu > Settings and Connectivity > WLAN**.

The WLAN wizard helps you to connect to a wireless LAN (WLAN) and manage your WLAN connections.

If the search finds WLANs, to create an internet access point (IAP) for a connection and start the web browser using this IAP, select the connection and **Start web browsing**.

If you select a secured WLAN, you are asked to enter the relevant password. To connect to a hidden network, you must enter the correct network name (service set identifier, SSID).

If you already have the web browser running using the currently active WLAN connection, to return to the web browser, select **Continue web browsing**.

To end the active connection, select the connection and **Disconnect WLAN**.

WLAN internet access points

Select **Menu > Settings and Connectivity > WLAN > Options**.

Select from the following:

Filter WLAN networks — Filter out wireless LANs (WLANs) from the list of found networks. The selected networks are not displayed the next time the application searches for WLANs.

Details — View the details of a network shown in the list. If you select an active connection, the connection details are displayed.

Operating modes

There are two operating modes in WLAN: infrastructure and ad hoc.

The infrastructure operating mode allows two kinds of communication: wireless devices are connected to each other through a WLAN access point device, or wireless devices

are connected to a wired LAN through a WLAN access point device.

In the ad hoc operating mode, devices can send and receive data directly with each other.

Wireless LAN settings

Select **Menu > Settings and Connectivity > WLAN > Options > Settings**.

Select from the following:

Show WLAN availability — Select whether  is displayed when a wireless LAN (WLAN) is available.

Tip: To access the WLAN Wizard application and view the available options, select the WLAN icon, and in the pop-up window, select the highlighted text next to the WLAN icon.

Scan for networks — If you set **Show WLAN availability** to **Yes**, you can select how often the device searches for available WLANs and updates the indicator.

Internet connectivity test — Select whether you want the device to test the internet capability of the selected WLAN automatically, to ask for permission every time, or to never perform the connectivity test. If you select **Run automatically** or allow the test to be performed when the device asks for it, and the connectivity test is performed successfully, the access point is saved to the internet destinations.

To view advanced settings, select **Options > Advanced settings**. Changing the advanced settings for the WLAN is not recommended.

Access points

Create a new access point

Select **Menu > Settings and Connectivity > Destinations**.

You may receive access point settings in a message from a service provider. Some or all access points may be preset for your device by your service provider, and you may not be able to change, create, edit, or remove them.

When you open one of the access point groups (, , , ) , you can see the access point types:



indicates a protected access point



indicates a packet data access point



indicates a wireless LAN (WLAN) access point

Tip: You can create internet access points in a WLAN with the WLAN wizard.

To create a new access point, select  **Access point**.

The device asks to check for available connections. After the search, connections that are already available are shown and can be shared by a new access point.

If you skip this step, you are asked to select a connection method and to define the settings needed.

To edit the settings of an access point, open one of the access point groups, and select an access point. Follow the instructions from your service provider.

Connection name — Enter a name for the connection.

Data bearer — Select the data connection type.

Depending on the data connection you select, only certain setting fields are available. Fill in all fields marked with **Must be defined** or with a red *. Other fields can be left empty, unless your service provider has instructed otherwise.

To use a data connection, your service provider must support this feature, and if necessary, activate it for your SIM card.

Create access point groups

Select **Menu > Settings and Connectivity > Destinations**.

Some applications allow you to use access point groups for network connections.

To avoid selecting a single access point every time the device makes a network connection, you can create a group that contains various access points to connect to that network and define the order in which the access points are used.

For example, you can add wireless LAN (WLAN) and packet data access points to an internet access point group, and use the group for browsing the web. If you give WLAN the highest priority, the device connects to the internet through WLAN, if available, and through a packet data connection if not.

To create a new access point group, select **Options** > **Manage** > **New destination**.

To add access points to an access point group, select the group and **Options** > **New access point**. To copy an existing access point from another group, select the group, tap the relevant access point if it is not already highlighted, and select **Options** > **Organise** > **Copy to other dest..**

To change the priority of an access point within the group, select **Options** > **Organise** > **Change priority**.

Packet data access points

Select **Menu** > **Settings and Connectivity** > **Destinations** > **Access point**, and follow the instructions on the screen.

To edit a packet data access point, open one of the access point groups, and select an access point marked with .

Follow the instructions from your service provider.

Select from the following:

Access point name — You obtain the access point name from your service provider.

User name — The user name may be needed to make a data connection, and is usually provided by your service provider.

Prompt password — If you must enter the password every time you log in to a server, or if you do not want to save your password in the device, select **Yes**.

Password — A password may be needed to make a data connection and is usually provided by your service provider.

Authentication — Select **Secure** to always send your password encrypted or **Normal** to send your password encrypted when possible.

Homepage — Depending on the access point you are setting up, enter the web address or the address of the multimedia message centre.

Use access point — Select **After confirmation** if you want the device to ask for confirmation before the connection using this access point is created, or **Automatically** if you want the device to connect to the destination using this access point automatically.

Select **Options** > **Advanced settings** and from the following:

Network type — Select the internet protocol type to transfer data to and from your device. The other settings depend on the selected network type.

Phone IP address (for IPv4 only) — Enter the IP address of your device.

DNS addresses — Enter the IP addresses of the primary and secondary DNS servers, if required by your service provider. To obtain these addresses, contact your internet service provider.

Proxy server address — Enter the address of the proxy server.

Proxy port number — Enter the port number of the proxy server.

WLAN internet access points

Select **Menu > Settings and Connectivity > Destinations > Access point**, and follow the instructions.

To edit a wireless LAN (WLAN) access point, open one of the access point groups, and select an access point marked with .

Follow the instructions from your WLAN service provider.

Select from the following:

WLAN network name — Select **Enter manually** or **Search for networks**. If you select an existing network, WLAN network mode and WLAN security mode are determined by the settings of its access point device.

Network status — Define whether the network name is displayed.

WLAN network mode — Select **Ad-hoc** to create an ad hoc network and to allow devices to send and receive data directly; a WLAN access point device is not needed. In an ad hoc network, all devices must use the same WLAN network name.

WLAN security mode — Select the encryption used: **WEP**, **802.1x**, or **WPA/WPA2** (802.1x and WPA/WPA2 are not available for ad hoc networks). If you select **Open network**, no encryption is used. The WEP, 802.1x and WPA functions can be used only if the network supports them.

Homepage — Enter the web address of the starting page.

Use access point — Set the device to create a connection using this access point automatically or after confirmation.

The available options may vary.

Active data connections

Select **Menu > Settings and Connectivity > Connection mgr.**.

In the active data connections view, you can see open data connections:



data calls



packet data connections



wireless LAN (WLAN) connections

To end a connection, select **Options > Disconnect**.

To end all open connections, select **Options > Disconnect all**.

To view the details of a connection, select **Options > Details**.

Synchronisation

With the Sync application, you can synchronise your notes, messages, contacts, and other information with a remote server.

Select **Menu > Settings > Connectivity > Data transfer > Sync**.

You may receive synchronisation settings as a configuration message from your service provider.

A synchronisation profile contains the necessary settings for synchronisation. When you open the application, the default or previously used synchronisation profile is displayed.

Include or exclude content types

Select a content type.

Synchronise data

Select **Options** > **Synchronise**.

Create a new synchronisation profile

Select **Options** > **New sync profile**.

Manage synchronisation profiles

Select **Options** and the desired option.

Bluetooth connectivity

About Bluetooth connectivity

With Bluetooth connectivity, you can make a wireless connection to other compatible devices, such as mobile phones, computers, headsets, and car kits.

You can use the connection to send images, video clips, music and sound clips, and notes, transfer files from your compatible PC, and print images with a compatible printer.

Since devices with Bluetooth wireless technology communicate using radio waves, they do not need to be in direct line-of-sight. However, they must be within 10 metres (33 feet) of each other, although the connection may be subject to interference from obstructions such as walls or from other electronic devices.

This device is compliant with Bluetooth Specification 2.0 + EDR supporting the following profiles: Dial-Up Networking (DUN), Object Push Profile (OPP), File Transfer Profile (FTP), Hands Free Profile (HFP), Headset Profile (HSP), Basic Imaging Profile (BIP), Remote SIM Access Profile (SimAP), Device Identification Profile (DI), Phonebook Access Profile (PBAP), Generic Audio/Video Distribution Profile (GAVDP), Audio/Video Remote Control Profile (AVRCP), Advanced Audio Distribution Profile (A2DP). To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved accessories for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

Features using Bluetooth technology increase the demand on battery power and reduce the battery life.

When the device is locked, only connections to authorised devices are possible.

Settings

Select **Menu** > **Settings and Connectivity** > **Bluetooth**.

When you open the application for the first time, you are asked to define a name for your device. You can change the name later.

Select from the following:

Bluetooth — Turn Bluetooth connectivity on or off.

My phone's visibility — To allow your device to be found by other devices with Bluetooth wireless technology, select **Shown to all**. To set a time period after which the visibility

is set from shown to hidden, select **Set visibility period**. To hide your device from other devices, select **Hidden**.

My phone's name — Edit the name shown to other devices with Bluetooth wireless technology.

Remote SIM mode — Enable or disable another device, such as a compatible car kit accessory, to use the SIM card in your device to connect to the network.

Security tips

Select **Menu > Settings and Connectivity > Bluetooth**.

When you are not using Bluetooth connectivity, to control who can find your device and connect to it, select **Bluetooth > Off** or **My phone's visibility > Hidden**.

Do not pair with or accept connection requests from an unknown device. This helps to protect your device from harmful content.

Send data using Bluetooth connectivity

You can have several Bluetooth connections active at a time. For example, if you are connected to a compatible headset, you can also transfer files to another compatible device.

- 1 Open the application where the item you want to send is stored.
- 2 Go to an item, and select **Options > Send > Via Bluetooth**.

Devices with Bluetooth wireless technology that are within range are displayed. Device icons are as follows:



computer

phone

audio or video device

other device

To interrupt the search, select **Cancel**.

- 3 Select the device with which you want to connect.
- 4 If the other device requires pairing before data can be transmitted, a tone sounds, and you are asked to enter a passcode. The same passcode must be entered in both devices.

When the connection is established, **Sending data** is displayed.

Tip: When searching for devices, some devices may show only the unique address (device address). To find the unique address of your device, in the home screen, enter ***#2820#**.

Pair devices

Select **Menu > Settings and Connectivity > Bluetooth**.

To pair with compatible devices and view your paired devices, open the **Paired devices** tab.

Before pairing, create your own passcode (1 to 16 digits), and agree with the owner of the other device to use the same code. Devices that do not have a user interface have a factory-set passcode. The passcode is used only once.

- 1 To pair with a device, select **Options > New paired device**. Devices that are within range are displayed.

- 2 Select the device, and enter the passcode. The same passcode must be entered on the other device, as well.
- 3 Some audio accessories connect automatically to your device after pairing. Otherwise, to connect to an accessory, select **Options** > **Connect to audio device**.

Paired devices are indicated by  in the device search.

To set a device as authorised or unauthorised, select from the following:

Set as authorised — Connections between your device and the authorised device can be made without your knowledge. You will not be asked for authorisation or acceptance separately. Use this status only for your own devices, such as your compatible headset or PC, or devices that belong to someone you trust.  indicates authorised devices in the paired devices view.

Set as unauthorised — Connection requests from this device must be accepted separately every time.

To cancel a pairing with a device, select **Options** > **Delete**.

To cancel all pairings, select **Options** > **Delete all**.

Receive data using Bluetooth connectivity

When you receive data using Bluetooth connectivity, a tone sounds, and the device asks you if you want to accept the message. If you accept,  is displayed, and you can find an informative message about the data in the Inbox folder in Messaging. The received data is automatically saved to the

device memory. Messages received using Bluetooth connectivity are indicated with .

Block devices

Select **Menu** > **Settings and Connectivity** > **Bluetooth**.

To block a device from establishing a Bluetooth connection to your device, open the **Paired devices** tab.

Tap a device you want to block, if it is not already highlighted, and select **Options** > **Block**.

To unblock a device, open the **Blocked devices** tab, tap a device, if it is not already highlighted, and select **Options** > **Delete**.

To unblock all blocked devices, select **Options** > **Delete all**.

If you reject a pairing request from another device, you are asked if you want to block all future connection requests from this device. If you accept the query, the remote device is added to the list of blocked devices.

Remote SIM mode

Select **Menu** > **Settings and Connectivity** > **Bluetooth**.

Before the remote SIM mode can be activated, the two devices must be paired and the pairing initiated from the other device. When pairing, use a 16-digit passcode, and set the other device as authorised.

To use the remote SIM mode with a compatible car kit accessory, activate Bluetooth connectivity, and enable the use of the remote SIM mode with your device.

Activate the remote SIM mode from the other device.


When the remote SIM mode is on in your device, **Remote SIM mode** is displayed in the home screen. The connection to the wireless network is turned off, as indicated by **X** in the signal strength indicator area, and you cannot use SIM card services or features requiring cellular network coverage.

When the wireless device is in the remote SIM mode, you can only use a compatible connected accessory, such as a car kit, to make or receive calls. Your wireless device will not make any calls while in this mode, except to the emergency numbers programmed into your device. To make calls from your device, you must leave the remote SIM mode. If the device is locked, enter the lock code to unlock it.

To leave the remote SIM mode, press the power key, and select **Exit remote SIM mode**.

USB

Select **Menu > Settings and Connectivity > USB**.

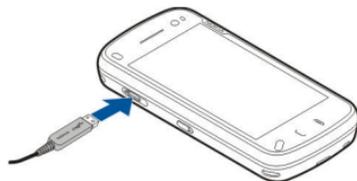

To have the device ask the purpose of the connection each time a compatible data cable is connected, select **Ask on connection > Yes**.

If the **Ask on connection** option is turned off or you want to change the mode during an active connection, select **USB connection mode** and from the following:

PC Suite — Use Nokia PC applications such as Nokia Ovi Suite, and Nokia Software Updater.

Mass storage — Transfer data between your device and a compatible PC.

Image transfer — Print images with a compatible printer.

Media transfer — Synchronise music with Nokia Music or Windows Media Player.

PC connections

You can use your mobile device with a variety of compatible PC connectivity and data communications applications. With Nokia Ovi Suite you can, for example, transfer files and images between your device and a compatible computer.

To use Ovi Suite with USB connection mode, select **PC Suite mode**.

For more information about Ovi Suite, see the support area at www.ovi.com.

Administrative settings

Select **Menu > Settings and Connectivity > Admin. settings**.

To set the online time for the data call connection, select **Data call**. The data call settings affect all access points that use a GSM data call.

Packet data settings

Select **Menu > Settings and Connectivity > Admin. settings > Packet data**.

The packet data settings affect all access points using a packet data connection.

Select from the following:

Packet data connection — If you select **When available** and you are in a network that supports packet data, the device registers to the packet data network. Starting an active packet data connection (for example, to send and receive e-mail) is quicker than if the device establishes a packet data connection when needed. If there is no packet data coverage, the device periodically tries to establish a packet data connection. If you select **When needed**, the device uses a packet data connection only if you start an application or action that needs it.

Access point — The access point name is needed to use your device as a packet data modem to a compatible computer.

High speed packet access — Enable or disable the use of HSDPA (network service) in UMTS networks.

SIP settings

Select **Menu > Settings and Connectivity > Admin. settings > SIP settings**.

Session Initiation Protocol (SIP) settings are needed for certain network services using SIP. You may receive the settings in a special text message from your service provider. You can view, delete, or create these setting profiles in SIP settings.

Access point name control

Select **Menu > Settings and Connectivity > Admin. settings > APN control**.

With the access point name control service, you can restrict packet data connections and allow your device to use only certain packet data access points.

This setting is only available if your SIM card supports the access point control service.

To turn the control service on or off, or to change the allowed access points, select **Options** and the corresponding option. To change the options, you need your PIN2 code. Contact your service provider for the code.

Internet

With the Web browser, you can view hypertext markup language (HTML) web pages on the internet as originally designed. You can also browse web pages that are designed specifically for mobile devices, and use extensible hypertext markup language (XHTML), or the wireless markup language (WML).

To browse the web, you need to have an internet access point configured in your device. Using the web browser requires network support or WLAN available.

Browse the web

Select **Menu** > **Web**.

To browse the web, select  **Go to web address** from the toolbar, and enter a web address.

By default, the browser is in full screen mode. To exit full screen mode, select the arrow icon in the bottom right corner.

Some web pages may contain material, such as graphics or video clips, that requires a large amount of memory to view. If your device runs out of memory while loading such a web page, insert a memory card. Otherwise, the video clips are not displayed.

To browse web pages with graphics disabled, to save memory and increase the page loading speed, select **Options** > **Settings** > **Page** > **Load content** > **Text only**.

To refresh the content of the web page, select **Options** > **Web page options** > **Reload**.

To save the current web page as a bookmark, select **Options** > **Web page options** > **Save as bookmark**.

To view snapshots of the web pages you have visited during the current browsing session, select **Back** (available if **History list** is activated in the browser settings and the current web page is not the first web page you visit).

To prevent or allow the automatic opening of multiple windows, select **Options** > **Web page options** > **Block pop-ups** or **Allow pop-ups**.

To zoom in on a web page, double-tap the display.

Tip: To send the browser to the background without exiting the application or connection, press the end key once.

Browser toolbar

The browser toolbar helps you select frequently used functions of the browser.

To open the toolbar when browsing, select the arrow in the bottom right corner.

From the toolbar, select from the following:

 **Expand toolbar** — Expand the toolbar to access more toolbar functions.

 **Go to web address** — Enter a web address.

 **Show zoom** — Zoom in or out on the web page.

To use the expanded toolbar, select  **Expand toolbar** and from the following:

 **Go to feeds** — View your current feed subscriptions.

 **Send URL** — Send the web address of the current page to another device.

 **Switch win.** — Switch between open browser windows.

 **Subsc. feeds** — View a list of available web feeds on the current web page, and subscribe to a web feed.

 **Settings** — Edit the settings.

 **Save bkmrk.** — Save the current web page as a bookmark.

 **Reload** — Refresh the web page.

 **Overview** — View an overview of the current web page.

 **Homepage** — Go to the homepage (if defined in settings).

 **Bookmarks** — Open the bookmarks view.

 **Find keyword.** — Search on the current web page.

Navigate pages

When you are browsing a web page that contains a large amount of information, you can use Page overview to view what kind of information the web page contains.

To see an overview of the current web page, open the toolbar, and select  > .

Web feeds and blogs

Select **Menu > Web.**

Web feeds are XML files on web pages that are used to share, for example, the latest news headlines or blogs. It is common to find web feeds on web, blog, and wiki pages.

The browser application automatically detects if a web page contains web feeds.

If web feeds are available, to subscribe to a web feed, select **Options > Subscribe to web feeds.**

To update a web feed, in the Web feeds view, select a feed and **Options > Web feed options > Refresh.**

To define whether the web feeds are updated automatically, in the Web feeds view, select **Options > Edit > Edit.** This option is not available if one or more feeds are marked.

Content search

Select **Menu > Web.**

To search for text within the current web page, select **Options > Find keyword.**

To go to the next match, from the toolbar, select  **Find next.**

To go to the previous match, from the toolbar, select  **Find previous.**

Bookmarks

Select **Menu** > **Web**.

Select **Options** > **Go to** > **Bookmarks**. You can select web addresses from a list or from a collection of bookmarks in the Recently visited pages folder.

The toolbar helps you select frequently used functions of the browser.

From the toolbar, select from the following:

 **Add bookmark** — Add a new bookmark.

 **Go to web address** — Enter a new web address.

 **Delete** — Delete a bookmark.

To go to a new web page, select **Options** > **Go to** > **New web page**.

To send and add bookmarks, or to set a bookmark as the homepage, select **Options** > **Bookmark options**.

To edit, move, or delete bookmarks, select **Options** > **Bookmark manager**.

Empty the cache

The information or services you have accessed are stored in the cache memory of the device.

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed

confidential information requiring passwords, empty the cache after each use.

To empty the cache, select **Options** > **Clear privacy data** > **Cache**.

End the connection

To end the connection and close the browser, select **Options** > **Exit**.

To delete the information the network server collects about your visits to various web pages, select **Options** > **Clear privacy data** > **Cookies**.

Connection security

If the security indicator () is displayed during a connection, the data transmission between the device and the internet gateway or server is encrypted.

The security icon does not indicate that the data transmission between the gateway and the content server (where the data is stored) is secure. The service provider secures the data transmission between the gateway and the content server.

Security certificates may be required for some services, such as banking services. You are notified if the identity of the server is not authentic or if you do not have the correct security certificate in your device. For more information, contact your service provider.

Important: Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If "Expired certificate" or "Certificate not valid yet" is shown, even if the certificate should be valid, check that the current date and time in your device are correct.

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

Web settings

Select **Menu > Web and Options > Settings** and from the following:

General settings

Access point — Change the default access point. Some or all access points may be preset for your device by your service provider. You may not be able to change, create, edit, or remove them.

Homepage — Define the homepage.

History list — If you select **On**, while browsing, to see a list of the pages you have visited during the current session, select **Back**.

Web address suffix — Enter a web address suffix that the device uses by default when you enter a web address in the **Go to** field (for example, **.com** or **.org**).

Security warnings — Hide or show security notifications.

Java/ECMA script — Enable or disable the use of scripts.

Java/ECMA script errors — Select whether you want to receive script notifications.

Open while downloading — Select whether you want to be able to open a file while it is being downloaded.

Page settings

Load content — Select whether you want to load images and other objects while browsing. If you select **Text only**, to load images or objects later during browsing, select **Options > Tools > Load images**.

Default encoding — If text characters are not shown correctly, you can select another encoding according to the language for the current page.

Block pop-ups — Allow or block automatic opening of different pop-ups while browsing.

Automatic reload — Select whether you want the web pages to be refreshed automatically while browsing.

Font size — Define the font size that is used for web pages.

Privacy settings

Recently visited pages — Enable or disable automatic bookmark collecting. If you want to continue saving the addresses of the visited web pages into the **Recently visited pages** folder, but hide the folder from the bookmarks view, select **Hide folder**.

Form data saving — Select whether you want the password data or data you enter on different forms on a web page to be saved and used the next time you open the page.

Cookies — Enable or disable the receiving and sending of cookies.

Web feed settings

Acc. point for auto-update — Select the desired access point for updating. This option is only available when **Automatic updates** is active.

Update when roaming — Select whether you want the web feeds to be updated automatically when roaming.

Positioning (GPS)

You can use applications such as GPS data to find out your location, or measure distances and coordinates. These applications require a GPS connection.

About GPS

The Global Positioning System (GPS) is operated by the government of the United States, which is solely responsible for its accuracy and maintenance. The accuracy of location data can be affected by adjustments to GPS satellites made by the United States government and is subject to change with the United States Department of Defense civil GPS policy and the Federal Radionavigation Plan. Accuracy can also be affected by poor satellite geometry. Availability and quality of GPS signals may be affected by your location, buildings, natural obstacles, and weather conditions. GPS signals may not be available inside buildings or underground and may be impaired by materials such as concrete and metal.

GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver and cellular radio networks for positioning or navigation.

The trip meter has limited accuracy, and rounding errors may occur. Accuracy can also be affected by availability and quality of GPS signals.

The coordinates in the GPS are expressed using the international WGS-84 coordinate system. The availability of the coordinates may vary by region.

Assisted GPS (A-GPS)

Your device also supports assisted GPS (A-GPS).

A-GPS requires network support.

Assisted GPS (A-GPS) is used to retrieve assistance data over a packet data connection, which assists in calculating the coordinates of your current location when your device is receiving signals from satellites.

When you activate A-GPS, your device receives useful satellite information from an assistance data server over the cellular network. With the help of assisted data, your device can obtain the GPS position faster.

Your device is preconfigured to use the Nokia A-GPS service, if no service provider-specific A-GPS settings are available. The assistance data is retrieved from the Nokia A-GPS service server only when needed.

To disable the A-GPS service, select **Menu > Applications > Location and Options > Positioning settings > Positioning methods > Assisted GPS > Disable**.

You must have an internet access point defined in the device to retrieve assistance data from the Nokia A-GPS service over a packet data connection. The access point for A-GPS can be defined in positioning settings. A wireless LAN (WLAN) access point cannot be used for this service. Only a packet data internet access point can be used. Your device asks you to select the internet access point when GPS is used for the first time.

Hold your device correctly

When using the GPS receiver, ensure you do not cover the antenna with your hand.



Establishing a GPS connection may take from a couple of seconds to several minutes. Establishing a GPS connection in a vehicle may take longer.

The GPS receiver draws its power from the device battery. Using the GPS receiver may drain the battery faster.

Tips on creating a GPS connection

Check satellite signal status

To check how many satellites your device has found, and whether your device is receiving satellite signals, select **Menu > Applications > Location and GPS data > Options > Satellite status**.



If your device has found satellites, a bar for each satellite is shown in the satellite info view. The longer the bar, the stronger the satellite signal. When your device has received enough data from the satellite signal to calculate your location, the bar colour changes.

To view the positions of found satellites, select **Chg. view**.

Initially your device must receive signals from at least four satellites to be able to calculate your location. When the initial calculation has been made, it may be possible to continue calculating your location with three satellites. However, the accuracy is generally better when more satellites are found.

If no satellite signal can be found, consider the following:

- If you are indoors, go outdoors to receive a better signal.
- If you are outdoors, move to a more open space.
- Ensure that your hand does not cover the GPS antenna of your device.
- If the weather conditions are bad, the signal strength may be affected.
- Some vehicles have tinted (athermic) windows, which may block the satellite signals.

Position requests

You may receive a request from a network service to receive your position information. Service providers may offer information about local topics, such as weather or traffic conditions, based on the location of your device.

When you receive a position request, the service that is making the request is displayed. Select **Accept** to allow your position information to be sent or **Reject** to deny the request.

Landmarks

Select **Menu > Applications > Location and Landmarks**.

With Landmarks, you can save the position information of specific locations in your device. You can sort the saved locations into different categories, such as business, and add other information to them, such as addresses. You can use your saved landmarks in compatible applications, such as GPS data.

GPS coordinates are expressed using the international WGS-84 coordinate system.

Select **Options** and from the following:

New landmark — Create a new landmark. To make a positioning request for your current location, select **Current position**. To enter the position information manually, select **Enter manually**.

Edit — Edit or add information to a saved landmark (for example, a street address).

Add to category — Add a landmark to a category in Landmarks. Select each category to which you want to add the landmark.

Send — Send one or several landmarks to a compatible device. Your received landmarks are placed in the Inbox folder in Messaging.

You can sort your landmarks into preset categories, and create new categories. To edit and create new landmark categories, open the categories tab, and select **Options > Edit categories**.

GPS data

GPS data is designed to provide route guidance information to a selected destination, position information about your current location, and traveling information, such as the approximate distance to the destination and approximate duration of travel.

Select **Menu > Applications > Location and GPS data**.

Route guidance

Select **Menu > Applications > Location and GPS data > Navigation**.

Start the route guidance outdoors. If started indoors, the GPS receiver may not receive the necessary information from the satellites.

Route guidance is designed to show the straightest route and the shortest distance to the destination, measured in a straight line. Any obstacles on the route, such as buildings and natural obstacles, are ignored. Differences in altitude are

not taken into account when calculating the distance. Route guidance is active only when you move.

To set your trip destination, select **Options > Set destination** and a landmark as the destination, or enter the latitude and longitude coordinates.

To clear the destination set for your trip, select **Stop navigation**.

Retrieve position information

 You can view the position information of your current location and an estimate of the accuracy of the location.

Select **Menu > Applications > Location and GPS data > Position**.

Save your current location as a landmark

Select **Options > Save position**. Landmarks can be used in other compatible applications and transferred between compatible devices.

Trip meter

Select **Menu > Applications > Location and GPS data > Trip distance**.

The trip meter has limited accuracy, and rounding errors may occur. Accuracy can also be affected by availability and quality of GPS signals.

To turn trip distance calculation on or off, select **Options** > **Start** or **Stop**. The calculated values remain on the display. Use this feature outdoors to receive a better GPS signal.

To set the trip distance and time and average and maximum speeds to zero, and to start a new calculation, select **Options** > **Reset**. To set the odometer and total time to zero, select **Restart**.

Positioning settings

Select **Menu** > **Applications** > **Location and Positioning**.

Positioning methods

Select from the following:

Integrated GPS — Use the integrated GPS receiver of your device.

Assisted GPS — Use Assisted GPS (A-GPS) to receive assistance data from an assistance data server.

Bluetooth GPS — Use a compatible external GPS receiver with Bluetooth connectivity.

Network based — Use information from the cellular network (network service).

Positioning server

To define an access point and positioning server for network-assisted positioning methods, such as assisted GPS or network-based positioning, select **Positioning server**.

The positioning server may be preset by your service provider, and you may not be able to edit the settings.

Notation settings

To select which measurement system you want to use for speeds and distances, select **Measurement system** > **Metric** or **Imperial**.

To define in which format the coordinate information is displayed in your device, select **Coordinate format** and the desired format.

Maps overview



Select Menu > Maps.

Welcome to Maps.

Maps shows you what is nearby, helps you plan your route, and guides you where you want to go.

- Find cities, streets, and services.
- Find your way with turn-by-turn directions.
- Synchronise your favourite locations and routes between your mobile device and the Ovi Maps internet service.
- Check weather forecasts and other local information, if available.

Note: Downloading content such as maps, satellite images, voice files, guides or traffic information may involve transmission of large amounts of data (network service).

Some services may not be available in all countries, and may be provided only in selected languages. The services may be network dependent. For more information, contact your network service provider.

Almost all digital cartography is inaccurate and incomplete to some extent. Never rely solely on the cartography that you download for use in this device.

Content such as satellite images, guides, weather and traffic information and related services are generated by third parties independent of Nokia. The content may be inaccurate and incomplete to some extent and is subject to availability. Never rely solely on the aforementioned content and related services.

Use the compass

If your device has a compass, when activated, both the arrow of the compass and the map rotate automatically in the direction to which the top of your device is pointing.

Select Menu > Maps and My position.

Activate the compass

Select .

Deactivate the compass

Select  again. The map is oriented north.

The compass is active when there is a green outline. If the compass needs calibration, the outline of the compass is red or yellow. To calibrate the compass, rotate the device around all axes in a continuous movement.

The compass has limited accuracy. Electromagnetic fields, metal objects, or other external circumstances may also affect the accuracy of the compass. The compass should always be properly calibrated.

View your location and the map

See your current location on the map, and browse maps of different cities and countries.

Select **Menu** > **Maps and My position**.

When the GPS connection is active,  marks your current or last known location on the map. If the icon's colours are faint, no GPS signal is available.

If only cell ID based positioning is available, a red halo around the positioning icon indicates the general area you might be in. The accuracy of the estimate increases in densely populated areas.

Move on the map

Drag the map with your finger. By default, the map is oriented north.

View your current or last known location

Select .

Zoom in or out

Select **+** or **-**.

If you browse to an area not covered by maps that are stored on your device and you have an active data connection, new maps are automatically downloaded.

Map coverage varies by country and region.

Map view



- 1 Selected location
- 2 Indicator area
- 3 Point of interest (for example, a railway station or a museum)
- 4 Information area

Change the look of the map

View the map in different modes, to easily identify where you are.

Select **Menu** > **Maps and My position**.

Select  and from the following:

Map view — In the standard map view, details such as location names or motorway numbers, are easy to read.

Satellite view — For a detailed view, use satellite images.

Terrain view — View at a glance the ground type, for example, when you are travelling off-road.

3D — For a more realistic view, change the perspective of the map.

Landmarks — Display prominent buildings and attractions on the map.

Night mode — Dim the colours of the map. When travelling at night, the map is easier to read in this mode.

Find a location

Maps helps you find specific locations and types of business you are looking for.

Select **Menu** > **Maps and Find places**.

- 1 Enter search terms, such as a street address or postcode. To clear the search field, select .
- 2 Select .
- 3 Select an item from the list of proposed matches. The location is displayed on the map. To view the other locations of the search result list on the map, select one of the arrows beside the information area .

Return to the list of proposed matches

Select **List**.

Search for different types of nearby places

Select **Browse categories** and a category, such as shopping, accommodation, or transport.

If no search results are found, ensure the spelling of your search terms is correct. Problems with your internet connection may also affect results when searching online.

To avoid data transfer costs, you can also get search results without an active internet connection, if you have maps of the searched area stored on your device. To ensure your device does not use the internet connection, in the main menu, select  > **Internet** > **Connection** > **Offline**.

View location details

View more information about a specific location or place, such as a hotel or restaurant, if available.

Select **Menu** > **Maps and My position**.

View the details of a place

Select a place, its information area , and **Show details**.

Rate a place

Select a place, its information area , **Show details**, and the star rating. For example, to rate a place as being 3 out of 5 stars, select the third star. To rate a place, you need an active internet connection.

When you find a place that does not exist or contains inappropriate information or incorrect details, such as the

wrong contact information or location, it is recommended that you report it to Nokia.

Report incorrect information

Select a place and its information area (i), and select **Show details** > **Report this Place** and the appropriate option. To report a place, you need an active internet connection.

The available options may vary.

Plan a route

Plan your journey, and create your route and view it on the map before setting off.

Select **Menu** > **Maps** and **My position**.

Create a route

- 1 Tap the location of your starting point. To search for an address or place, select **Search**.
- 2 Tap the location's information area (i).
- 3 Select **Add to route**.
- 4 To add another route point, select **Add new route point** and the appropriate option.

Change the order of the route points

- 1 Select a route point.
- 2 Select **Move**.
- 3 Tap the place where you want to move the route point to.

Edit the location of a route point

Tap the route point, and select **Edit** and the appropriate option.

View the route on the map

Select **Show route**.

Navigate to the destination

Select **Show route** > **Options** > **Start driving** or **Start walking**.

Change the settings for a route

The route settings affect the navigation guidance and the way the route is displayed on the map.

- 1 In the route planner view, open the Settings tab. To get to the route planner view from the navigation view, select **Options** > **Route points** or **Route point list**.
- 2 Set the transportation mode to **Drive** or **Walk**. If you select **Walk**, one-way streets are regarded as normal streets, and walkways and routes through, for example, parks and shopping centres, can be used.
- 3 Select the desired option.

Select the walking mode

Open the Settings tab, and select **Walk** > **Preferred route** > **Streets** or **Straight line**. **Straight line** is useful on off-road terrain as it indicates the walking direction.

Use the faster or shorter driving route

Open the Settings tab, and select **Drive > Route selection > Faster route** or **Shorter route**.

Use the optimised driving route

Open the Settings tab, and select **Drive > Route selection > Optimised**. The optimised driving route combines the advantages of both the shorter and the faster routes.

You can also choose to allow or avoid using, for example, motorways, toll roads, or ferries.

Save places and routes

Save addresses, places of interest, and routes, so they can be quickly used later.

Select **Menu > Maps**.

Save a place

- 1 Select **My position**.
- 2 Tap the location. To search for an address or place, select **Search**.
- 3 Tap the location's information area (ⓘ).
- 4 Select **Save place**.

Save a route

- 1 Select **My position**.
- 2 Tap the location. To search for an address or place, select **Search**.

- 3 Tap the location's information area (ⓘ).
- 4 To add another route point, select **Add to route**.
- 5 Select **Add new route point** and the appropriate option.
- 6 Select **Show route > Options > Save route**.

View your saved places and routes

Select **Favourites > Places** or **Routes**.

View and organise places or routes

Use your Favourites to quickly access the places and routes you have saved.

Group the places and routes into a collection, for example, when planning a trip.

Select **Menu > Maps** and **Favourites**.

View a saved place on the map

- 1 Select **Places**.
- 2 Go to the place.
- 3 Select **Map**.

To return to the list of saved places, select **List**.

Create a collection

Select **Create new collection**, and enter a collection name.

Add a saved place to a collection

- 1 Select **Places** and the place.
- 2 Select **Organise collections**.

3 Select **New collection** or an existing collection.

If you need to delete places or routes, or add a route to a collection, go to the Ovi Maps internet service at www.ovi.com.

Send places to your friends

When you want to share place information with your friends, send these details directly to their devices.

Select **Menu > Maps and My position**

Send a place to your friend's compatible device

Select a location, tap the location's information area (i), and select **Send**.

Synchronise your Favourites

Plan a trip on your computer at the Ovi Maps website, synchronise the saved places, routes, and collections with your mobile device, and access the plan on the go.

To synchronise places, routes, or collections between your mobile device and the Ovi Maps internet service, you need a Nokia account. If you do not have one, in the main view, select **Accounts > Nokia account > Create new account**.

Synchronise saved places, routes, and collections

Select **Favourites > Synchronise with Ovi**. If you do not have a Nokia account, you are prompted to create one.

Set the device to synchronise Favourites automatically

Select  and **Synchronisation > Synchronisation > At start-up and shut-d..** The device starts the synchronisation when you open or close the Maps application.

Synchronising requires an active internet connection, and may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

To use the Ovi Maps internet service, go to www.ovi.com.

Share location

Publish your current location to Facebook, together with text and a picture. Your Facebook friends can see your location on a map.

Select **Menu > Maps and Share location**.

To share your location, you need a Nokia account and a Facebook account.

- 1 Sign in to your Nokia account, or, if you do not yet have one, select **Create new account**.
- 2 Sign in to your Facebook account.
- 3 Select your current location.
- 4 Enter your status update.
- 5 To attach a picture to your post, select **Add a photo**.
- 6 Select **Share location**.

Manage your Facebook account

In the main view, select **Accounts > Share location settings > Facebook**.

Sharing your location and viewing the location of others requires an internet connection. This may involve the transmission of large amounts of data and related data traffic costs.

The Facebook terms of use apply to sharing your location on Facebook. Familiarise yourself with the Facebook terms of use and the privacy practices.

Before sharing your location to others, always consider carefully with whom you are sharing it. Check the privacy settings of the social networking service you are using as you might share your location with a large group of people.

Get voice guidance

Voice guidance, if available for your language, helps you find your way to a destination, leaving you free to enjoy the journey.

Select **Menu > Maps and Drive or Walk**.

When you use drive or walk navigation for the first time, you are asked to select the language of the voice guidance, and download the appropriate files.

If you select a language that includes street names, also the street names are said aloud. Voice guidance may not be available for your language.

Change the voice guidance language

In the main view, select  **> Navigation > Drive guidance or Walk guidance** and the appropriate option.

Repeat the voice guidance for car navigation

In the navigation view, select **Options > Repeat**.

Adjust the volume of the voice guidance for car navigation

In the navigation view, select **Options > Volume**.

Walk to your destination

When you need directions to follow a route on foot, Maps guides you over squares, and through parks, pedestrian zones, and even shopping centres.

Select **Menu > Maps and Walk**.

Walk to a destination

Select **Set destination** and the appropriate option.

Walk to your home

Select **Walk home**.

When you select **Drive home** or **Walk home** for the first time, you are prompted to define your home location. To later change the home location, do the following:

- 1 In the main view, select .
- 2 Select **Navigation > Home Location > Redefine**.

3 Select the appropriate option.

Tip: To walk without a set destination, select **Map**. Your location is displayed on the centre of the map as you move.

Drive to your destination

When you need turn-by-turn directions while driving, Maps helps you get to your destination.

Select **Menu** > **Maps and Drive**.

Drive to a destination

Select **Set destination** and the appropriate option.

Drive to your home

Select **Drive home**.

When you select **Drive home** or **Walk home** for the first time, you are prompted to define your home location. To later change the home location, do the following:

- 1 In the main view, select .
- 2 Select **Navigation** > **Home Location** > **Redefine**.
- 3 Select the appropriate option.


Tip: To drive without a set destination, select **Map**. Your location is displayed on the centre of the map as you move.

Change views during navigation

Swipe the screen to select **2D view**, **3D view**, **Arrow view**, or **Route overview**.

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

Navigation view

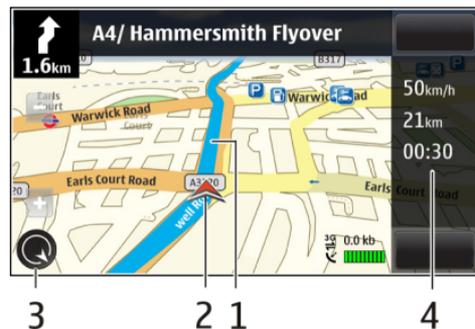

- 1 Route
- 2 Your location and direction
- 3 Compass
- 4 Information bar (speed, distance, time)

Get traffic and safety information

Enhance your driving experience with real-time information about traffic events, lane assistance, and speed limit warnings, if available for your country or region.

Select **Menu** > **Maps and Drive**.

View traffic events on the map

During drive navigation, select **Options** > **Traffic info**. The events are displayed as triangles and lines.

Update traffic information

Select **Options** > **Traffic info** > **Update traffic info**.

When planning a route, you can set the device to avoid traffic events, such as traffic jams or roadworks.

Avoid traffic events

In the main view, select  and **Navigation** > **Reroute due to traffic**.

The location of speed cameras may be shown on your route during navigation, if this feature is enabled. Some jurisdictions prohibit or regulate the use of speed camera location data. Nokia is not responsible for the accuracy, or the consequences of using speed camera location data.

Camera

Your device supports an image capture resolution of 2592x1944 pixels (5 megapixels). The image resolution in this guide may appear different.

To ensure good quality photos, wipe the camera lens carefully with a cleaning cloth.

Activate the camera

To activate the camera, open the lens cover. If the camera is active in the background, and the lens cover is open, press the capture key to activate the camera.

Image capture

Customise the active toolbar

The active toolbar provides you with shortcuts to different items and settings before capturing an image or recording a video clip. The capture and recording settings return to the default settings after you close the camera.

Select **Menu** > **Applications** > **Camera**.

To add or remove a toolbar item, select  > **Customise toolbar** and from the following:

-  or  — Switch between video and image mode.
-  — Select the scene.
-  or  — Show or hide the viewfinder grid (images only).

-  — Activate the self-timer (images only).
-  — Activate sequence mode (images only).
-  — Open **Photos**.
-  — Select a colour effect.
-  — Adjust the white balance. Select the current lighting conditions. This allows the camera to reproduce colours more accurately.
-  — Adjust the exposure compensation (images only). If you are shooting a dark subject against a very light background, such as snow, adjust the exposure to +1 or +2 to compensate for the background brightness. For light subjects against a dark background, use -1 or -2.
-  — Adjust light sensitivity (images only). Increase the light sensitivity in low light conditions to avoid too dark images and blurry images. Increasing the light sensitivity may also increase the image noise.
-  — Adjust contrast (images only). Adjust the difference between the lightest and darkest parts of the image.
-  — Adjust sharpness (images only).

The screen display changes to match the settings you define.

Saving the captured image may take longer if you change the zoom, lighting, or colour settings.

The capture settings are shooting-mode specific. Switching between the modes does not reset the defined settings.

If you select a new scene, the capture settings are replaced by the selected scene. You can change the capture settings after selecting a scene if needed.

Capture images

When capturing an image, note the following:

- Use both hands to keep the camera still.
- The quality of a digitally zoomed image is lower than that of a non-zoomed image.
- The camera goes into battery saving mode if there are no actions for about a minute. To continue capturing images, select **Continue**.
- Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.

To capture an image with the main camera, do the following:

- 1 To switch from video mode to image mode, if necessary, select  > .
- 2 To capture an image, press the capture key. Do not move the device before the image is saved and the final image displayed.

Capture images with secondary camera


To capture an image, select . Do not move the device before the image is saved and the final image displayed.

To zoom in or out when capturing an image, use the zoom slider.

To leave the camera open in the background and use other applications, press the menu key. To return to the camera, press and hold the capture key.

On-screen controls and indicators for still image capture

The still image viewfinder displays the following:

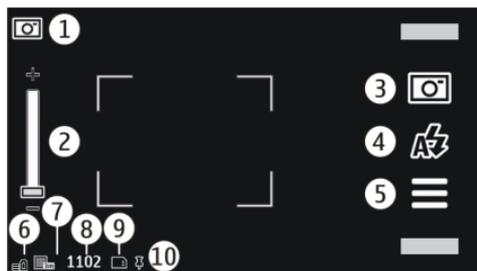

- 1 Capture mode indicator
- 2 Zoom slider. To turn the zoom slider on and off, tap the screen.
- 3 Capture icon. Tap to capture an image.
- 4 Flash mode. Tap to change settings.
- 5 Capture settings. Tap to change settings.
- 6 Battery charge level indicator
- 7 Image resolution indicator

- 8 Image counter (the estimated number of images you can capture using the current image quality setting and available memory)
- 9 Memory in use. Depending on the setup of your device, there are the following options: device memory (📁).
- 10 GPS signal indicator

Location information

You can automatically add capture location information to the file details of the captured material. For example, in the **Photos** application, you can then view the location where an image was captured.

Select **Menu > Applications > Camera**.

Add location information to all captured material

Select **Options > Settings > Show GPS info > On**. The location information is available only for images captured with the main camera.

It may take several minutes to obtain the coordinates of your location. The availability and quality of GPS signals may be affected by your location, buildings, natural obstacles, and weather conditions. If you share a file that includes location information, also the location information is shared, and your location may be visible to third parties viewing the file. The device requires network services to acquire location information.

Location information indicators:

 — Location information unavailable. GPS stays active in the background for several minutes. If a satellite connection is made and the indicator changes to  within that time, all the images captured and video clips recorded during that time are tagged based on the received GPS positioning information.

 — Location information is available. Location information is added to the file details.

Files with location information are indicated with  in the **Photos** application.

After capturing an image

After you capture an image, select from the following options (available only if you have selected **Options > Settings > Show captured image > Yes**):

 — Send the image in a multimedia or e-mail message, or through connection methods such as Bluetooth connectivity.

 — Upload the image to a compatible online album.

 **Delete** — Delete the image.

To use the image as wallpaper in the home screen, select **Options > Use image > Set as wallpaper**.

To set the image as a default call image to be used for every call situation, select **Options > Use image > Set as call image**.

To assign the image to a contact, **Options > Use image > Assign to contact**.

To return to the viewfinder to capture a new image, press the capture key.

Flash and video light

Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.

The camera of your device has a dual LED flash for low light conditions.

To select the desired flash mode, tap the current flash mode indicator, which is one of the following:  **Automatic**,  **Reduce red**,  **On**, and  **Off**.

Avoid touching the flash LEDs when the back cover has been removed. The LEDs may get hot after prolonged usage.

Video light

To increase light levels when recording video in low light, select .

Scenes

A scene helps you to find the right colour and lighting settings for the current environment. The settings of each scene have been set according to a certain style or environment.

The default scene in image and video modes is indicated with **A** (Automatic).

To change the scene, select  > **Scene mode** and a scene.

To create your own scene suitable for a certain environment, select **User defined** and **Edit**. In the user defined scene, you can adjust different lighting and colour settings.

To copy the settings of another scene, select **Based on scene mode** and the desired scene. To save the changes and return to the scenes list, select **Back**.

To activate your own scene, select **User defined** > **Select**

Capture images in a sequence

Select **Menu** > **Applications** > **Camera**.

Sequence mode is available only in the main camera.

To start capturing images in a quick sequence, select  > **Sequence**. To close the settings window, select . Press and hold the capture key. The device captures images until you select **Stop** or until the memory runs out.

The captured images are displayed in a grid. To view an image, select the image. To return to the sequence mode viewfinder, press the capture key.

You can also use sequence mode with the self-timer.

To deactivate sequence mode, select  > **Single shot**.

You in the image — self-timer

Use the self-timer to delay the capture so that you can include yourself in the image.

To set the self-timer delay, select  >  and the delay needed before the image is captured.

To activate the self-timer, select **Activate**. The stopwatch icon on the screen blinks and the remaining time is displayed when the timer is running. The camera captures the image after the selected delay elapses.

To switch off the self-timer, select  >  > .

Tip: Select **2 seconds** to keep your hand steady when capturing an image.

Video recording

Record a video clip

- 1 To switch from image mode to video mode, if necessary, select  > .
- 2 To start recording, press the capture key, or select . A red record icon is displayed.
- 3 To pause recording, select **Pause**. To resume, select **Continue**. If you pause recording and do not press any key within one minute, the recording stops.
To zoom in or out, use the zoom keys.

- To stop recording, press the capture key. The video clip is automatically saved in **Photos**.

Video recording on-screen controls and indicators

The video viewfinder displays the following:



- Capture mode indicator
- Audio mute on indicator
- Capture icon. Select to record video clips.
- Video light indicator
- Recording settings. Select to change settings.
- Battery charge level indicator
- Video quality indicator. To change this setting, select **Options** > **Settings** > **Video quality**.
- Video clip file type
- Available recording time. When you are recording, the current video length indicator also shows the elapsed and remaining time.
- The location to which the video clip is saved
- GPS signal indicator

After recording a video clip

After you record a video clip, select from the following options (available only if you have selected **Options** > **Settings** > **Show last captured video** > **Yes**):

- Play** — Play the video clip you just recorded.
- Upload** — Upload the image to a compatible online album.
- Delete** — Delete the video clip.

To return to the viewfinder to record a new video clip, press the capture key.

Camera settings

Still image camera settings

To change the main settings, in image mode, select **Options** > **Settings** and from the following:

- Image quality** — Set the resolution. The higher the image resolution, the more memory the image consumes.
- Show captured image** — View the image after it is captured, or continue image capturing immediately.
- Default image name** — Define the default name for captured images.
- Capture tone** — Set the tone that sounds when you capture an image.
- Memory in use** — Select where to store your images.
- Show GPS info** — To add GPS location coordinates to each image file, select **On**. Receiving a GPS signal may take time, or the signal may not be available.

Auto-rotate images — Select whether you want images that are captured when the device is held upright to be rotated when you open them in Photos.

Restore camera settings — Restore the camera settings to the default values.

Video settings

To change the main settings, in video mode, select **Options > Settings** and from the following:

Video quality — Set the quality of the video clip. Select **Sharing**, if you want to send the video clip using a multimedia message. The clip is recorded with QCIF resolution, in the 3GPP file format, and the size is limited to 600 kB (approximately one minute). You may not be able to send video clips saved in the MPEG4 file format in a multimedia message.

Show GPS info — To add GPS location coordinates to each file, select **On**. Receiving the GPS signal may take time, or the signal may not be available.

Audio recording — Record sound.

Show last captured video — View the first frame of the recorded video clip after the recording stops. To view the entire video clip, select **Play** .

Default video name — Enter the default name for recorded video clips.

Memory in use — Select where to store your video clips.

Restore camera settings — Restore the camera settings to the default values.

Photos

About Photos

With Photos, you can view images and video clips you have captured and recorded, downloaded from the web, received in a multimedia or e-mail message, saved on a memory card, or copied to your device memory from a memory card or other sources.

Select **Menu > Photos** and from the following:

Captured — View all the images and video clips you have captured and recorded.

Months — View images and video clips categorised by the month they were captured or recorded. Applicable only for content captured or recorded with your device.

Albums — View the default albums and the ones you have created.


Tags — View the tags you have created for each item.

All — View all images and video clips on your device.

Share online — Post your images or video clips to the web.

View images and videos

Select **Menu > Photos**.

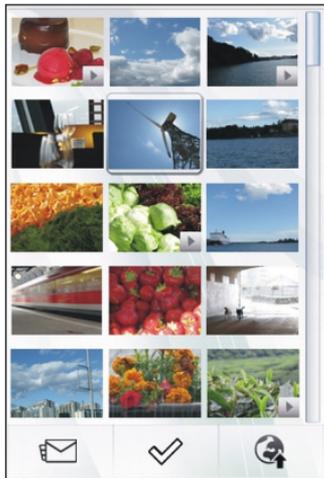

Images and video clips can also be sent to you from a compatible device. To be able to view a received image or video clip in Photos, you must first save it.

The images and video clip files are ordered by date and time. The number of files is displayed. To browse the files, swipe up or down.

To open a file, select the file. To view the toolbar, tap the image. To zoom in the image, use the zoom slider. The zooming ratio is not stored permanently.

To edit an image or a video clip, select the file and **Options > Edit**.

To view the details of an image, select **Options > Details**.

To print your images on a compatible printer, select **Options > Print**.

View and edit file details

Select **Menu > Photos**.

To view and edit the properties of an image or a video clip, select the file, **Options > Details**, and from the following:

Name — View the thumbnail image of the file and the current file name. To edit the file name, select the file name field.

Description — View a free-form description of the file. To add a description, select the field.

Tag — View the currently used tags. To add more tags to the current file, select **New tag**.

Album — View in which albums the current file is located.

Location — View GPS location information, if available.

Resolution — View the size of the image in pixels.

Duration — View the length of the video clip.

Licence — View the DRM rights of the current file.

The available options may vary.

Organise images and video clips

Select **Menu > Photos**. You can organise files as follows:

To view items in the Tags view, add tags to the items.

To view items by months, select **Months**.

To create an album to store items, select **Albums > Options > New album**.

To add an image or a video clip to an album, go to the item, and select **Options > Add to album**.

To delete an image or video clip, go to the item, and select **Options > Delete**.

Photos toolbar

From the active toolbar, select the desired option. The available options vary depending on the view you are in and whether you have selected an image or a video clip.

When viewing an image or a video clip in full screen mode, tap the item to show the toolbar and the zoom slider.

Select an image or a video clip and from the following:



Send the image or video clip.



Mark the image or video clip.



Upload the image or video clip to a compatible online album (only available if you have set up an account for a compatible online album).



Delete the image or video clip.



Rename the image or video clip.

View images as a slideshow.

Create a new album.

Albums

Select **Menu > Photos and Albums**.

With albums, you can conveniently manage your images and video clips.

To create a new album, select .

To add an image or a video clip to an album, select the item and **Options > Add to album**. A list of albums opens. Select the album to which you want to add the image or video clip. The item you added to the album is still visible in Photos.

To remove an image or a video clip from an album, select the album and the item, and select **Options > Remove from album**.

Tags

Select **Menu > Photos**.

Use tags to categorise media items in Photos. Tag browser shows the currently used tags and the number of items associated with each tag.

To assign a tag to an image, select the image and **Options > Add tag**. To create a tag, select **New tag**.

To see the tags you have created, select **Tags**. The size of the tag name corresponds to the number of items the tag is assigned to. To view all the images associated with a tag, select the tag from the list.

To view the list in alphabetical order, select **Options > Name**.

To view the list in most frequently used order, select **Options > Popularity**.

To remove an image from a tag, select the tag and the image, and select **Options > Remove from tag**.

Slide show

Select **Menu > Photos**.

To view your images as a slide show, select an image and **Options > Slide show > Play**. The slide show starts from the selected file.

To view only a selection of images as a slide show, select **Options > Mark/Unmark > Mark** to mark the images. To start the slide show, select **Options > Slide show > Play**.

To resume a paused slide show, select **Continue**.

To end the slide show, select **Back**.

Before starting the slide show, to adjust the slide show settings, select **Options > Slide show > Settings** and from the following:

Image order — Display images from older to newer or vice versa.

Song — Select a music file from the list.

Transition speed — Adjust the tempo of the slide show.

To adjust the volume during the slide show, use the volume keys.


TV-out mode

To view the captured images and recorded video clips on a compatible TV, use a Nokia Video Connectivity Cable.

Before viewing the images and video clips on a TV, you may need to configure the TV-out settings and aspect ratio.

To view images and video clips on a TV, do the following:

- 1 Connect a Nokia Video Connectivity Cable to the video input of a compatible TV.
- 2 Connect the other end of the Nokia Video Connectivity Cable to the Nokia AV Connector of your device.
- 3 You may need to select the cable mode.
- 4 Select **Menu > Photos**, and browse for the file you want to view.

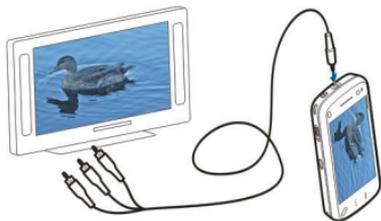

All audio, including active calls, stereo video clip audio, keypad tones, and ringing tone is routed to the TV when the Nokia Video Connectivity Cable is connected to the device. You can use the device microphone normally.

For content other than video clips, the TV screen displays what is displayed on the screen of your device. Video clips are only displayed on the TV screen, not on the device screen.

You can view images as a slide show on the TV. All items in an album or marked images are displayed on the TV in full screen mode while the selected music plays.

The quality of the TV image may vary due to differing screen resolutions.

You cannot use the TV as the camera viewfinder in TV-out mode.

Wireless radio signals, such as incoming calls, may cause interference in the TV image.

Edit images Image editor

To edit an image, in Photos, scroll to the image, and select **Options > Edit**.

To add effects to your images, select **Options > Add effect**. You can crop and rotate the image; adjust the brightness, colour, contrast, and resolution; and add effects, text, clip art, or a frame to the image.

Crop image

To crop an image, select **Options > Add effect** and **□ (Crop)**.

To crop the image manually, select **Manual**. A cross appears in the upper left and lower right corner of the image. To adjust the crop borders, drag the crosses from the corners. To set the crop area, select **Set**. When the crop area is set, you can drag to move the crop area without changing the size or aspect ratio. When you are satisfied with the crop area, select **Crop**.

If you select a predefined aspect ratio, the selected aspect ratio is locked when you adjust the crop borders.

Reduce red-eye

To reduce red-eye in an image, select **Options > Add effect** and  (Red-eye reduction).

Drag the cross onto the eye, and select **Options > Set**. Drag to resize and move the loop to outline the eye, and select **Options > Reduce red-eye effect**. When you have finished editing the image, select **Done**.

To save the changes and return to the previous view, select **Back**.

Edit video clips

The video editor supports 3GP and MP4 video file formats, and AAC, AMR, MP3, and WAV audio file formats. It does not necessarily support all features of a file format or all the variations of file formats.

To edit video clips in Photos, scroll to a video clip, select **Options > Edit**, and from the following:

Merge — Add an image or a video clip to the beginning or the end of the selected video clip.

Change sound — Add a new sound clip, and replace the original sound in the video clip.

Add text — Add text to the beginning or the end of the video clip.

Cut — Trim the video and mark the sections you want to keep in the video clip.

To take a snapshot of a video clip, in the cut video view, select **Options > Take snapshot**.

Image print

You can print images from your device using a printer compatible with PictBridge. You can only print images that are in the JPEG file format.

To print images in Photos, camera, or image viewer, mark the images, and select **Options > Print**.

Connect to printer

In the Print submenu, select whether you want to print the image using Bluetooth connectivity or using a compatible USB data cable.

If you want to print using a USB data cable, first connect your device to a compatible printer using the USB data cable, and select **Image transfer** as the USB connection mode.

Print preview

After you select the printer, the selected images are displayed using predefined layouts.

To change the layout, scroll left or right to browse through the available layouts for the selected printer. If the images do not fit on a single page, scroll up or down to display the additional pages.

To select the paper size, select **Paper size**.

To select the print quality, select **Print quality**.

Share online

You can share images and video clips in compatible online albums, weblogs, or in other compatible online sharing services on the web. You can upload content, save unfinished posts as drafts and continue later, and view the content of the albums. The supported content types may vary depending on the service provider.

To share images and videos online, you must have an account with an online image sharing service. You can usually subscribe to such a service on the web page of your service provider. Contact your service provider for more information.

Using this service may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

The recommended connection method is WLAN.

To upload a file from Photos to an online service, select **Menu > Photos**, the desired file and **Options > Send > Upload** or **Share on Ovi**.

For more information on the application and compatible service providers, see the Nokia product support pages or your local Nokia website.

Music

Warning:

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Play a song or a podcast

Select **Menu > Music > Music library**.

To play a song or a podcast:

- 1 Select categories to navigate to the song or podcasts you want to hear.
- 2 To play an item, select the item from the list.

To pause playback, tap ; to resume, tap .

To fast-forward or rewind, tap and hold  or .



To go to the next item, tap **▶▶**. To return to the beginning of the item, tap **◀◀**. To skip to the previous item, tap **◀◀** again within 2 seconds after a song or podcast has started.

To turn random play (**⌘**) on or off, select **Options > Shuffle play**.

To repeat the current item (**↺**), all items (**↻**), or to turn repeat off, select **Options > Repeat**.

If you play podcasts, shuffle and repeat are automatically turned off.

To modify the tone of the music playback, select **Options > Equaliser**.

To modify the balance and stereo image or to enhance the bass, select **Options > Settings**.

To return to the home screen and leave the player playing in the background, press the end key.

To close the player, select **Options > Exit**.

Playlists

Select **Menu > Music > Music library and Playlists**.

To view details of the playlist, select **Options > Playlist details**.

Create a playlist

- 1 Select **Options > New playlist**.
- 2 Enter a name for the playlist, and select **OK**.
- 3 To add songs now, select **Yes**; or to add the songs later, select **No**.
- 4 If you select **Yes**, select artists to find the songs you want to add to the playlist. Select **Add** to add items.
To show the song list under an artist title, select **Expand**. To hide the song list, select **Collapse**.
- 5 When you have made your selections, select **Done**.
The playlist is saved to the mass memory of your device.

To add more songs later, when viewing the playlist, select **Options > Add songs**.

To add songs, albums, artists, genres, and composers to a playlist from the different views of the music menu, select an item and **Options > Add to playlist > Saved playlist** or **New playlist**.

To remove a song from a playlist, select **Options > Remove**.

This does not delete the song from the device; it only removes it from the playlist.

To reorder songs in a playlist, select the song you want to move, and **Options > Reorder playlist**.

To grab a song and drop it to a new position, select the song in the desired position and **Drop**.

To finish reordering the playlist, select **Done**.

Podcasts

Select **Menu > Music > Music library and Podcasts**.

The podcast menu displays the podcasts available in the device.

Podcast episodes have three states: never played, partially played, and completely played. If an episode is partially played, it plays from the last playback position the next time it is played. If an episode has never been played or completely played, it plays from the beginning.

Transfer music from a computer

You can use the following methods to transfer music:

- To install Nokia Music to manage and organise your music files, download the PC software from www.music.nokia.com/download, and follow the instructions.
- To view your device on a computer as a mass memory device where you can transfer any data files, make the connection with a compatible USB data cable or Bluetooth connectivity. If you are using a USB data cable, select **Mass storage** as the connection mode.
- To synchronise music with Windows Media Player, connect a compatible USB data cable, and select **Media transfer** as the connection mode.

To change the default USB connection mode, select **Menu > Settings and Connectivity > USB > USB connection mode**.

Ovi Music

With Ovi Music (network service), you can search, browse, purchase, and download music to your device.

The Ovi Music service will eventually replace the Music store.

Select **Menu > Music > Music store**.

To download music, you first need to register for the service.

Downloading music may involve additional costs and the transmission of large amounts of data (network service). For

information about data transmission charges, contact your network service provider.

To access Ovi Music, you must have a valid internet access point in the device. You may be asked to select the access point to use when connecting to Ovi Music.

Select the access point

Select **Default access point**.

The availability and appearance of Ovi Music settings may vary. The settings may also be predefined and you may not be able to modify them. When browsing Ovi Music, you may be able to modify the settings.

Modify Ovi Music settings

Select **Options > Settings**.

Ovi Music is not available for all countries or regions.

FM transmitter

About the FM transmitter

The availability of the FM transmitter may vary by country. At the time of writing, the FM transmitter may be used in the following European countries: Austria, Belgium, Bulgaria, Czech Republic, Denmark, Estonia, Finland, Germany, Iceland, Ireland, Lithuania, Liechtenstein, Luxembourg, Malta, Netherlands, Norway, Portugal, Spain, Switzerland, Sweden, Turkey, and United Kingdom. For the latest information, and the list of non-European countries, see www.nokia.com/fmtransmitter.

With the FM transmitter, you can play songs that are stored in your device through any compatible FM radio, such as a car radio or a home stereo system.

The operating frequency of the transmitter ranges from 88.1 to 107.9 MHz.

The operating distance of the FM transmitter is up to a maximum of 2 metres (6.5 feet). Obstructions, such as walls, other electronic devices, or public radio stations may cause interference to the transmission. The FM transmitter may cause interference to nearby FM radios operating on the same frequency. To avoid interference, always search for a free FM frequency on the receiving radio before using the FM transmitter.

The FM transmitter cannot be used at the same time as the FM radio of your device.

Play a song using FM transmitter

Select **Menu > Music > Music library**.

To play a song stored in your device through a compatible FM radio, do the following:

- 1 Select a song or a playlist to be played.
- 2 In the Now playing view, select **Options > FM transmitter**.
- 3 To activate the FM transmitter, select **FM transmitter > On**, and enter a frequency that is free from other transmissions. For example, if the frequency 107.8 MHz is free in your area and you tune your FM radio to it, you must also tune the FM transmitter to 107.8 MHz.

- 4 Tune the receiving radio to the same frequency, and select **Options** > **Exit**.

To adjust the volume, use the volume function in the receiving device.

When the transmitter is active and transmitting,  is displayed in the home screen. If the transmitter is active, but not transmitting anything,  is displayed and a periodic tone sounds. If the transmitter does not transmit anything for several minutes, the transmitter is automatically deactivated.

FM transmitter settings

Select **Menu** > **Settings** > **Connectivity** > **FM transmitter**.

To activate the FM transmitter, select **FM transmitter** > **On**.

To set a frequency manually, select **Frequency** and enter the desired value.

To list the previously used frequencies, select **Options** > **Last frequencies**.

Nokia Podcasting

About Nokia Podcasting

With the Nokia Podcasting application, you can discover, subscribe to, and download podcasts over the air, and play, manage, and share audio and video podcasts.

Downloading and sharing podcast requires network support.

Search podcasts

The search service helps you to find podcasts by keyword or title.

The search service uses the podcast search service URL that you defined in **Podcasting** > **Options** > **Settings** > **Connection** > **Search service URL**.

To search for podcasts, select **Menu** > **Applications** > **Podcasting** and **Search**, and enter the desired keywords.

Tip: The search service looks for podcast titles and keywords in descriptions, not specific episodes. General topics, such as football or hip-hop, usually give better results than a specific team or artist.

To subscribe to marked channels and add them to your list of subscribed podcasts, select **Subscribe**. You can also add a podcast by selecting its title.

To start a new search, select **Options** > **New search**.

To go the website of a podcast, tap the podcast, and select **Options** > **Open web page** (network service).

To see the details of a podcast, tap the podcast, and select **Options** > **Description**.

To send a podcast to another compatible device, tap the podcast, and select **Options** > **Send**.

Play and manage podcasts

To display the available episodes from the selected podcast, in **Podcasts**, select **Open**.

Under each episode, you see the file format, the size of the file, and time of the upload.

When the podcast is fully downloaded, to play the full episode, select it and **Play**.

To update the selected podcast or marked podcasts, for a new episode, select **Options** > **Update**.

To stop the updating, select **Options** > **Stop update**.

To add a new podcast by entering the URL of the podcast, select **Options** > **New podcast**.

If you do not have an access point defined or if during packet data connection you are asked to enter a user name and password, contact your service provider.

To edit the URL of the selected podcast, select **Options** > **Edit**.

To delete a downloaded podcast or marked podcasts from your device, select **Options** > **Delete**.

To send the selected podcast or marked podcasts to another compatible device as .opml files as a multimedia message or by Bluetooth connectivity, select **Options** > **Send**.

To update, delete, and send a group of selected podcasts at once, select **Options** > **Mark/Unmark**, mark the desired podcasts, and select **Options** to choose the desired action.

To open the website of the podcast (network service), select **Options** > **Open web page**.

Some podcasts provide the opportunity to interact with the creators by commenting and voting. To connect to the internet to do this, select **Options** > **View comments**.

Downloads

After you have subscribed to a podcast, from directories, search, or by entering a web address, you can manage, download, and play episodes in **Podcasts**.

To see the podcasts you have subscribed to, select **Podcasting** > **Podcasts**.

To see individual episode titles (an episode is a particular media file of a podcast), select the podcast title.

To start a download, select the episode title.

To download or to continue to download selected or marked episodes, select **Options** > **Download**. You can download multiple episodes at the same time.

To play a portion of a podcast during download or after partial downloading, select the podcast and **Options** > **Play preview**.

Fully downloaded podcasts can be found in the Podcasts folder, but are not shown until the library is refreshed.

Directories

To open directories, select **Menu > Applications > Podcasting and Directories**.

Directories help you find new podcast episodes to which to subscribe.

The contents of the directories change. Select the desired directory to update it (network service). The colour of the directory changes, when the update is complete.

Directories can include podcasts listed by popularity or themed folders.

To open a themed folder, select the folder. A list of podcasts is displayed.

To subscribe to a podcast, select the title and **Subscribe**. After you have subscribed to episodes of a podcast, you can download, manage, and play them in the podcasts menu.

To add a new web directory or folder, select **Options > New > Web directory or Folder**.

Enter the title and URL of the outline processor markup language (OPML) file, and select **Done**.

To edit the selected folder, web link, or web directory, select **Options > Edit**.

To import an OPML file stored on your device, select **Options > Import OPML file**.

Select the location of the file, and import it.

To send a directory folder as a multimedia message or using Bluetooth connectivity, select the folder and **Options > Send**.

When you receive a message with an OPML file using Bluetooth connectivity, open the file to save the file into the Received folder in Directories. Open the folder to subscribe to any of the links to add to your podcasts.

Podcasting settings

To open Nokia Podcasting, select **Menu > Applications > Podcasting**.

Before using Nokia Podcasting, define your connection and download settings.

The recommended connection method is WLAN. Check with your service provider for terms and data service fees before using different connection methods. For example, a flat rate data plan can allow large data transfers for one monthly fee.

Connection settings

To edit the connection settings, select **Options > Settings > Connection** and from the following:

Default access point — Select the access point to define your connection to the internet.

Search service URL — Define the podcast search service URL to be used in searches.

Download settings

To edit the download settings, select **Options > Settings > Download** and from the following:

Save to — Define the location where you want to save your podcasts.

Update interval — Define how often podcasts are updated.

Next update date — Define the date of the next automatic update.

Next update time — Define the time of the next automatic update.

Automatic updates only occur if a specific default access point is selected and Nokia Podcasting is running. If Nokia Podcasting is not running, the automatic updates are not activated.

Download limit (%) — Define the percentage of memory that is reserved for podcast downloads.

If limit exceeds — Define what to do if the downloads exceed the download limit.

Setting the application to retrieve podcasts automatically may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

To restore the default settings, select **Options > Restore default** in the settings view.

FM radio

Listen to the radio

Select **Menu > Music > Radio**.

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset or accessory needs to be attached to the device for the FM radio to function properly.

When you open the application for the first time, you can choose to have the local stations tuned automatically.

To listen to the next or the previous station, select  or .

To mute the radio, select .

Select **Options** and from the following:

Stations — View saved radio stations.

Tune stations — Search for radio stations.

Save — Save the radio station.

Activate loudspeaker or **Deactivate loudspeaker** — Turn the loudspeaker on or off.

Alternative frequencies — Select whether you want the radio to automatically search for a better RDS frequency for the station if the frequency level becomes low.

Play in background — Return to the home screen with the radio playing in the background.

Manage radio stations

Select Menu > Music > Radio.

To listen to saved stations, select **Options** > **Stations**, and select a station from the list.

To remove or rename a station, select **Options** > **Stations** > **Options** > **Delete** or **Rename**.

To set the desired frequency manually, select **Options** > **Tune stations** > **Options** > **Manual tuning**.

Videos

You can download and stream video clips over the air from compatible internet video services (network service) using a packet data or WLAN connection. You can also transfer video clips from a compatible PC to your device to view them.

Downloading videos may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

Your device may have predefined services.

Service providers may provide free content or charge a fee. Check the pricing in the service or from the service provider.

Download and view video clips

Select Menu > Videos & TV.

Connect to video services

To connect to a service to install video services, select **Video feeds** > **Video directory** and the desired video service.

To add a video feed manually, in the Video feeds view, select **Options** > **Add feed** > **Add manually**.

View a video clip

To browse the content of installed video services, select **Video feeds**.

The content of some video services is divided into categories. To browse video clips, select a category.

To search for a video clip in the service, select **Video search**. Search may not be available in all services.

Some video clips can be streamed over the air, but others must be first downloaded to your device. To download a video clip, select the Download icon. Downloads continue in the background if you exit the application. The downloaded video clips are saved in My videos.

To stream a video clip or view a downloaded one, select the Play icon.

To view the control keys during playback, tap the screen. To adjust the volume, use the volume key.

Schedule downloads

To schedule an automatic download for video clips in a service, select **Options > Schedule downloads**.

New video clips are automatically downloaded daily at the time you define.

To cancel scheduled downloads, select **Manual download** as the download method.

Video feeds

Select **Menu > Videos & TV**.

The content of the installed video services is distributed using RSS feeds. To view and manage your feeds, select **Video feeds**.

Select **Options** and from the following:

Feed subscriptions — Check your current feed subscriptions.

Feed details — View information about a video feed.

Add feed — Subscribe to new feeds. Select **Via Video directory** to select a feed from the services in the video directory.

Refresh feeds — Refresh the content of all feeds.

Manage account — Manage your account options for a particular feed, if available.

Move — Move video clips to a desired location.

To view the video clips available in a feed, select a feed from the list.

My videos

My videos is a storage place for all videos. You can list downloaded videos and video clips recorded with the device camera in separate views.

To open a folder and view video clips, select the folder. When a video clip is playing, to use the control keys for controlling the player, tap the screen.

To adjust the volume, press the volume key.

Select **Options** and from the following:

Resume download — Resume a paused or failed download.

Cancel download — Cancel a download.

Video details — View information about a video clip.

Memory status — View the amount of available and used memory.

Sort by — Sort video clips. Select the desired category.

Move and copy — Move or copy video clips. Select **Copy** or **Move** and the desired location.

Transfer videos from your PC

Transfer your own video clips from compatible devices using a compatible USB data cable. Only video clips which are in a format supported by your device are shown.

- 1 To view your device on a PC as a mass memory device where you can transfer any data files, connect using a USB data cable.
- 2 Select **Mass storage** as the connection mode.
- 3 Select the video clips you want to copy from your PC.
- 4 Transfer the video clips to **E:\My Videos** in the mass memory of your device, or to **F:\My Videos** in a compatible memory card, if available.

The transferred video clips appear in the My videos folder.

Video settings

Select **Menu** > **Videos & TV**.

Select **Options** > **Settings** and from the following:

Video service selection — Select the video services that you want to appear in the main view. You can also add, remove, edit, and view the details of a video service. You cannot edit preinstalled video services.

Connection settings — To define the network destination used for the network connection, select **Network connection**. To select the connection manually each time a network connection is opened, select **Always ask**.

Parental control — Set an age limit to videos. The required password is the same as the device lock code. The factory setting for the lock code is 12345. In video-on-demand services, videos which have the same or a higher age limit than you have set, are hidden.

Preferred memory — Select where to save downloaded videos. If the selected memory becomes full, the device saves the videos in another memory.

Thumbnails — Select whether to download and view thumbnail images of video feeds.

Personalise your device

You can personalise your device by changing the standby mode, main menu, tones, themes, or font size. Most of the personalisation options, such as changing the font size, can be accessed through the device settings.

Change the look of your device

Select **Menu** > **Settings and Themes**.

You can use themes to change the look of the display, such as the background image.

To change the theme that is used for all the applications in your device, select **General**. To preview a theme before activating it, go to the theme, and wait for a few seconds. To activate the theme, select **Options** > **Set**. ✓ indicates the active theme.

To have an image or a slide show of changing images as the background in the home screen, select **Wallpaper** > **Image** or **Slide show**.

To change the image displayed in the home screen when a call is received, select **Call image**.

Profiles

You can use profiles to set and customise the ringing tones, message alert tones, and other tones for different events, environments, or caller groups. The name of the selected

profile is displayed at the top of the home screen. If the General profile is in use, only the date is displayed.

Select **Menu** > **Settings and Profiles**.

Go to a profile, and select from the following:

Activate — Activate the profile.

Personalise — Personalise the profile.

Timed — Set the profile to be active until a certain time within the next 24 hours.

When the time expires, the profile changes back to the previously active non-timed profile. In the home screen,  indicates a timed profile. The Offline profile cannot be timed.

To create a new profile, select **Options** > **Create new**.

3-D tones

With 3-D tones, you can enable three-dimensional sound effects for ringing tones. Not all ringing tones support 3-D effects.

Select **Menu** > **Settings and Profiles**. Go to a profile, and select **Options** > **Personalise**.

To enable a 3-D effect that is applied to the ringing tone, select **3-D ringing tone effect** and the desired effect.

To change the 3-D echo effect that is applied to the ringing tone, select **3-D ringing tone echo** and the desired effect.

To listen to a 3-D effect before selecting it, go to the effect, and wait for a second.

Modify the home screen

To modify items, such as e-mail notifications, in the home screen, select **Options** > **Edit content**.

To select an image or image slide show as the background image in the home screen, select **Menu** > **Settings** and **Themes** > **Wallpaper**.

To change the clock shown in the home screen, tap the clock in the home screen, and select **Options** > **Settings** > **Clock type**.

Modify the main menu

In the menu you can access the functions in your device. To open the main menu, press the menu key.

To change the menu view, select **Options** > **List view** or **Grid view**.

To reorganise the main menu, select **Options** > **Organise**. For example, to move a menu icon to another folder, select the icon, **Options** > **Move to folder**, and the new folder. You can also drag and drop an icon to a new location in the main menu.

Applications

Calendar

To open the calendar, select **Menu** > **Calendar**.

Calendar views

To switch between month, week, and to-do note view, select **Options** > **Change view** > **Day**, **Week**, or **To-do**.

To change the starting day of the week, the view that is shown when you open the calendar, or the calendar alarm settings, select **Options** > **Settings**.

To go to a certain date, select **Options** > **Go to date**.

Calendar toolbar

From the toolbar, select from the following:

-  **Next view** — Select the month view.
-  **Next view** — Select the week view.
-  **Next view** — Select the day view.
-  **Next view** — Select the to-do view.
-  **New meeting** — Add a new meeting reminder.
-  **New to-do note** — Add a new to-do note.

Create a calendar entry

- 1 To add a new calendar entry, tap the desired date, select **Options** > **New entry** and from the following:

Meeting — Add a reminder of your meeting.

Meeting request — Create and send a new meeting request. You must have a mailbox set up for sending requests.

Memo — Write a general note for the day.

Anniversary — Add a reminder of birthdays or special dates (entries are repeated annually).

To-do note — Add a reminder of a task that must be done by a specific date.

- 2 Fill in all the fields. Tap a field to enter the text. To close the text input, select .

To add a description to an entry, select **Options** > **Add description**.

- 3 To save the entry, select **Done**.

When the calendar alarm sounds, select **Silence** to mute the alarm.

To stop the calendar alarm, select **Stop**.

To set the alarm to snooze, select **Snooze**.

To define the period after which the calendar alarm sounds again when set to snooze, select **Options** > **Settings** > **Alarm snooze time**.

Manage calendar entries

To delete several events at a time, open the month view, and select **Options** > **Delete entry** > **Before selected date or All entries**.

To mark a task as completed in the to-do view, select the task and **Options** > **Mark as done**.

To send a calendar note to a compatible device, select **Options** > **Send**.

If the other device is not compatible with Coordinated Universal Time (UTC), the time information of received calendar entries may not be displayed correctly.

Clock

Set time and date

Select **Menu** > **Applications** > **Clock**.

Select **Options** > **Settings** and from the following:

Time — Set the time.

Date — Set the date.

Automatic time update — Set the network to automatically update the time, date, and time zone information for your device (network service).

Alarm clock

Select **Menu** > **Applications** > **Clock**.

To set a new alarm, select **New alarm**. Set the alarm time. Select **Repeat** to set whether and when the alarm is repeated, and select **Done**.

To view your active and inactive alarms, select **Alarms**. When the alarm is active,  is displayed. When the alarm is repeated,  is displayed.

To remove an alarm, select **Alarms**, scroll to the alarm, and select **Options** > **Delete alarm**.

To turn off the alarm when the alarm expires, select **Stop**. To snooze the alarm, select **Snooze**.

If your device is switched off when an alarm expires, your device switches itself on and starts sounding the alarm tone.

To define the snooze time, select **Options** > **Settings** > **Alarm snooze time**.

To change the alarm tone, select **Options** > **Settings** > **Clock alarm tone**.

World clock

Select **Menu** > **Applications** > **Clock**.

To view the current time in different locations, select **World clock**. To add locations to the list, select **Options** > **Add location**.

To set your current location, scroll to a location, and select **Options** > **Set as current location**. The time in your device

is changed according to the selected location. Ensure that the time is correct and matches your time zone.

RealPlayer

With RealPlayer, you can play video clips or stream media files over the air without saving them to the device first.

RealPlayer does not necessarily support all file formats or all the variations of file formats.

Play video clips

Select **Menu** > **Applications** > **RealPlayer**.

To play a video clip, select **Video clips**, and a clip.

To list recently played files, in the application main view, select **Recently played**.

In the list of video clips, scroll to a clip, select **Options** and from the following:

Use video clip — Assign a video to a contact or set it as a ringing tone.

Mark/Unmark — Mark items in the list to send or delete multiple items at the same time.

View details — View details of the selected item, such as format, resolution, and duration.

Settings — Edit settings for video playback and streaming.

In the Video clips, Recently played and Streaming links views, the following toolbar icons may be available:

-  **Send** — Send a video clip or streaming link.
-  **Play** — Play the video clip or video stream.
-  **Delete** — Delete the video clip or streaming link.
-  **Remove** — Remove a file from the recently played list.

Stream content over the air

In RealPlayer, you can only open an RTSP link. However, RealPlayer plays a RAM file if you open an HTTP link to it in a browser.

Select **Menu > Applications > RealPlayer**.

To stream content over the air (network service), select **Streaming links** and a link. You can also receive a streaming link in a text message or multimedia message, or open a link on a web page.

Before live content begins streaming, your device connects to the site and starts loading the content. The content is not saved in your device.

RealPlayer settings

Select **Menu > Applications > RealPlayer**.

You may receive RealPlayer settings in a special message from your service provider. For more information, contact your service provider.

To select the settings for the video, select **Options > Settings > Video**.

To select whether to use a proxy server, to change the default access point, and to set the port range used when connecting, select **Options > Settings > Streaming**. For the correct settings, contact your service provider.

- 1 To edit the advanced settings, select **Options > Settings > Streaming > Network > Options > Advanced settings**.
- 2 To select the bandwidth used for a network type, select the network type and the desired value.
To edit the bandwidth yourself, select **User defined**.

Recorder



You can use the recorder to record voice memos and telephone conversations. You can also send sound clips to your friends.

Select **Menu > Applications > Recorder**.

Record a sound clip

Select .

Stop recording a sound clip

Select .

Listen to the sound clip

Select .

Send a sound clip as a message

Select **Options** > **Send**.

Record a telephone conversation

Open the recorder during a voice call, and select . Both parties hear a tone at regular intervals during recording.

Select the recording quality or where to save sound clips

Select **Options** > **Settings**.

The recorder cannot be used when a data call or GPRS connection is active.

Notes

Write notes

To write a note, select **Options** > **New note**. Tap the note field to enter text, and select .

You can save plain text files (.txt file format) you receive to Notes.

Manage notes

Select **Menu** > **Applications** > **Notes**.

Select **Options** and from the following:

Open — Open the note.

Send — Send the note to other compatible devices.

Delete — Delete a note. You can also delete several notes at once. To mark each note you want to delete, select **Options** > **Mark/Unmark**, and delete the notes.

Synchronisation — Synchronise the notes with compatible applications on a compatible device, or define the synchronisation settings.

Office

File manager

About File manager

Select **Menu** > **Applications** > **Office** > **File mgr..**

With File manager, you can browse, manage, and open files on your device, mass memory, memory card, or a compatible external drive.

The available options depend on the memory you select.

Find and organise files

Select **Menu** > **Applications** > **Office** > **File mgr..**

To find a file, select **Options** > **Find**. Enter a search text that matches the file name.

To move and copy files and folders, or to create new folders in the memory, select **Options** > **Organise** and the desired option.

To sort files, select **Options** > **Sort by** and the desired category.

Edit the memory card

You can format a memory card to erase the data on it, or you can protect the data on the memory card with a password.

Select **Menu** > **Applications** > **Office** > **File mgr..**

Rename or format a memory card

Select **Options** > **Memory card options** and the desired option.

Password protect a memory card

Select **Options** > **Memory card password**.

These options are available only if a compatible memory card is inserted in the device.

Back up files on a memory card

Select **Menu** > **Applications** > **Office** > **File mgr..**

To back up files, select the file types you want to back up on a memory card and **Options** > **Back up now**. Ensure that your memory card has enough free memory for the files that you have chosen to back up.

Format mass memory

Select **Menu** > **Applications** > **Office** > **File mgr..**

When the mass memory is reformatted, all data in the memory is permanently lost. Back up data you want to keep before formatting the mass memory. You can use Nokia Ovi

Suite to back up data to a compatible computer. Digital rights management (DRM) technologies may prevent some backup data from being restored. For more information about DRM used for your content, contact your service provider.

To format the mass memory, select **Options** > **Format mass memory**. Do not format the mass memory using PC software because it may cause degraded performance.

Formatting does not guarantee that all confidential data stored in the device mass memory is permanently destroyed. Standard formatting only marks the formatted area as available space and deletes the address to find the files again. The recovery of formatted or even overwritten data may still be possible with special recovery tools and software.

Dictionary

Select **Menu** > **Applications** > **Office** > **Dictionary**.

To translate words from one language to another, enter text in the search field. As you enter text, suggestions of words to translate are displayed. To translate a word, select the word from the list.

All languages may not be supported.

Select **Options** and from the following:

Listen — Listen to the selected word.

History — Find previously translated words from the current session.

Languages — Change the source or target language, download languages from the internet, or remove a language from the dictionary. You cannot remove the English language from the dictionary. You can have two additional languages installed, besides English.

Speech — Edit the voice feature settings. You can adjust the speed and volume of the voice.

Quickoffice

About Quickoffice

Select **Menu** > **Applications** > **Office** > **Quickoffice**.

Quickoffice consists of Quickword for viewing Microsoft Word documents, Quicksheet for viewing Microsoft Excel worksheets, Quickpoint for Microsoft PowerPoint presentations, and Quickmanager for purchasing software. You can view Microsoft Office 2000, XP, 2003, and 2007 documents (DOC, XLS, and PPT file formats) with Quickoffice. If you have the editor version of Quickoffice, you can also edit files.

Not all file formats or features are supported.

Converter

With Converter, you can convert measures from one unit to another.

The converter has limited accuracy, and rounding errors may occur.

Currency converter

Select **Menu** > **Applications** > **Office** > **Converter**.

Select **Type** > **Currency**. Before you can make currency conversions, you must select a base currency and add exchange rates. The default base currency is Home. The rate of the base currency is always 1.

- 1 Select **Options** > **Currency rates**.
- 2 The default name for the currency items is Foreign. To rename a currency, select **Options** > **Rename currency**.
- 3 Add the exchange rates for the currencies, and select **Done**.
- 4 In the other Unit field, select the currency to which you want to convert.
- 5 In the first Amount field, enter the value you want to convert. The other Amount field shows the converted value automatically.

To change the base currency, select **Options** > **Currency rates**, a currency and **Options** > **Set as base currency**.

When you change base currency, you must enter new exchange rates because all previously set exchange rates are cleared.

Convert measures

Select **Menu** > **Applications** > **Office** > **Converter**.

- 1 In the Type field, select the measure you want to use.
- 2 In the first Unit field, select the unit from which you want to convert.

- In the other Unit field, select the unit to which you want to convert.
- In the first Amount field, enter the value you want to convert.
The other Amount field shows the converted value automatically.

Calculator

Make calculations

Select **Menu** > **Applications** > **Office** > **Calculator**.

This calculator has limited accuracy and is designed for simple calculations.

To make a calculation, enter the first number of the calculation. To remove a number, select the backspace key. Select a function such as add or subtract. Enter the second number of the calculation, and select =.

Save calculations

To save the results of a calculation, select **Options** > **Memory** > **Save**. The saved result replaces the previously stored result in the memory.

To retrieve the results of a calculation from the memory and use them in a calculation, select **Options** > **Memory** > **Recall**.

To view the last saved result, select **Options** > **Last result**. Exiting the Calculator application or switching off the device

does not clear the memory. You can recall the last saved result the next time you open the Calculator application.

Zip manager



Select **Menu** > **Applications** > **Office** > **Zip**.

With Zip manager, you can create new archive files to store compressed ZIP formatted files; add single or multiple compressed files or directories to an archive; set, clear, or change the archive password for protected archives; and change settings, such as the level of compression used.

You can save the archived files in the device memory or on a memory card.

Active notes

Active notes allows you to create notes that contain images and sound or video clips. You can also link a note to a contact. The note is displayed during a call with the contact.

Create and edit notes

Select **Menu** > **Applications** > **Office** > **Active notes**.

To create a note, start writing.

To edit a note, select the note and **Options** > **Editing options**.

To add boldface, italics, or underlining to your text or change the font colour, press and hold the Shift key, and scroll to select the text. Then select **Options > Text**.

such as zoom level and page views; and send PDF files using e-mail.

Select **Options** and from the following:

Insert object — Insert images, sound or video clips, business cards, web bookmarks, and files.

Send — Send the note.

Link note to call — Select **Add contacts** to link a note to a contact. The note is displayed when making a call to or receiving a call from the contact.

Settings for Active notes

Select **Menu > Applications > Office > Active notes and Options > Settings**.

To select where to save notes, select **Memory in use** and the desired memory.

To change the layout of active notes, or to view the notes as a list, select **Change view > Grid** or **List**.

To see a note in the background when making or receiving phone calls, select **Show note during call > Yes**.

Adobe Reader

Select **Menu > Applications > Office > Adobe PDF**.

With Adobe Reader, you can read PDF documents with your device; search for text in the documents; modify settings,

Settings

Some settings may be preset for the device by your service provider, and you may not be able to change them.

Phone settings

Date and time settings

Select **Menu** > **Settings and Phone** > **Date and time**.

Select from the following:

Time — Enter the current time.

Time zone — Select your location.

Date — Enter the date.

Date format — Select the date format.

Date separator — Select the symbol that separates days, months, and years.

Time format — Select the time format.

Time separator — Select the symbol that separates hours and minutes.

Clock type — Select the clock type.

Clock alarm tone — Select the tone for the alarm clock.

Alarm snooze time — Adjust the snooze time.

Workdays — Select your working days. You can then set an alarm only for working day mornings, for example.

Automatic time update — To update the time, date, and time zone, select **On**. This network service may not be available on all networks.

Speech

Select **Menu** > **Settings** > **Phone** > **Speech**.

With Speech, you can set the language, voice, and voice properties for the message reader.

To set the language for the message reader, select **Language**. To download additional languages to your device, select **Options** > **Download languages**.

Tip: When you download a new language, you must download at least one voice for that language.

To set the speaking voice, select **Voice**. The voice depends on the selected language.

To set the speaking rate, select **Speed**.

To set the speaking volume, select **Volume**.

To view details of a voice, open the voice tab, and select the voice and **Options** > **Voice details**. To listen to a voice, select the voice and **Options** > **Play voice**.

To delete languages or voices, select the item and **Options** > **Delete**.

Message reader settings

To change the message reader settings, open the Settings tab, and define the following:

Language detection — Activate automatic reading language detection.

Continuous reading — Activate continuous reading of all selected messages.

Speech prompts — Set the message reader to insert prompts in messages.

Audio source — Listen to messages through the earpiece or loudspeaker.

Language settings

Select **Menu** > **Settings** and **Phone** > **Language**.

To change the device language, select **Phone language**.

To change the writing language, select **Writing language**.

To turn predictive text input on or off, select **Predictive text**.

Display settings

Select **Menu** > **Settings** and **Phone** > **Display**.

Select from the following:

Light sensor — Adjust the light sensor sensitivity of your device. The light sensor turns the lights on when the lighting of your location is dim and off when it is bright.

Font size — Select the size of text and icons on the display.

Welcome note / logo — Select whether you want to display a note or image when you switch on the device.

Light time-out — Set how long the light stays on when you stop using the device.

Voice commands

To activate enhanced voice commands, to start applications and profiles, press and hold the call key in the home screen.

To control your device with enhanced voice commands, press and hold the call key in the home screen, and say a voice command. The voice command is the name of the application or profile displayed in the list.

Select **Menu** > **Settings** and **Phone** > **Voice commands**.

Select **Options** and from the following:

Change command — Edit the voice commands.

Playback — Listen to the synthesised voice tag.

Remove voice command — Remove a voice command that you added manually.

Settings — Adjust the settings.

Voice command tutorial — Open the tutorial for voice commands.

Sensor settings and display rotation

When you activate the sensors in your device, you can control certain functions by turning the device.

Select **Menu** > **Settings** and **Phone** > **Sensor settings**.

Select from the following:

Sensors — Activate the sensors.

Turning control — Select **Silencing calls** and **Snoozing alarms** to mute calls and snooze alarms by turning your device so that the display faces down. Select **Auto-rotate display** to rotate the display content automatically when you turn the device on its left side or back to a vertical position. Some applications and features may not support rotating the display content.

Slide settings

Select **Menu** > **Settings and Phone** > **Phone mgmt.** > **Slide settings**.

To set the device to lock the keypad when you close the slide, select **Lock keys with slide close**.

Accessory settings

Select **Menu** > **Settings and Phone** > **Accessories**.

Some accessory connectors indicate which type of accessory is connected to the device.

Select an accessory and from the following:

Default profile — Set the profile that you want activated each time you connect a certain compatible accessory to your device.

Automatic answer — Select whether you want the device to answer an incoming call automatically after 5 seconds. If the ringing type is set to **Beep once** or **Silent**, automatic answer is disabled.

Lights — Set whether lights remain on after the time-out.

The available settings depend on the type of accessory.

TV-out settings

To change the settings for a TV-out connection, select **TV-Out** and from the following:

Default profile — Set the profile that you want activated each time you connect a Nokia Video Connectivity Cable to your device.

TV aspect ratio — Select the aspect ratio of the TV: **Normal** or **Widescreen** for widescreen TVs.

TV system — Select the analogue video signal system that is compatible with your TV.

Flicker filter — To improve image quality on the screen of your TV, select **On**. The flicker filter may not diminish image flicker on all TV screens.

Application settings

Select **Menu** > **Settings and Phone** > **Application sett..**

In application settings, you can edit the settings of some of the applications in your device.

To edit the settings, you can also select **Options** > **Settings** in each application.

Device updates

With Device updates, you can connect to a server and receive configuration settings for your device, create new server profiles, view existing software version and device information, or view and manage existing server profiles.

Select **Menu** > **Settings and Phone** > **Phone mgmt.** > **Device updates.**

If software updates over the air are supported by your network, you may also be able to request updates through the device.

You may receive server profiles and different configuration settings from your service providers and company information management department. These configuration settings may include connection and other settings used by different applications in your device.

Receive configuration settings

- 1 Select **Options** > **Server profiles.**
- 2 Go to a profile, and select **Options** > **Start configuration.**

Create a server profile

Select **Options** > **Server profiles** > **Options** > **New server profile.**

Delete a server profile

Select **Options** > **Delete.**

Security settings

Phone and SIM

Select **Menu** > **Settings and Phone** > **Phone mgmt.** > **Security settings** > **Phone and SIM card.**

Select from the following:

PIN code request — When active, the code is requested each time the device is switched on. Deactivating the PIN code request may not be allowed by some SIM cards.

PIN code, PIN2 code, and Lock code — You can change the PIN code, PIN2 code, and lock code. These codes can only include numbers from 0 to 9. Avoid using access codes similar to the emergency numbers to prevent accidental dialling of the emergency number. If you forget the PIN or PIN2 code, contact your service provider. If you forget the lock code, contact a Nokia Care point or your service provider.

Phone autolock period — To avoid unauthorised use, you can set a time-out after which the device automatically locks. A locked device cannot be used until the correct lock code is entered. To turn off the autolock period, select **None.**

Lock if SIM card changed — You can set the device to ask for the lock code when an unknown SIM card is inserted into your device. The device maintains a list of SIM cards that are recognised as the owner's cards.

Remote phone locking — Enable or disable remote lock.

Closed user group — You can specify a group of people to whom you can call and who can call you (network service).

Confirm SIM services — You can set the device to display confirmation messages when you are using a SIM card service (network service).

Certificate management

Select **Menu** > **Settings and Phone** > **Phone mgmt.** > **Security settings** > **Certificate management.**

Digital certificates should be used if you want to connect to an online bank or another site or remote server for actions

that involve transferring confidential information. They should also be used if you want to reduce the risk of viruses or other malicious software and be sure of the authenticity of software when downloading and installing software.

Select from the following:

Authority certificates — View and edit authority certificates.

Trusted site certificates — View and edit trusted site certificates.

Personal certificates — View and edit personal certificates.

Phone certificates — View and edit device certificates.

Digital certificates do not guarantee safety; they are used to verify the origin of software.

Important: Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If "Expired certificate" or "Certificate not valid yet" is shown, even if the certificate should be valid, check that the current date and time in your device are correct.

View certificate details — check authenticity

You can only be sure of the correct identity of a server when the signature and the validity period of a server certificate have been checked.

You are notified if the identity of the server is not authentic or if you do not have the correct security certificate in your device.

To check the details of a certificate, select **Options > Certificate details**. The validity of the certificate is checked, and one of the following notes may be displayed:

Certificate not trusted — You have not set any application to use the certificate.

Expired certificate — The certificate validity period has ended.

Certificate not valid yet — The certificate validity period has not yet begun.

Certificate corrupted — The certificate cannot be used. Contact the certificate issuer.

Change the trust settings

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

To change the settings for an authority certificate, select **Options > Trust settings**. Depending on the certificate, a list of the applications that can use the selected certificate is shown. For example:

Symbian installation: Yes — The certificate is able to certify the origin of a new Symbian operating system application.

Internet: Yes — The certificate is able to certify servers.

App. installation: Yes — The certificate is able to certify the origin of a new Java™ application.

To change the value, select **Options > Change trust setting**.

Security module

Select **Menu > Settings and Phone > Phone mgmt. > Security settings > Security module**.

To view or edit a security module (if available), select it from the list.

To view detailed information about a security module, select **Options > Security details**.

Restore original settings

Select **Menu > Settings and Phone > Phone mgmt. > Factory settings**.

You can reset some of the settings to their original values. To do this, you need the lock code.

After resetting, the device may take a longer time to power on. Documents and files are unaffected.

Protected content

To manage digital rights licences, select **Menu > Settings and Phone > Phone mgmt. > Security settings > Protected content**.

Digital rights management

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10, OMA DRM 1.0, and OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content.

If your device has OMA DRM-protected content, to back up both the activation keys and the content, use the backup feature of Nokia Ovi Suite.

If your device has WMDRM-protected content, both the licence and the content will be lost if the device memory is formatted. You may also lose the licence and the content if the files on your device get corrupted. Losing the licence or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.

Some licence may be connected to a specific SIM card, and the protected content can be accessed only if the SIM card is inserted in the device.

Notification lights

Select **Menu > Settings and Phone > Notification lights.**

To turn the standby breathing light on or off, select **Standby br. light.**

When the standby breathing light is turned on, the menu key lights up periodically.

To turn the notification light on or off, select **Notification light.**

When the notification light is turned on, the menu key lights up for a period you define to notify of missed events, such as missed calls or unread messages.

Application manager

About Application manager



Select **Menu > Settings and Application mgr..**

With Application manager, you can see the software packages installed in your device. You can view details of installed applications, remove applications, and define installation settings.

You can install the following types of applications and software:

- JME applications based on Java™ technology with .jad or .jar file extensions
- Other applications and software suitable for the Symbian operating system with .sis or .sisx file extensions
- Widgets with the .wgz file extension

Only install software that is compatible with your device.

Install applications

You can transfer installation files to your device from a compatible computer, download them during browsing, or receive them in a multimedia message, as an e-mail attachment, or using other connectivity methods, such as Bluetooth connectivity.

You can use Nokia Application Installer in Nokia Ovi Suite to install an application to your device.

Icons in Application manager indicate the following:



SIS or SISX application



Java application



widgets



application installed in the memory card



application installed in the mass memory

Important: Only install and use applications and other software from trusted sources, such as applications that are Symbian Signed or have passed the Java Verified™ testing.

Before installation, note the following:

- To view the application type, version number, and the supplier or manufacturer of the application, select **Options > View details**.

To view the security certificate details of the application, select **Details: > Certificates: > View details**. Control the use of digital certificates in Certificate management.

- If you install a file that contains an update or repair to an existing application, you can only restore the original application if you have the original installation file or a full backup copy of the removed software package. To restore the original application, remove the application, and install the application again from the original installation file or the backup copy.

The JAR file is required for installing Java applications. If it is missing, the device may ask you to download it. If there is no access point defined for the application, you are asked to select one.

To install an application, do the following:

- 1 To locate an installation file, select **Menu > Settings and Application mgr.**. Alternatively, search installation files using File manager, or select **Messaging > Inbox**, and open a message that contains an installation file.
- 2 In Application manager, select **Options > Install**. In other applications, select the installation file to start the installation.

During installation, the device shows information about the progress of the installation. If you install an application without a digital signature or certification, the device displays a warning. Continue installation only

if you are sure of the origin and contents of the application.

To start an installed application, locate the application in the menu, and select the application. If the application does not have a default folder defined, it is installed in the Installed apps. folder in the main menu.

To see which software packages are installed or removed and when, select **Options > View log**.

Important: Your device can only support one antivirus application. Having more than one application with antivirus functionality could affect performance and operation or cause the device to stop functioning.

After you install applications to a compatible memory card, installation files (.sis, .sisx) remain in the device memory. The files may use large amounts of memory and prevent you from storing other files. To maintain sufficient memory, use Nokia Ovi Suite to back up installation files to a compatible PC, then use the file manager to remove the installation files from the device memory. If the .sis file is a message attachment, delete the message from the Messaging inbox.

Remove applications

Select **Menu > Settings and Application mgr.**

To remove a software package, select **Installed apps. > Options > Uninstall**. Select **Yes** to confirm.

If you remove software, you can only reinstall it if you have the original software package or a full backup of the removed software package. If you remove a software package, you may no longer be able to open documents created with that software.

If another software package depends on the software package that you removed, the other software package may stop working. Refer to the documentation of the installed software package for details.

Application manager settings

Select **Menu** > **Settings** and **Application mgr..**

Select **Installation settings** and from the following:

Software installation — Select whether Symbian software that has no verified digital signature can be installed.

Online certificate check — Select to check the online certificates before installing an application.

Default web address — Set the default web address used when checking online certificates.

Calling settings

Call settings

Select **Menu** > **Settings**. Select **Calling** > **Call** and from the following:

Send my caller ID — Select **Yes** to show your phone number to the person you are calling. To use the setting agreed upon with your service provider, select **Set by network** (network service).

Send my internet call ID — Select **Yes** to show your internet call ID to the person you are calling.

Call waiting — Activate your device to notify you of incoming calls while you are in a call (network service), or check whether the function is activated.

Internet call waiting — Activate your device to notify you of a new incoming internet call while you are in a call.

Internet call alert — Select **On** to set your device to alert for incoming internet calls. If you select **Off**, you receive only a notification if you missed a call.

Reject call with message — Activate rejecting a call with a text message to inform the caller why you could not answer the call.

Message text — Write the standard text message that is sent when you reject a call.

Own video in recvd. call — Select to allow or deny video sending during a video call from your device.

Image in video call — If video is not sent during a video call, you can select a still image to be displayed instead.

Automatic redial — Set your device to make a maximum of 10 attempts to connect the call after an unsuccessful call attempt. To stop automatic redialling, press the end key.

Show call duration — Set the length of a call to be displayed during the call.

Summary after call — Set the length of a call to be displayed after the call.

Speed dialling — Activate speed dialling.

Anykey answer — Activate anykey answer.

Line in use — This setting (network service) is shown only if the SIM card supports two subscriber numbers, that is, two phone lines. Select which phone line you want to use for making calls and sending text messages. Calls on both lines can be answered irrespective of the selected line. If you select **Line 2** and have not subscribed to this network service, you are not able to make calls. When line 2 is selected, **2** is shown in the home screen.

Line change — Select to prevent line selection (network service), if supported by your SIM card. To change this setting, you need the PIN2 code.

Call divert

Select **Menu > Settings and Calling > Call divert**.

Call divert allows you to divert incoming calls to your voice mailbox or another phone number. For details, contact your service provider.

- 1 Select the type of calls to divert and a diverting option. For example, to divert all voice calls, select **Voice calls > All voice calls**.
- 2 To activate call divert, select **Activate**.
- 3 To divert calls to your voice mailbox, select **To voice mailbox**.
- 4 To divert calls to another phone number, select **To other number**, and enter the number, or select **Find** to retrieve a number saved in the contacts list.

Several diverting options can be active at the same time. When all calls are diverted,  is displayed in the home screen.

Call barring

Call barring (network service) allows you to restrict the calls that you make or receive with the device. For example, you can restrict all outgoing international calls or incoming calls when you are abroad. To change the settings, you need the barring password from your service provider.

Select **Menu > Settings and Calling > Call barring**.

When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialling), calls may be possible to the official emergency number programmed into your device. Call barring and call diverting cannot be active at the same time.

Voice call barring

Select the desired barring option and **Activate**, **Deactivate**, or **Check status**. Call barring affects all calls, including data calls.

Internet call barring

To select whether anonymous calls are allowed from the internet, select **Anonymous call barring**.

To view frequently asked questions about your device, see the product support pages at www.nokia.com/support.

Q: What is my password for the lock, PIN, or PUK codes?

A: The default lock code is 12345. If you forget the lock code, contact your device dealer. If you forget a PIN or PUK code, or if you have not received such a code, contact your network service provider.

For information about passwords, contact your access point provider, for example, a commercial internet service provider (ISP) or network service provider.

Q: How do I close an application that is not responding?

A: Select **Options** > **Show open apps.**, and go to the application using the menu key. Press and hold the menu key to open the application, and select **Options** > **Exit**.

Q: Why do images look smudgy?

A: Ensure that the camera lens protection windows are clean.

Q: Why do missing, discoloured, or bright dots appear on the screen every time I switch on my device?

A: This is a characteristic of this type of display. Some displays may contain pixels or dots that remain on or off. This is normal, not a fault.

Q: Why can't my Nokia device establish a GPS connection?

A: Establishing a GPS connection may take from a couple of seconds to several minutes. Establishing a GPS connection in a vehicle may take longer. If you are indoors, go outdoors to receive a better signal. If you are outdoors, move to a more open space. Ensure that your hand does not cover the GPS antenna of your device. If the weather conditions are bad, the signal strength may be affected. Some vehicles have tinted (athermic) windows, which may block the satellite signals.

Q: Why can't I find my friend's device while using Bluetooth connectivity?

A: Check that both devices are compatible, have activated Bluetooth connectivity, and are not in hidden mode. Check also that the distance between the two devices is not over 10 metres (33 feet) and that there are no walls or other obstructions between the devices.

Q: Why can't I end a Bluetooth connection?

A: If another device is connected to your device, you can close the connection from the other device or deactivate Bluetooth connectivity in your device. Select **Menu > Settings and Connectivity > Bluetooth > Bluetooth > Off**.

Q: Why can't I see a wireless LAN (WLAN) access point even though I know I'm within its range?

A: The WLAN access point may use a hidden service set identifier (SSID). You can only access networks that use a hidden SSID if you know the correct SSID, and have created a WLAN internet access point for the network on your Nokia device.

Q: How do I turn the wireless LAN (WLAN) off on my Nokia device?

A: The WLAN on your Nokia device is deactivated when you are not connected or trying to connect to another access point, or not scanning for available networks. To further reduce battery consumption, you can specify that your Nokia device does not scan, or scans less often, for available networks in the background. The WLAN is deactivated in between background scans.

To change the background scan settings, do the following:

- 1 Select **Menu > Settings and Connectivity > WLAN**.

- 2 To increase the background scan time interval, adjust the time in **Scan for networks**. To stop background scans, select **Show WLAN availability > Never**.

- 3 To save your changes, select **Back**.

When **Show WLAN availability** is set to **Never**, the WLAN availability icon is not displayed in the home screen. However, you can still manually scan for available WLAN networks, and connect to WLAN networks as usual.

Q: What do I do if the memory is full?

A: Delete items from the memory. If **Not enough memory to perform operation. Delete some data first. or Memory low. Delete some data from phone memory.** is displayed when you are deleting several items at the same time, delete items one by one, beginning with the smallest items.

Q: Why can't I select a contact for my message?

A: The contact card does not have a phone number, address, or e-mail address. Select **Menu > Contacts** and the relevant contact, and edit the contact card.

Q: How can I end the data connection when the device starts a data connection again and again?

A: The device may be trying to retrieve a multimedia message from the multimedia message centre. To stop the device from making a data connection, select **Menu > Messaging and Options > Settings > Multimedia message > Multimedia retrieval**. Select **Manual** to have the multimedia messaging

centre save messages to be retrieved later, or **Off** to ignore all incoming multimedia messages. If you select **Manual**, you receive a notification when you have a new message in the multimedia message centre. If you select **Off**, the device does not make any network connections related to multimedia messaging.

To set the device to use a packet data connection only if you start an application or action that needs it, select **Menu > Settings and Connectivity > Admin. settings > Packet data > Packet data connection > When needed**.

If this does not help, switch the device off and then on again.

Q: Can I use my Nokia device as a fax modem with a compatible PC?

A: You cannot use your device as a fax modem. However, with call diverting (network service), you can divert incoming fax calls to a fax number.

Q: How do I calibrate the screen?

A: The screen is calibrated at the factory. If it is necessary to recalibrate the screen, select **Menu > Settings and Phone > Touch input > Touch screen calibration**. Follow the instructions.

Green tips



Save energy

You do not need to charge your battery so often if you do the following (if available for your device):

- Close applications and data connections, for example, your Bluetooth connection, when not in use.
- Decrease the brightness of the screen.
- Set your device to enter power saver mode after the minimum period of inactivity, if available in your device.
- Deactivate unnecessary sounds, such as key tones.

Recycle

All materials of this device can be recovered as materials and energy. For information on how to recycle your old Nokia products, go to www.nokia.com/werecycle, or using a mobile device, nokia.mobi/werecycle.

Recycle packaging and user guides at your local recycling scheme.



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more information on the environmental attributes of your device, see www.nokia.com/ecodeclaration.

Product and safety information

Accessories

Warning:

Use only batteries, chargers, and accessories approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous. In particular, use of unapproved chargers or batteries may present a risk of fire, explosion, leakage, or other hazard.

For availability of approved accessories, please check with your dealer. When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.

Battery and charger information

Your device is powered by a rechargeable battery. The battery intended for use with this device is BP-4L. Nokia may make additional battery models available for this device. This device is intended for use when supplied with power from the following chargers: AC-10. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, EB, X, AR, U, A, C, K, or UB.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger, then disconnect and reconnect it to begin charging the battery. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Safe removal. Always switch the device off and disconnect the charger before removing the battery.

Proper charging. Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger, since overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

Avoid extreme temperatures. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily. Battery performance is particularly limited in temperatures well below freezing.

Do not short-circuit. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Disposal. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose as household waste.

Leak. Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. In the event of a battery leak, prevent battery liquid contact with skin or eyes. If this happens, flush the affected areas immediately with water, or seek medical help.

Damage. Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Correct use. Use the battery only for its intended purpose. Improper battery use may result in a fire, explosion, or other hazard. If the device or battery is dropped, especially on a hard surface, and you believe the battery has been damaged, take it to a service centre for inspection before continuing to use it. Never use any charger or battery that is damaged. Keep your battery out of the reach of small children.

Nokia battery authentication guidelines

Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from a Nokia authorised service centre or dealer, and inspect the hologram label using the following steps:

Authenticate hologram

- 1 When you look at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.



- 2 When you angle the hologram left, right, down and up, you should see 1, 2, 3 and 4 dots on each side respectively.



Successful completion of the steps is not a total assurance of the authenticity of the battery. If you cannot confirm authenticity or if you have any reason to believe that your Nokia battery with the hologram on the label is not an authentic Nokia battery, you should refrain from using it, and take it to the nearest Nokia authorised service centre or dealer for assistance.

To find out more about original Nokia batteries, see www.nokia.com/battery.

Taking care of your device

Your device is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics. When the device warms to its normal temperature from a cold temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Backup all data you want to keep, such as contacts and calendar notes.
- To reset the device from time to time for optimum performance, power off the device and remove the battery.

These suggestions apply equally to your device, battery, charger, or any accessory.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at www.nokia.com/werecycle, or nokia.mobi/werecycle.

Additional safety information

Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Operating environment

This device meets RF exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so. Hospitals or health care facilities may use equipment sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Turn the wireless device off if there is any reason to suspect that interference is taking place.

- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing aids

Some digital wireless devices may interfere with some hearing aids.

Hearing aids

Warning:

For hearing aid compatibility, you must turn off the Bluetooth connectivity.

Your mobile device model complies with FCC rules governing hearing aid compatibility. These rules require an M3 microphone or higher value. The M-value, shown on the device box, refers to lower radio frequency (RF) emissions. A higher M-value generally indicates that a device model has a lower RF emissions level, which may improve the likelihood that the device will operate with certain hearing aids. Some hearing aids are more immune than others to interference. Please consult your hearing health professional to determine the M-rating of your hearing aid and whether your hearing aid will work with this device. More information on accessibility can be found at www.nokiaaccessibility.com.

This device has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this device that have not been tested yet for use with hearing aids. It is important to try the different features of this device thoroughly and in different locations, using your hearing aid or cochlear implant, to determine whether you hear any interfering noise. Consult your service provider about its return and exchange policies and for information on hearing aid compatibility.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating

properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.

Potentially explosive environments

Switch off your device in any area with a potentially explosive atmosphere. Obey all posted instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

Emergency calls

Important: This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device will attempt to make emergency calls over both the cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

- 1 If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you may also need to complete the following:
 - Insert a SIM card if your device uses one.
 - Remove certain call restrictions you have activated in your device.
 - Change your profile from offline profile mode to an active profile.
 - If the screen and keys are locked, slide the lock switch on the side of the device to unlock them.

- 2 Press the end key as many times as needed to clear the display and ready the device for calls.
- 3 Open the dialler by selecting the dialler icon (.
- 4 Enter the official emergency number for your present location. Emergency numbers vary by location.
- 5 Press the call key.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.66 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Copyright and other notices

© 2009 Nokia. All rights reserved.

DECLARATION OF CONFORMITY

CE 0434 !

Hereby, NOKIA CORPORATION declares that this RM-505 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

Nokia, Nokia Connecting People, Nseries, N97, Nokia Original Accessories logo, and Ovi are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

Portions of the Nokia Maps software are ©1996-2010 The FreeType Project. All rights reserved.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in

compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications.

BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

Reverse engineering of software in the device is prohibited to the extent permitted by applicable law. Insofar as this user guide contains any limitations on Nokia's representations, warranties, damages and liabilities, such limitations shall likewise limit any representations, warranties, damages and liabilities of Nokia's licensors. The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

/Issue 5 EN

Index

Symbols/Numbers

3-D ringing tones 115

A

A-GPS (assisted GPS) 80

access codes 11

access points 66, 67

— groups 67

accessories 127

accounts 53

active notes 123

— settings 124

alarm

— calendar note 116

alarm clock 117

albums, media 100

anniversary notes 116

answering calls 37

antennas 17

application manager

— settings 133

application settings 127

applications 131

assisted GPS (A-GPS) 79

attachments 56, 57

audio messages 55

auto-update for time/date 117

B

background image 115, 116

backing up device memory 120

barring calls 134

battery

— charging 18

— inserting 15

— saving power 11

birthday notes 116

blogs 76

Bluetooth 71, 72

Bluetooth connectivity

— blocking devices 72

— device visibility 71

— pairing devices 71

— security 71

— settings 70

— turning on/off 70

bookmarks 77

browser

— bookmarks 77

— browsing pages 75, 76

— cache memory 77

— searching content 76

— security 77

— settings 78

— toolbar 75

C

cable connection 73

cache memory 77

calculator 123

calendar 116

— toolbar 116

calendar entry

— deleting 117

— sending 117

call log 44

call waiting 38

calls 35

— answering 37

— conference 37

— dialled 43

— dialled numbers 30

— duration of 44

— internet calls 40

— missed 43

— options 36

— received 43

— redialling 133

— rejecting 37

— restricting

See fixed dialling

— settings 133

— video calls 38

camera

— assigning images to

 contacts 95

— flash 95

— image mode 93

— image quality	97	— images in	45	DRM (digital rights management)	130
— indicators	94	— managing	45	duration of calls	44
— location information	94	— ringing tones	46	E	
— options	95	— saving	45	e-mail	63
— recording	97	— synchronising	69	— mailbox	57
— scenes	95	— voice tags	45	— notifications	27, 28
— self-timer	96	content		e-mail messages	56
— sending images	95	— synchronising, sending, and		end all calls option	38
— sequence mode	96	retrieving	25	F	
— settings	92, 97	converter	122	factory settings	
— video mode	96	copyright protection	130	— restoring	130
— video quality	98	currency		feeds, news	76
cell broadcast messages	58	— converter	122	file management	121
certificates	128	D		file manager	120, 121
charging the battery	18	data connections	69	— backing up files	121
chat services (IM)	51	— cable	73	— organising files	120
clock	116, 117	— PC connectivity	73	fixed dialling	47
— setting date	117	— synchronisation	69	FM radio	111
— setting time	117	date and time	117	FM transmitter	107
computer connections	73	date and time settings	125	— settings	108
See also <i>data connections</i>		declining calls		G	
conference calls	37	See <i>rejecting calls</i>		general information	9
connectors	13	device		GPS	
contacts		— updating	127	— position requests	81
— copying	47	dialled numbers	43	GPS (Global Positioning System)	79
— creating groups	48	dictionary	121		
— defaults	46	dismissing calls	37		
— editing	45	display settings	126		
— favourites	28				
— groups	48				

GPS (global positioning system) 79, 82

H

headset 18
help application 9
home screen 28, 115, 116
— contacts 28
— music player 28
— notifications 27
HSDPA (high-speed downlink packet access) 32

I

IAPs (internet access points) 66
icons 29
IM (instant messaging) 51
images 100
— editing 102
— sharing online 104
inbox
— message 56
inbox, message 56
indicators 29
installing applications 131
internet browser 75
internet calls 40
— log in 40
— making 40
— settings 40, 41

internet connection 75
See also *browser*
invitations
— video sharing 43

J

Java applications 131

K

keyboard 21
keypad lock 24
keys 13, 14

L

landmarks 81
language settings 126
licences 130
location information 79, 82
lock code 11, 17
lock switch 24
locking
— remotely 11
logs 44
loudspeaker 31

M

Mail for Exchange 63
mailbox
— e-mail 56
— video 36

— voice 36
Maps 84
— browsing 85
— changing views 85
— compass 84
— display elements 85, 91
— driving routes 91
— Favourites 88
— finding locations 86
— navigating 90, 91
— organising places 88
— organising routes 88
— planning routes 87
— saving places 88
— saving routes 88
— sending places 89
— sharing locations 89
— synchronising 89
— traffic information 91
— viewing location details 86
— voice guidance 90
— walking routes 90
mass memory
— formatting 121
media
— RealPlayer 118
meeting notes 116
meetings
— setting up 116
memo notes

See <i>to-do notes</i>	
memory	
— clearing	12
— web cache	77
memory card	121
— backing up files	121
message reader	
— selecting voice	125
messages	
— e-mail	56
— folders for	54
— icon for incoming	56
— multimedia	56
— settings	59
— voice	36
MMS (multimedia message service)	55, 56, 59
multimedia messages	55, 56, 59
music player	28, 104, 106
— playlists	105
muting sound	37
my music	104
N	
navigation tools	79
network settings	64
news feeds	76
Nokia account	33, 48, 53
Nokia support information	9
notes	120

notification light	131
O	
offline profile	32
outbox, message	54
Ovi by Nokia	32
Ovi Contacts	48, 49
— adding friends	50
— availability status	49
— connection settings	54
— landmarks	53
— personalisation	54
— presence	53
— profiles	49
— searching	50
— settings	52
— sharing your location	49, 53
— synchronising	52
Ovi Music	106
Ovi Store	33
— creating an account	33
— details	33
— purchasing	34
— searching	33
— settings	34
— sharing with friends	34
— signing in	33

P	
packet data connection	44
— access point settings	68
— settings	74
page overview	76
PDF reader	124
personal certificates	128
personalisation	115
photographs	
See <i>camera</i>	
Photos	98
photos	100
— file details	99
— red-eye	103
— tags	100
— toolbar	100
— viewing	98
PIN code	11
pin code	17
PIN2 code	11
podcasting	108
— directories	110
— downloads	109
— playing	109
— searching	108
— settings	110
positioning information	79, 82
positioning settings	83
presence	53
presentations, multimedia	56

profiles	26, 115	security	— packet data access points	68
— changing profiles	30	— browser	— podcasting	110
— offline restrictions	32	— certificates	— positioning	83
— personalisation	26	security code	— SIP	74
proximity sensor	35	security module	— slide	127
proxy settings	68	self-timer	— tv-out	127
PUK codes	11	— camera	— video	114
		sensor settings	— video sharing	41
R		sent messages folder	— WLAN	66, 69
radio	111	service commands	Share online	28
— listening	111	service messages	shared video	41
— stations	112	settings	sharing your location	52
RealPlayer	118	— access point name control	shooting modes	
recorder	119	— access points	— camera	95
recording		— active notes	side keys	14
— video clips	96	— applications	SIM card	
red-eye removal	103	— Bluetooth connectivity	— inserting	15
rejecting calls	37	— browser	— messages	58
remote locking	11	— call divert	SIM card security	128
remote mailbox	56	— calls	SIP	74
remote SIM mode	72	— certificates	slide settings	127
removing applications	132	— date and time	slide show	101
ringing tones	26, 115	— display	SMS (short message service)	55
roaming	64	— e-mail notifications	software applications	131
		— FM transmitter	software updates	9, 10
S		— internet calls	songs	104
scenes	95	— language	speakerphone	31
search		— messages	speech	125
— settings	31	— network	speed dialling	37
searching	30, 31	— packet data	support	9

synchronisation	52, 69	USB cable connection	73	volume controls	31
T		USB charging	18	W	
text input	21, 22	useful information	9	web browser	75
text messages		V		web connection	75
— receiving and reading	56	video		web logs	76
— replying to	56	— downloading	112	week settings	
— sending	55	— my videos	113	— calendar alarm	116
— settings	59	— playing	113	wireless LAN (WLAN)	65
— SIM messages	58	— settings	114	wireless LAN settings	66
themes	115	— shared	43	WLAN (wireless local area network)	65, 69
time and date	117	— transferring video clips	114	wrist strap	19
to-do notes	116	— video feeds	113		
tones	26, 115	— viewing	112		
— 3-D	115	video calls	38, 39, 40	Z	
toolbar	92	video clips	100	Zip manager	123
top keys	13	— editing	103		
touch screen	19, 23, 35	— shared	41		
transferring content	24	video settings	98		
troubleshooting	135	video sharing			
TV configuration	127	— requirements	41		
TV-out mode	101	— sharing live video	42		
U		— sharing video clips	42		
updates	10	virtual keypad	23		
— applications	9	voice calls			
— device	127	See <i>calls</i>			
— device software	9, 10	voice commands	30, 38, 126		
UPIN code	11	voice control	126		
UPUK code	11	voice dialling	38		
		voice mailbox	30		