

# **Nokia Play 360° Wireless Speaker MD-50W**

## About your speaker

With the Nokia Play 360° wireless speaker, you can listen to music from your compatible device, such as a phone or music player, and enjoy high-quality audio. A single speaker fills your room with music, and you can connect a second Nokia Play 360° wireless speaker for stereo sound. You can connect to another device on the go, without stopping the music playing. The speaker also has a standard 3.5 mm audio connector.

Read this user guide carefully before using the product. Also, read the user guide for the device that you connect to the product.



### Warning:

This product may contain small parts. Keep them out of the reach of small children.

The surface of this product is nickel-free.

## About Bluetooth


You can use Bluetooth to wirelessly connect devices and accessories to other compatible devices, such as phones.

Devices do not need to be in direct line-of-sight, but they must be within 10 metres (33 feet) of each other. The connection may be affected by obstructions such as walls or other electronic devices.

This device is compliant with Bluetooth Specification 2.1 + EDR supporting the following profiles: A2DP, AVRCP. Check with the manufacturers of other devices to determine their compatibility with this device.

## Get started

### Keys and parts

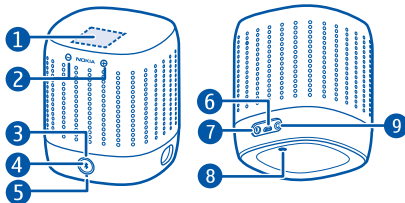

1 NFC area

- 2 Volume keys
- 3 Bluetooth status indicator
- 4 Bluetooth key
- 5 Battery status indicator
- 6 Charger connector
- 7 Power key
- 8 Battery cover fixing screw
- 9 3.5 mm audio input connector

## Charge the battery

Before using the speaker, you must charge the battery.

When the battery level of the speaker is low, the battery indicator light flashes. When the battery is charging, the light stays on. After the battery has fully charged, the light switches off.

- 1 Connect the charger to a wall outlet.
- 2 Connect the charger cable to the charger connector on the speaker.
- 3 When the battery is fully charged, first disconnect the charger from the speaker, then from the wall outlet.

You can also use a compatible USB cable to charge the battery. Charging over USB can take longer to start and you may not be able to use the speaker immediately. Charging may not work if you connect through a non-powered USB hub. Your speaker charges more quickly when connected to a wall outlet.

You can only use the USB connection to charge the battery.

Your speaker has an internal, removable battery. To remove the battery, unscrew the battery cover, and gently remove the cover and the battery.

## Switch the speaker on

Press and hold the power key.

If you have never paired the speaker with a device, or you have cleared the pairings, pairing mode is activated automatically, and the Bluetooth status indicator starts to flash slowly.

If you already have paired the speaker with one or more devices, the speaker connects to the last device it was used with. If the speaker can't connect to the last used device, it connects to the next device on the paired devices list.

If the speaker is not connected, standby mode is activated, and the Bluetooth status indicator light turns white. If the speaker is not connected to a device within 30 minutes, the speaker switches off.

## Pair your device

### Pair and connect

Before using your speaker with a compatible device, such as a phone, for the first time, you must pair and connect it to the device.

You can pair your speaker with up to 8 devices, but with only 2 speakers at a time.

You can connect the speaker to one device at a time, but you can connect to another device on the go.

When the speaker is paired, the Bluetooth status indicator light is blue.

If the connected device leaves Bluetooth range, the speaker tries to reconnect for 30 minutes. If the device returns within range, the speaker reconnects automatically.

You can also use a standard 3.5 mm audio cable to connect your device to the audio connector in the speaker. The Bluetooth connection is closed.

### Pair the speaker using NFC

With Near Field Communication (NFC), you can easily pair and connect your speaker to your compatible device.

If the compatible device supports NFC, activate its NFC feature, and touch the NFC area of the speaker with the NFC area of your device. The speaker connects to the device automatically. For details on NFC, see the user guide of the device.



If the device does not support NFC, pair the speaker manually.

### Pair the speaker manually

- 1 Switch the compatible device and the speaker on.
- 2 If you haven't paired the speaker with a device, or the paired devices list is empty, pairing mode is activated. Otherwise, to activate Bluetooth, press and hold **⌘** for 3 seconds.

- 3 Within 3 minutes, activate Bluetooth on the compatible device, and set it to search for compatible devices.
- 4 Select the speaker from the list of found devices.
- 5 If required, enter the passcode **0000**.

### **Pair with another speaker**

Want to enjoy your music in stereo? Pair your speaker with another Nokia Play 360° wireless speaker for true stereo sound.

Switch the speakers off, and press and hold the power key for 5 seconds on both speakers.


The speaker remembers which channel it has been when paired with different speakers.

When the speakers are paired, you can adjust the volume level or switch both speakers off from either speaker.

You can only pair and connect your device to the speaker that is the left channel. The speaker that is the right channel is not in the paired devices list in your phone.

### **Clear the pairings**

You can clear the paired devices list on your speaker.

Switch the speaker off, and press and hold  and the power key for 5 seconds. The blue and red indicator lights alternate.

After the pairings are cleared, you must pair the speaker before you can use it again. When you switch on the speaker, pairing mode is automatically activated.

## **Listen to music**

### **Listen to music**

Enjoy your favourite music with your friends. Connect a compatible device, such as your phone, to your speaker, and start playing music.

### **Change the volume**

Use the volume keys.

 



#### **Warning:**

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level.

## Connect to another device on the go

Take turns with your friends in playing your favourite music. You can change the connected device on the go, without pausing the music.

- 1 While playing music from your connected device, press and hold  for 3 seconds.
- 2 Pair and connect with another device. The music continues to play until the pairing is completed.
- 3 Play music on the newly connected device.

**Tip:** To change the connection to the next device on the paired devices list on your speaker, press .

## Product and safety information

### Battery and charger information

Your device is intended for use with a BL-5C rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries.

This device is intended for use when supplied with power from the following chargers: AC-10. The exact Nokia charger model number may vary depending on the plug type, identified by E, X, AR, U, A, C, K, or B.

### Battery safety

Always switch the device off and disconnect the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

### Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Switch off the device and remove the battery from time to time for optimum performance.

### Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at [www.nokia.com/wecycle](http://www.nokia.com/wecycle), or with a mobile device, [nokia.mobi/wecycle](http://nokia.mobi/wecycle).

### Crossed-out wheeled-bin symbol



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union. Do not dispose of these products as unsorted municipal waste. For more information on the environmental attributes of your device, see [www.nokia.com/ecodeclaration](http://www.nokia.com/ecodeclaration).

## Copyright and other notices

### DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this MD-50W product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at [http://www.nokia.com/phones/declaration\\_of\\_conformity/](http://www.nokia.com/phones/declaration_of_conformity/).

CE 0979

© 2011 Nokia. All rights reserved.

Nokia, Nokia Connecting People, and the Nokia Original Accessories logo are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The availability of particular products may vary by region. Please check with your Nokia dealer for details. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

#### FCC/INDUSTRY CANADA NOTICE

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: 1. This device may not cause harmful interference; and 2. This device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. NOTE: FCC Radiation Exposure Statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. NOTE: Changes or modifications not expressly approved by Nokia could void the user's authority to operate the equipment.

/Issue 1.1 EN