

Nokia 5530 XpressMusic User Guide

Issue 5.0

DECLARATION OF CONFORMITY

CE 0434



Hereby, NOKIA CORPORATION declares that this RM-504 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

© 2011 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia Care, Nokia Original Accessories, logos, Ovi, and XpressMusic are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a

consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider. No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, UNDER NO CIRCUMSTANCES SHALL NOKIA OR ANY OF ITS LICENSORS BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS". EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

Reverse engineering of software in the device is prohibited to the extent permitted by applicable law. Insofar as this user guide contains any limitations on Nokia's representations, warranties, damages and liabilities, such limitations shall likewise limit any representations, warranties, damages and liabilities of Nokia's licensors.

The third-party applications provided with your device may have been created and may be owned by persons or entities not affiliated with or related to Nokia. Nokia does not own the copyrights or intellectual property rights to the third-party applications. As such, Nokia does not take any responsibility for end-user support, functionality of the applications, or the information in the applications or these materials. Nokia does not provide any warranty for the third-party applications. BY USING THE APPLICATIONS YOU ACKNOWLEDGE THAT THE APPLICATIONS ARE PROVIDED AS IS WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, TO THE MAXIMUM EXTENT PERMITTED BY

APPLICABLE LAW. YOU FURTHER ACKNOWLEDGE THAT NEITHER NOKIA NOR ITS AFFILIATES MAKE ANY REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTIES OF TITLE, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE APPLICATIONS WILL NOT INFRINGE ANY THIRD-PARTY PATENTS, COPYRIGHTS, TRADEMARKS, OR OTHER RIGHTS.

The availability of particular products and applications and services for these products may vary by region. Please check with your Nokia dealer for details and availability of language options. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

FCC/INDUSTRY CANADA NOTICE

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

Model number: 5530

/Issue 5.0 EN

Contents

Safety 8

About your device	9
Network services	10
Magnets and magnetic fields	11

1. Find help 12

In-device help	12
Support	12
Update phone software using your PC	13
Software updates over the air	13
Settings	14
Access codes	14
Prolong battery life	16
Increase available memory	17

2. Get started 18

Insert the SIM card	18
Insert the battery	19
Insert the memory card	20
Charge the battery	22
Keys and parts	23
Stylus	25
Switch the device on	26
Lock the keys and touch screen	26
Home screen	27
Access the menu	28
Touch screen actions	29
Media key	32

Change the ringing tone	32
-------------------------	----

3. Your device 33

Device setup	33
Copy contacts or pictures from your old device	33
Display indicators	34
Contacts bar	36
Antenna locations	37
Offline profile	38
Shortcuts	38
Volume and loudspeaker control	39
Sensor settings and display rotation	40
Remote lock	40
Headset	40
Remove the SIM card	42
Remove the memory card	43
Attach a wrist strap	43

4. Make calls 44

Touch screen during calls	44
Calls	44
During a call	45
Voice mailbox	46
Answer or reject a call	46
Make a conference call	47
Speed dial a phone number	48
Call waiting	48
Voice dialling	49
Log	50

5. Contacts 52

Save and edit names and numbers	52
Contacts toolbar	52
Manage names and numbers	53
Default numbers and addresses	53
Ringing tones, images, and call text for contacts	54
Copy contacts	54
SIM services	55

6. Write text 56

Automatic input modes	57
On-screen keyboard	57
Handwriting	58
Alphanumeric keypad	59
Touch input settings	62

7. Messaging 63

Messaging main view	63
Write and send messages	64
Messaging inbox	65
Set up e-mail	67
Mailbox	67
Mail for Exchange	70
View messages on a SIM card	71
Cell broadcast messages	71
Service commands	71
Messaging settings	72

8. Personalise your device 74

Change the look of your device	74
Profiles	75

9. Music folder 76

Music player	76
Ovi Music	80
Nokia Podcasting	81
Radio	83

10. Nokia Video Centre 85

View and download video clips	85
Video feeds	87
My videos	87
Transfer videos from your PC	88
Video centre settings	88

11. Camera 89

Activate the camera	89
Image capture	89
Video recording	96

12. Gallery 98

View and organise files	98
View images and videos	98
Organise images and video clips	99

13. Share online 99

About Share online	99
Subscribe to an online sharing service	100
Manage your accounts	100
Create a post	101
Post files from Gallery	101

14. Internet 102

6 Contents

About the web browser	102	Network settings	118
Browse the web	102	Wireless LAN	118
Add a bookmark	103	Access points	122
Subscribe to a web feed	103	Active data connections	125
Unreadable characters while browsing the web	104	Synchronisation	126
15. Positioning	104	Bluetooth connectivity	127
Positioning with your device	104	Transfer data using a USB cable	132
Network positioning	104	PC connections	133
About GPS	105	Administrative settings	133
Check the satellite signal status	105	18. Search	134
Position requests	106	About Search	134
Landmarks	107	Start a search	134
GPS data	107	19. Ovi Store	135
Positioning settings	108	About Ovi Store	135
16. Maps	108	20. Other applications	135
About Maps	108	Clock	135
Move on a map	109	Calendar	137
Find locations	110	File manager	138
Plan routes	111	Application manager	139
Save and send locations	112	RealPlayer	143
View your saved items	112	Recorder	144
Synchronise your favourite locations with Ovi Maps	113	Write notes	145
Walk to your destination	113	Make calculations	145
Drive to your destination	115	Converter	146
View traffic and safety information	116	Dictionary	146
17. Connectivity	117	21. Settings	147
Data connections and access points	117	Phone settings	147
		Call settings	155

22. Troubleshooting 157**23. Protect the environment 161**

Save energy	161
-------------	-----

Recycle	162
---------	-----

24. Nokia original accessories 162

Practical rules about accessories	162
-----------------------------------	-----

Battery	163
---------	-----

Product and safety information 163**Index 168**

Safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

SWITCH ON SAFELY



Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

ROAD SAFETY COMES FIRST



Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE



All wireless devices may be susceptible to interference, which could affect performance.

SWITCH OFF IN RESTRICTED AREAS



Follow any restrictions. Switch the device off in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

QUALIFIED SERVICE



Only qualified personnel may install or repair this product.

ACCESSORIES AND BATTERIES



Use only approved accessories and batteries. Do not connect incompatible products.

WATER-RESISTANCE



Your device is not water-resistant. Keep it dry.

About your device

The wireless device described in this guide is approved for use on the GSM 850, 900, 1800, and 1900 MHz networks. Contact your service provider for more information about networks.

Your device supports several connectivity methods and like computers may be exposed to viruses and other harmful content. Exercise caution with messages, connectivity requests, browsing, and downloads. Only install and use services and software from trustworthy sources that offer adequate security and protection, such as applications that are Symbian Signed or have passed the Java Verified™ testing. Consider installing antivirus and other security software on your device and any connected computer.

Your device may have preinstalled bookmarks and links for third-party internet sites and may allow you to access third-party sites. These are not affiliated with Nokia, and Nokia does not endorse or assume liability for them. If you access such sites, take precautions for security or content.



Warning:

To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless device use may cause interference or danger.

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent some images, music, and other content from being copied, modified, or transferred.

Make back-up copies or keep a written record of all important information stored in your device.

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

The images in this guide may differ from your device display.

Refer to the user guide for other important information about your device.



Note: The surface of this device does not contain nickel in the platings. The surface of this device contains stainless steel.

Network services

To use the device you must have service from a wireless service provider. Some features are not available on all networks; other features may require that you make specific arrangements with your service provider to use them. Network services involve transmission of data. Check with your service provider for details about fees in your home network and when roaming on other networks. Your service provider can explain what charges will apply. Some networks may have limitations that affect how you can use some features of this device requiring network support such as support for specific technologies like WAP 2.0 protocols (HTTP and SSL) that run on TCP/IP protocols and language-dependent characters.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, these features will not appear on your device menu. Your device may also have customized items such as menu names, menu order, and icons.

Magnets and magnetic fields

Keep your device away from magnets or magnetic fields.

1. Find help

In-device help

Your device contains instructions to help to use the applications in your device.

To open help texts from the main menu, select **Menu > Help** and the application for which you want to read instructions.

When an application is open, to access the help text for the current view, select **Options > Help**.

When you are reading the instructions, to change the size of the help text, select **Options > Decrease font size** or **Increase font size**.

You may find links to related topics at the end of the help text.

If you select an underlined word, a short explanation is displayed.

Help texts use the following indicators:



Link to a related help topic.



Link to the application being discussed.

When you are reading the instructions, to switch between help texts and the application that is open in the background, select **Options > Show open apps**. and the desired application.

Support

When you want to learn more about how to use your product or you are unsure how your phone should function, read the user guide in your phone. Select **Menu > Help**.

If this does not resolve your issue, do one of the following:

- Reboot your phone. Switch off the phone, and remove the battery. After about a minute, replace the battery, and switch on the phone.
- Update your phone software
- Restore the original factory settings

If your issue remains unsolved, contact Nokia for repair options. Go to www.nokia-asia.com/repair. Before sending your phone for repair, always back up your data.

Update phone software using your PC

You can use the Nokia Ovi Suite PC application to update your phone software. You need a compatible PC, a high-speed internet connection, and a compatible USB data cable to connect your phone to the PC.

To get more information and to download the Nokia Ovi Suite application, go to www.ovi.com/suite.

Software updates over the air

Select **Menu > Applications > SW update**.

With Software update (network service), you can check if there are updates available for your device software or applications, and download them to your device.

Downloading software updates may involve the transmission of large amounts of data (network service).

Make sure that the device battery has enough power, or connect the charger before starting the update.



Warning:

If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.

After updating your device software or applications using Software update, the instructions related to the updated applications in the user guide or the helps may no longer be up to date.

To download the available updates, select . To unmark specific updates that you do not want to download, select the updates from the list.

To view information on an update, select the update and .

To view the status of previous updates, select .

Select **Options** and from the following:

Update via PC — Update your device using a PC. This option replaces the Start update option when updates are only available using the Nokia Software Updater PC application.

View update history — View the status of previous updates.

Settings — Change the settings, such as the default access point used for downloading updates.

Disclaimer — View the Nokia licence agreement.

Settings

Your device normally has MMS, GPRS, streaming, and mobile internet settings automatically configured in the device, based on your network service provider information. You may have settings from your service providers already installed in your device, or you may receive or request the settings from the network service providers as a special message.

Access codes

PIN or PIN2 code (4-8 digits)	These protect your SIM card against unauthorised use or are required to access some features.
----------------------------------	---

	<p>You can set your device to ask for the PIN code when you switch it on.</p> <p>If not supplied with your SIM card or you forget the codes, contact your service provider.</p> <p>If you enter the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code.</p>
PUK or PUK2 code (8 digits)	<p>These are required to unblock a PIN or PIN2 code.</p> <p>If not supplied with your SIM card, contact your service provider.</p>
IMEI number (15 digits)	<p>This is used to identify valid devices in the network. The number can also be used to block, for example, stolen devices.</p> <p>To view your IMEI number, dial *#06#.</p>
Lock code (security code) (min. 4 digits or characters)	<p>This helps you protect your device against unauthorised use.</p> <p>You can set your device to ask for the lock code that you define.</p> <p>Keep the code secret and in a safe place, separate from your device.</p> <p>If you forget the code and your device is locked, your device will require service. Additional charges may apply, and all the personal data in your device may be deleted.</p> <p>For more information, contact a Nokia Care Centre or your device dealer.</p>

Prolong battery life

Many features in your device increase the demand on battery power and reduce the battery lifetime. To save battery power, note the following:

- Features that use Bluetooth connectivity, or allowing such features to run in the background while using other features, increase the demand on battery power. Deactivate Bluetooth connectivity when you do not need it.
- Features that use a wireless LAN (WLAN), or allowing such features to run in the background while using other features, increase the demand on battery power. The WLAN on your Nokia device switches off when you are not trying to connect, not connected to an access point, or not scanning for available networks. To further reduce battery consumption, you can specify that your device does not scan, or scans less often, for available networks in the background.
- If you have selected **Packet data connection > When available** in the connection settings, and there is no packet data coverage (GPRS), the device periodically tries to establish a packet data connection. To prolong the operating time of your device, select **Packet data connection > When needed**.
- The Maps application downloads new map information when you move to new areas on the map, which increases the demand on battery power. You can prevent the automatic download of new maps.
- If the signal strength of the cellular network varies much in your area, your device must scan for the available network repeatedly. This increases the demand on battery power.
- The backlight of the display increases the demand on battery power. In the display settings, you can adjust the display brightness and change the time-out period after which the backlight is switched off. Select **Menu > Settings and Phone > Display > Brightness or Light time-out**.
- Leaving applications running in the background increases the demand on battery power. To close an application you are not using, press and hold the menu key, select and hold the application, and select **Exit**. This is not supported by all applications.

Increase available memory

Do you need more available device memory for new applications and content?

View how much space is available for different data types

Select **Menu > Applications > File mgr..**

Many features of the device use memory to store data. The device notifies you if the memory in different memory locations is low.

Increase available memory

Transfer data to a compatible memory card (if available) or to a compatible computer.

To remove data you no longer need, use File manager or open the respective application. You can remove the following:

- Messages in the folders in Messaging and retrieved e-mail messages in the mailbox
- Saved web pages
- Contact information
- Calendar notes
- Applications shown in Application manager that you do not need
- Installation files (.sis or .sisx) of applications you have installed. Transfer the installation files to a compatible computer.
- Images and video clips in Gallery. Back up the files to a compatible computer.

2. Get started

Insert the SIM card



Important: To prevent damage to the SIM card, always remove the battery before you insert or remove the card.




Important: Do not use a mini-UICC SIM card, also known as a micro-SIM card, a micro-SIM card with an adapter, or a SIM card that has a mini-UICC cutout (see figure) in this device. A micro SIM card is smaller than the standard SIM card. This device does not support the use of micro-SIM cards and use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card.



A SIM card may be already inserted in the device. If not, do the following:


- 1 Open the cover of the SIM card slot.

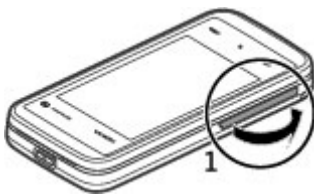

- 2 Insert a SIM card in the SIM card slot. Ensure that the contact area on the card is facing down and the bevelled corner is facing toward the device. Push the card in.



- 3 Close the cover of the SIM card slot. Ensure that the cover is properly closed.

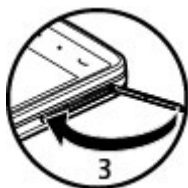

If the SIM card is not properly in place, the device can only be used in the Offline profile.

Insert the battery

Always switch the device off and disconnect the charger before removing the battery.



- 1 Remove the back cover by lifting it from the top end of the device.



- 2 Insert the battery.



- 3 To replace the cover, direct the bottom locking catches toward their slots, and press down until the cover locks into place.

After removing and replacing the battery, you need to set the time and date again in your device.


Insert the memory card

Use only compatible microSD and microSDHC cards approved by Nokia for use with this device. Nokia uses approved industry standards for memory cards, but some

brands may not be fully compatible with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.



A memory card may be already inserted in the device. If not, do the following:

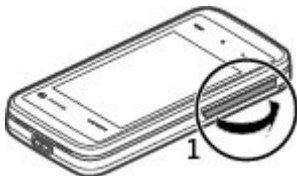

- 1 Open the cover of the memory card slot.



- 2 Insert a compatible memory card in the memory card slot. Ensure that the contact area on the card is facing down. Push the card in. You can hear a click when the card locks into place.




- 3 Close the cover of the memory card slot. Ensure that the cover is properly closed.

Charge the battery

Your battery has been partially charged at the factory. If the device indicates a low charge, do the following:

- 1 Connect the charger to a wall outlet.
- 2 Connect the charger to the device.

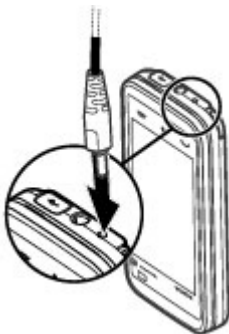

- 3 When the device indicates a full charge, disconnect the charger from the device, then from the wall outlet.


You do not need to charge the battery for a specific length of time, and you can use the device while it is charging. If the battery is completely discharged, it may take several minutes before the charging indicator appears on the display or before any calls can be made.

Tip: Disconnect the charger from the wall outlet when the charger is not in use. A charger that is connected to the outlet consumes power even when it is not connected to the device.

Keys and parts



Note: The surface of this device does not contain nickel in the platings. The surface of this device contains stainless steel.

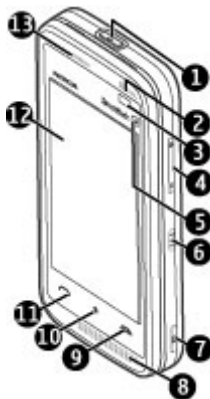

- 1 Power key
- 2 Loudspeaker
- 3 Proximity sensor
- 4 Volume/Zoom key
- 5 Media key
- 6 Lock switch
- 7 Capture key
- 8 Microphone
- 9 End key
- 10 Menu key
- 11 Call key
- 12 Touch screen
- 13 Earpiece



- 14 Camera flash
- 15 Camera lens
- 16 Micro USB connector
- 17 Loudspeakers
- 18 Nokia AV Connector (3.5 mm)
- 19 Charger connector
- 20 Stylus

21 SIM and memory card slot



Do not cover the area above the touch screen, for example, with protective film or tape.

Stylus




Some functions, such as handwriting recognition, are designed to be used with a stylus. The pen stylus is located in the back cover of the device.



Important: Use only a stylus approved by Nokia for use with this device. Using any other stylus may invalidate any warranty applying to the device and may damage the touch screen. Avoid scratching the touch screen. Never use an actual pen or pencil or other sharp objects to write on the touch screen.

Switch the device on



- 1 Press and hold the power key.
- 2 If the device asks for a PIN code or lock code, enter it, and select **OK**. To delete a number, select . The factory setting for the lock code is **12345**.
- 3 Select your location. If you accidentally select the wrong location, select **Back**.
- 4 Enter the date and time. When using the 12-hour time format, to switch between a.m. and p.m., select any number.

Lock the keys and touch screen

To lock or unlock the touch screen and the touch keys, slide the lock switch on the side of the device.

When the touch screen and touch keys are locked, the touch screen is switched off and the keys are inactive.


The screen and keys may be locked automatically after a period of inactivity.

To change the settings for automatic screen and key locking, select **Menu > Settings and Phone > Phone mgmt. > Auto. keyguard > Keypad autolock period.**

Home screen


The home screen is your starting point where you can collect all your important contacts or application shortcuts.


Interactive display elements

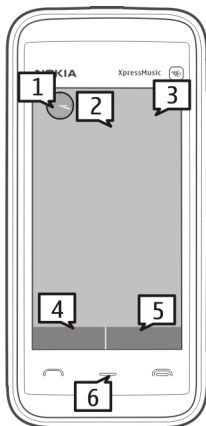


To open the clock application, select the clock (1).

To open the calendar, or to change the profile, select the date or the profile name (2).


To view or modify connectivity settings () to view the available wireless LANs (WLAN) if WLAN scanning is enabled, or to view missed events, select the top right corner (3).

To make a phone call, select **Telephone** or  (4).

To open the contacts list, select **Contacts** or  (5).

To open the main menu, press the menu key (6).

Start using the contacts bar

To start using the contacts bar, and to add your contacts to the home screen, select  > **Options** > **New contact**, and follow the instructions.

Change the home screen theme or shortcuts

Select **Menu** > **Settings** and **Personal** > **Home screen**.

Music keys

When music or the radio is playing in the background, music keys (play/pause, skip backward, and skip forward) are displayed in the home screen.

Access the menu

To access the menu, press the menu key.

To open an application or folder in the menu, double-tap it.

Touch screen actions

Tap and double-tap

To open an application or other element on the touch screen, you normally tap it with your finger or the stylus. However, to open the following items, you must tap them twice.

- List items in an application, such as the Drafts folder in the folder list in Messaging

Tip: When you open a list view, the first item is already highlighted. To open the highlighted item, tap it once.

- Applications and folders in the menu when using the list view type
- Files in a file list, for example, an image in the images and videos view in Gallery.

If you tap a file or similar item once, it is not opened, it becomes highlighted. To see the options available for the item, select **Options** or, if available, select an icon from a toolbar.

Select

In this user documentation, opening applications or items by tapping them once or twice is called "selecting". If you need to select several items in a sequence, the menu items to select are separated by arrows.

Example: To select **Options > Help**, tap **Options**, and then tap **Help**.

Drag

To drag, place your finger or the stylus on the screen, and slide it across the screen.

Example: To scroll up or down on a web page, drag the page with your finger or stylus.

Swipe



To swipe, slide your finger quickly left or right on the screen.

Example: When viewing an image, to view the next or previous image, swipe the image left or right, respectively.

Screen unlocking with swipe

Swipe to unlock the touch screen

To unlock the touch screen without answering a call, swipe from right to left. The ringing tone is muted automatically. To answer the call, press the call key, or to reject the call, press the end key.

Swipe to answer a call

To answer an incoming call, swipe from left to right.

Swipe to stop an alarm

To stop a sounding alarm, swipe from left to right. To snooze the alarm, swipe from right to left.

Scroll

To scroll up or down in lists that have a scroll bar, drag the slider of the scroll bar.

In some list views, you can scroll by placing your finger or stylus on a list item and dragging up or down.

Example: To scroll through contacts, place your finger or stylus on a contact, and drag up or down.

Tip: To view a brief description of icons and buttons, place your finger or stylus on the icon or button. Descriptions are not available for all icons and buttons.


Touch screen backlight


The touch screen backlight is turned off after a period of inactivity.

To turn the screen backlight on, tap the screen.

If the touch screen and keys are locked, tapping the screen does not turn the screen backlight on. To unlock the screen and keys, slide the lock switch.

Media key

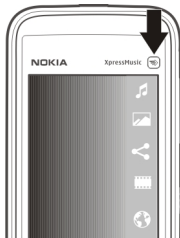

To open applications such as the music player or browser, select the media key () to open the media bar, and select the application.

Tip: Hold your finger or the stylus on the icon to see the name of the application. To open the application, raise your finger or the stylus. Otherwise, slide your finger or the stylus away from the icon.

Change the ringing tone


Select **Menu > Settings and Personal > Profiles**.

You can use profiles to set and customise the ringing tones, message alert tones, and other tones for different events, environments, or caller groups.

To personalise a profile, go to the profile, and select **Options > Personalise**.

3. Your device

Device setup

 With the Phone setup application, you can do the following, for example:

- Define the regional settings, such as the language of the device.
- Transfer data from your old device.
- Personalise your device.
- Set up your mail accounts.
- Activate Ovi services.

When you switch on your device for the first time, the Phone setup application opens. To open the application later, select **Menu > Applications > Phone setup**.

Copy contacts or pictures from your old device

Want to copy important information from your previous compatible Nokia device and start using your new device quickly? Use the Phone switch application to copy, for example, contacts, calendar entries, and pictures to your new device, free of charge.

Your previous Nokia device needs to support Bluetooth.

Select **Menu > Applications > Phone setup** and **Data transfer**.







If your previous Nokia device does not have the Phone switch application, your new device sends it in a message using Bluetooth. To install the application, open the message in your previous device, and follow the instructions.

- 1 Select the device you want to connect to, and pair the devices. Bluetooth needs to be activated.
- 2 If the other device requires a passcode, enter the passcode. The passcode, which you can define yourself, must be entered in both devices. The passcode in some devices is fixed. For details, see the user guide of the device.
The passcode is valid only for the current connection.
- 3 Select the content and **OK**.



Display indicators

General indicators




	The touch screen and keys are locked.
--	---------------------------------------

	The device alerts silently for incoming calls or messages.
	You have set a clock alarm.
	You are using a timed profile.


Call indicators










	Someone has tried to call you.
2	You are using your second phone line (network service).
	You have set your device to divert incoming calls to another number (network service). If you have two phone lines, a number indicates the active line.
D	You have an ongoing data call (network service).

Messaging indicators






	You have unread messages. If the indicator is blinking, the SIM card memory for messages may be full.
	You have received new mail.
	You have messages waiting to be sent in the Outbox folder.

Network indicators


	Your device is connected to a GSM network (network service).

	You have a GPRS packet data connection (network service).  indicates that the connection is on hold and  that a connection is being established.
	You have an EGPRS packet data connection (network service).  indicates that the connection is on hold and  that a connection is being established.
	A WLAN connection is available (network service).  indicates that the connection is encrypted and  that the connection is not encrypted.


Connectivity indicators


	Bluetooth is active.  indicates that your device is sending data. If the indicator is blinking, your device is trying to connect to another device.
	You have connected a USB cable to your device.
	The device is synchronising.
	You have connected a compatible headset to the device.

Contacts bar

To start using the contacts bar and add your contacts to the home screen, select  > **Options** > **New contact**, and follow the instructions.


To communicate with your contact, select the contact and from the following:

 — Make a phone call.

 — Send a message.

 — Add a feed.

 — Refresh feeds.

 — Modify settings.

To view the latest call event and other past communication events with a contact, select a contact. To call the contact, select the call event. To view details of other events, select a communication event.

To close the view, select .

Antenna locations

Your device may have internal and external antennas. Avoid touching the antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.



Cellular, Bluetooth, and WLAN antennas

Offline profile

The offline profile lets you use the device without connecting to the wireless cellular network. When the offline profile is active, you can use your device without a SIM card.

Activate the offline profile

Press the power key briefly, and select **Offline**.

When you activate the offline profile, the connection to the cellular network is closed. All radio frequency signals to and from the device to the cellular network are prevented. If you try to send messages using the cellular network, they are placed in the Outbox folder to be sent later.



Important: In the Offline profile you cannot make or receive any calls, or use other features that require cellular network coverage. Calls may still be possible to the official emergency number programmed into your device. To make calls, you must first activate the phone function by changing profiles. If the device has been locked, enter the lock code.

When you have activated the offline profile, you can still use a wireless LAN (WLAN), for example, to read your e-mail or browse on the internet. You can also use Bluetooth connectivity while in the offline profile. Remember to comply with any applicable safety requirements when establishing and using WLAN or Bluetooth connections.

Shortcuts

To switch between open applications, press and hold the menu key.

Leaving applications running in the background increases the demand on battery power and reduces the battery life.

To start a web connection (network service), in the dialler, tap and hold **0**.

To access applications available in the media bar, such as the music player and web browser, in any view, press the media key.

To change the profile, press the power key, and select a profile.

To call your voice mailbox (network service), in the dialler, tap and hold **1**.

To open a list of last dialled numbers, in the home screen, press the call key.

To use voice commands, in the home screen, press and hold the call key.

Volume and loudspeaker control

To adjust the volume level when you have an active call or are listening to a sound clip, use the volume key.



The built-in loudspeaker allows you to speak and listen from a short distance without having to hold the device to your ear.

To use the loudspeaker during a call, select **Activate loudsp..**

To turn off the loudspeaker, select **Activate handset.**

Sensor settings and display rotation

When you activate the sensors in your device, you can control certain functions by turning the device.

Select **Menu > Settings and Phone > Sensor settings**.


Select from the following:

Sensors — Activate the sensors.

Turning control — Select **Silencing calls** and **Snoozing alarms** to mute calls and snooze alarms by turning your device so that the display faces down. Select **Auto-rotate display** to rotate the display content automatically when you turn the device on its left side or back to a vertical position. Some applications and features may not support rotating the display content.

Remote lock

To prevent unauthorised use of your device, you can lock your device and memory card remotely using a text message. You must define the text message, and to lock your device, send the text message to your device. To unlock your device, you need the lock code.

To enable remote locking, and to define the text message, select **Menu > Settings and Phone > Phone mgmt. > Security > Phone and SIM card > Remote phone locking > Enabled**. Tap the text input field to enter the text message content (5-20 characters), select , and verify the message. Enter the lock code.

Headset

You can connect a compatible headset or compatible headphones to your device. You may need to select the cable mode.


**Warning:**

When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Do not connect products that create an output signal as this may cause damage to the device. Do not connect any voltage source to the Nokia AV Connector.

When connecting any external device or any headset, other than those approved by Nokia for use with this device, to the Nokia AV Connector, pay special attention to volume levels.

Remove the SIM card

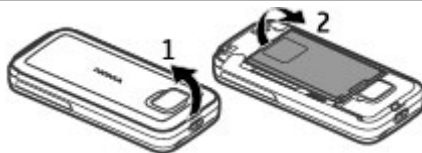

- 1 Remove the back cover by lifting it from the top end of the device.
- 2 Remove the battery.



- 3 Open the cover of the SIM card slot. Place the tip of the stylus in the opening under the battery, and push the SIM card sideways to slide it out of the slot. Pull the SIM card out.
- 4 Replace the battery and the back cover.

After removing and replacing the battery, you need to set the time and date again in your device.


Remove the memory card



Important: Do not remove the memory card during an operation when the card is being accessed. Doing so may damage the memory card and the device, and corrupt data stored on the card.

- 1 If the device is switched on, before you remove the card, press the power key, and select **Remove memory card**.
- 2 When **Remove memory card? Some applications will be closed.** is displayed, select **Yes**.
- 3 When **Remove memory card and press 'OK'** is displayed, open the cover of the memory card slot.
- 4 Press the memory card to release it from the slot.
- 5 Pull out the memory card. If the device is switched on, select **OK**.

Attach a wrist strap

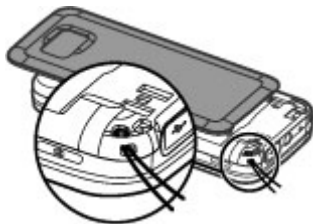

Thread the wrist strap, and tighten it.

4. Make calls


Touch screen during calls

Your device has a proximity sensor. To extend battery life and prevent accidental selections, the touch screen is disabled automatically during calls, when you place the device next to your ear.



Do not cover the proximity sensor, for example, with protective film or tape.

Calls

- 1 In the home screen, select **Telephone** to open the dialler, and enter the phone number, including the area code. To remove a number, select .
For international calls, select * twice for the + character (which replaces the international access code), and enter the country code, area code (omit the leading zero if necessary), and phone number.
- 2 To make the call, press the call key.
- 3 To end the call (or to cancel the call attempt), press the end key.
Pressing the end key always ends a call, even if another application is active.

To make a call from the contacts list, select **Menu > Contacts**.

Go to the desired name. Or, select the search field, enter the first letters or characters of the name, and go to the name.

To call the contact, press the call key. If you have saved several numbers for a contact, select the desired number from the list, and press the call key.

During a call

Mute or unmute the microphone

Select  or .

Put an active voice call on hold

Select  or .

Activate the loudspeaker

Select ). If you have attached a compatible headset with Bluetooth connectivity, to route the sound to the headset, select **Options** > **Activate BT handsfree**.

Switch back to the handset

Select ).

End a call

Select .

Switch between active and held calls

Select **Options** > **Swap**.

Tip: To put an active call on hold, press the call key. To activate the held call, press the call key again.

Send DTMF tone strings

- 1 Select **Options** > **Send DTMF**.
- 2 Enter the DTMF string or search for it from the contacts list.
- 3 To enter a wait character (w) or a pause character (p), press * repeatedly.
- 4 To send the tone, select **OK**. You can add DTMF tones to the phone number or DTMF field in contact details.

End an active call and replace it with another incoming call

Select **Options** > **Replace**.

End all calls

Select **Options** > **End all calls**.

Many of the options that you can use during a voice call are network services.

Voice mailbox

To call your voice mailbox (network service), in the home screen, select **Telephone**, and select and hold **1**.


- 1 To change the phone number of your voice mailbox, select **Menu** > **Settings** and **Calling** > **Call mailbox**, a mailbox, and **Options** > **Change number**.
- 2 Enter the number (obtained from your network service provider), and select **OK**.

Answer or reject a call

To answer a call when the touch screen is locked, swipe the screen. Follow the visual cues.

To answer a call when the touch screen is unlocked, press the call key.

To mute the ringing tone of an incoming call when the touch screen is locked, swipe to unlock the screen.

To mute the ringing tone of an incoming call when the touch screen is unlocked, , select .

You can send a text message without rejecting the call, informing the caller that you cannot answer the call. To activate the text message option and write a standard reply message, select **Menu > Settings and Calling > Call > Reject call with message**, and **Message text**. To send the reply message, select **Send msg.**, edit the message text, and press the call key.


If you do not want to answer a call, when the touch screen is unlocked, press the end key. If you activate the **Call divert > Voice calls > If busy** function in phone settings, rejecting an incoming call also diverts the call.

To reject a call when the touch screen is locked, swipe to unlock the screen, and select **Options > Reject**.

Make a conference call

Your device supports conference calls between a maximum of six participants, including yourself.

Conference calling is a network service.


- 1 Make a call to the first participant.
- 2 To make a call to another participant, select **Options > New call**. The first call is put on hold.
- 3 When the new call is answered, to add the first participant to the conference call, select .

Add a new participant to a conference call

Make a call to another participant, and add the new call to the conference call.

Have a private conversation with a conference call participant

Select .

Go to the participant, and select . The conference call is put on hold on your device. The other participants continue the conference call.

To return to the conference call, select .

Drop a participant from a conference call

Select , go to the participant, and select .

End an active conference call

Press the end key.

Speed dial a phone number

To activate speed dialling, select **Menu > Settings and Calling > Call > Speed dialling**.

- 1 To assign a phone number to one of the number keys, select **Menu > Settings and Calling > Speed dialling**.
- 2 Go to the key to which you want to assign the phone number, and select **Options > Assign**.
1 is reserved for the voice mailbox.

To call in the home screen, select **Telephone** and the assigned key, and press the call key.

To call in the home screen when speed dialling is active, select **Telephone**, and select and hold the assigned key.

Call waiting

You can answer a call when you have another call in progress.

To activate call waiting (network service), select **Menu > Settings and Calling > Call > Call waiting**.

- 1 To answer the waiting call, press the call key. The first call is put on hold.

- 2 To switch between the two calls, select **Options** > **Swap**.
- 3 To end the active call, press the end key.
- 4 To end both calls, select **Options** > **End all calls**.

Voice dialling

Your device automatically creates a voice tag for the contacts. To listen to the synthesised voice tag, select a contact and **Options** > **Voice tag details**. Scroll to a contact detail, and select **Options** > **Play voice tag**.

Make a call with a voice tag



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

When you use voice dialling, the loudspeaker is in use. Hold the device at a short distance away when you say the voice tag.

- 1 To start voice dialling, in the home screen, press and hold the call key. If a compatible headset with the headset key is attached, press and hold the headset key to start voice dialling.
- 2 A short tone sounds, and **Speak now** is displayed. Say clearly the name that is saved for the contact.
- 3 The device plays a synthesised voice tag for the recognised contact in the selected device language, and displays the name and number. To cancel the voice dialling, select **Quit**.

If several numbers are saved for a name, you can say also the name and the number type, such as mobile or telephone.

Log

The Log application stores information about the communication history of the device. The device registers missed and received calls only if the network supports these functions, and the device is switched on and within the network service area.


Recent calls


Select **Menu > Log and Recent calls**.


To view missed, received, and dialled calls, select **Missed calls**, **Received calls** or **Dialled numbers**.

Tip: To open the dialled numbers list in the home screen, press the call key.

On the toolbar, select from the following:

 **Call** — Call the desired contact.

 **Create message** — Send a message to the desired contact.

 **Open Contacts** — Open the contacts list.

Select **Options** and from the following:

Save to Contacts — Save the highlighted phone number from a recent calls list to your contacts.

Clear list — Clear the selected recent calls list.

Delete — Clear a highlighted event in the selected list.

Settings — Select **Log duration** and the length of time that the communication information is saved in the log. If you select **No log**, no information is saved in the log.

Packet data

Select **Menu > Log**.

You may be charged for your packet data connections by the amount of data sent and received.

To check the amount of data sent or received during packet data connections, select **Packet data** > **All sent data** or **All received data**.

To clear both sent and received information, select **Options** > **Clear counters**. You need the lock code to clear the information.


Call duration

Select **Menu** > **Log**.

To view the approximate duration of your last call, and dialled and received calls, select **Call duration**.

Monitor all communication events

Select **Menu** > **Log**.

To open the general log where you can monitor all voice calls, text messages, or data and wireless LAN connections registered by the device, select the general log tab   .

Subevents, such as a text message sent in more than one part and packet data connections, are logged as one communication event. Connections to your mailbox, multimedia messaging centre, or web pages are shown as packet data connections.

To view how much data was transferred and how long a certain packet data connection lasted, scroll to an incoming or outgoing event indicated by **GPRS**, and select **Options** > **View**.


To copy a phone number from the log to the clipboard, and paste it into a text message, for example, select **Options** > **Use number** > **Copy**.

To filter the log, select **Options** > **Filter** and a filter.


To set the log duration, select **Options** > **Settings** > **Log duration**. If you select **No log**, all the log contents, recent calls register, and messaging delivery reports are permanently deleted.

5. Contacts

You can save and update contact information, such as phone numbers, home addresses, or e-mail addresses of your contacts. You can add a personal ringing tone or a thumbnail image to a contact. You can also create contact groups, which allow you to send text messages or e-mail to many recipients at the same time.

To open the contacts list, in the home screen, depending on the home screen theme, select **Contacts** or .

Save and edit names and numbers


- 1 To add a new contact to the contacts list, select **Options** > **New contact**.
- 2 Tap a field to enter the information in the field. To close the text input, select . Fill in the fields that you want, and select **Done**.

To edit contacts, select a contact and **Options** > **Edit**.


Contacts toolbar

Select **Menu** > **Contacts**.

Call a contact

Go to a contact, and select .

Send a message to a contact

Go to a contact, and select .

Create a new contact

Select .

Manage names and numbers

To copy or delete a contact, or to send a contact as a business card to another device, tap and hold a contact, and select **Copy**, **Delete**, or **Send business card**.

To delete several contacts at the same time, select **Options** > **Mark/Unmark** to mark the desired contacts, and to delete, select **Options** > **Delete**.

To listen to the voice tag assigned to a contact, select the contact and **Options** > **Voice tag details** > **Options** > **Play voice tag**.

Before using voice tags, note the following:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags and use them in a quiet environment.
- Very short names are not accepted. Use long names, and avoid similar names for different numbers.



Note: Using voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialling in all circumstances.

Default numbers and addresses


You can assign default numbers or addresses to a contact. If a contact has several numbers or addresses, you can easily call or send a message to a certain number or address. The default number is also used in voice dialling.

- 1 In the contacts list, select a contact.
- 2 Select **Options** > **Defaults**.
- 3 Select a default to which you want to add a number or an address, and select **Assign**.
- 4 Select a number or an address you want to set as a default.
- 5 To exit the Defaults view and save the changes, tap outside the view.

Ringing tones, images, and call text for contacts

You can define a ringing tone for a contact or group, and an image and a call text for a contact. When the contact calls you, the device plays the selected ringing tone and shows the call text or image (if the caller's phone number is sent with the call and your device recognises it).

To define a ringing tone for a contact or a contact group, select the contact or contact group and **Options** > **Ringing tone**, and a ringing tone.

To define a call text for a contact, select the contact and **Options** > **Add call alert text**. Tap the text field to enter the call text, and select .

To add an image for a contact saved in the device memory, select the contact, **Options** > **Add image**, and an image from Gallery.


To remove the ringing tone, select **Default tone** from the list of ringing tones.

To view, change or remove the image from a contact, select the contact, **Options** > **Image**, and the desired option.

Copy contacts

When you open the contacts list for the first time, the device asks if you want to copy names and numbers from the SIM card to your device.

To start copying, select **OK**.

If you do not want to copy the contacts from the SIM card to your device, select **Cancel**. The device asks if you want to view the SIM card contacts in the contacts directory. To view the contacts, select **OK**. The contacts list opens, and the names stored on your SIM card are indicated with .

SIM services

For availability and information on using SIM card services, contact your SIM card vendor. This may be the network service provider or other vendor.

SIM contacts

To set the names and numbers stored on the SIM card to be shown on the contacts list, select **Options > Settings > Contacts to display > SIM memory**. You can add and edit SIM contacts, or call them.

The numbers you save in the contacts list may not be automatically saved to your SIM card. To save numbers to the SIM card, select a contact and **Options > Copy > SIM memory**.

To select whether the new contacts you enter are saved to your device or your SIM card, select **Options > Settings > Default saving memory > Phone memory or SIM memory**.

Fixed dialling

Select **Menu > Contacts and Options > SIM numbers > Fixed dial contacts**.

With the fixed dialling service, you can restrict calls from your device to certain phone numbers. Not all SIM cards support the fixed dialling service. For more information, contact your service provider.

When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialling), calls may be possible to the official emergency number programmed into your device. Call barring and call diverting cannot be active at the same time.

You need your PIN2 code to activate and deactivate fixed dialling or edit your fixed dialling contacts. Contact your service provider for your PIN2 code.

Select **Options** and from the following:

Activate fixed dialling — Activate the fixed dialling.

Deactivate fixed dialling — Deactivate the fixed dialling.

New SIM contact — Enter the contact name and phone number to which calls are allowed.

Add from Contacts — Copy a contact from the list of contacts to the fixed dialling list.

To send text messages to the SIM contacts while the fixed dialling service is active, you need to add the text message centre number to the fixed dialling list.

6. Write text

You can enter letters, numbers, and special characters in several different ways. The on-screen keyboard allows you to enter characters by tapping them with your fingers or the stylus. Handwriting recognition allows you to write characters directly onto the screen using the stylus as a pen. Handwriting recognition may not be available for all languages.

Tap any text input field to enter letters, numbers, and special characters.

Your device can complete words based on the built-in dictionary for the selected text input language. The device also learns new words from your input.

Automatic input modes

When the sensors and display rotation in your device are activated, the input mode is automatically switched to on-screen keyboard in landscape mode and to alphanumeric keypad in portrait mode. If you have selected handwriting recognition as the text input mode, the automatic input mode switching does not function.

To activate the sensors and display rotation, do the following:

- 1 Select **Menu > Settings and Phone > Sensor settings > Sensors > On.**
- 2 Select **Turning control > Auto-rotate display.**


On-screen keyboard

You can use the on-screen keyboard in landscape mode.

If automatic display rotation and sensors are activated, the text input mode changes automatically between Full screen QWERTY (on-screen keyboard) and Alphanumeric keypad (on-screen keypad) when you rotate the device.

If the text input mode does not change automatically, to enter text using the on-screen keyboard, select  > **Full screen QWERTY.**

When using the on-screen keyboard in landscape mode and in full screen mode, you can select the keys with your fingers.

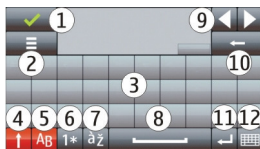


- 1 Close - Close the on-screen keyboard.

- 2 Input menu - Open the touch input options menu to access commands such as **Writing language**.
- 3 On-screen keyboard
- 4 Shift and caps lock - To enter an uppercase character when writing in lowercase, or vice versa, select the key before entering the character. To activate the caps lock, select the key twice. A line under the key indicates that the caps lock is activated.
- 5 Letters - Enter letters.
- 6 Numbers and symbols - Enter numbers and most commonly used special characters.
- 7 Character accents - Select language character accents.
- 8 Space bar - Insert a space.
- 9 Arrows - Move the cursor backward or forward.
- 10 Backspace - Delete the previously entered character.
- 11 Enter - Move the cursor to the next row or text input field. Additional functions are based on the current context (for example, in the web address field of the web browser, it acts as the Go button).
- 12 Input mode - Select the input method. When you select an item, the current input method view closes, and the selected one opens.

Handwriting


The input methods and languages supported by the handwriting recognition vary by region and may not be available for all languages.

To activate handwriting mode, select  > **Handwriting**.

Write legible, upright characters on the text input area, and leave a space between each character.

To teach the device your handwriting style, select  > **Handwriting training**.

To enter letters and numbers (default mode), write words as you would normally. To select number mode, select **12**. To enter non-Latin characters, select the corresponding icon, if available.

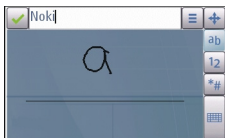

To enter special characters, write them as you would normally, or select ***#** and the desired character.

To delete characters or move the cursor back, swipe backwards (see Figure 1).


To insert a space, swipe forwards (see Figure 2).



Alphanumeric keypad

Virtual keypad

With the virtual keypad (**Alphanumeric keypad**), you can enter characters like you would with a traditional physical keypad with numbers on the keys.

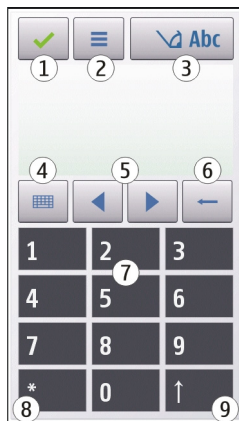

- 1 Close - Closes the virtual keypad (**Alphanumeric keypad**).
- 2 Input menu - Opens the touch input menu, which includes commands such as **Activate predictive text** and **Writing language**.
- 3 Text input indicator - Opens a pop-up window, in which you can activate or deactivate predictive text input modes, change the character case, and switch between letter and number modes.
- 4 Input mode - Opens a pop-up window, in which you can select the input mode. When you tap an item, the current input method view closes, and the selected one opens. The availability of input modes may vary depending on whether the automatic input mode (sensor settings) is activated or not.
- 5 Arrow keys - Scroll left or right.
- 6 Backspace
- 7 Numbers
- 8 Star - Opens a special characters table.

- 9 Shift - Changes the character case, activates or deactivates predictive text input modes, and switches between letter and number modes.

Traditional text input



Tap a number key (1-9) repeatedly until the desired character appears. There are more characters available for a number key than are visible on the key.

If the next letter is located on the same key as the present one, wait until the cursor appears (or move the cursor forward to end the time-out period), and enter the letter.

To insert a space, tap **0**. To move the cursor to the next line, tap **0** three times.

Predictive text input



With predictive text input, you can enter any word with a single key selection. Predictive text input is based on a built-in dictionary to which you can add new words. Predictive text input is not available for all languages.

- 1 To activate predictive text input for all editors on the device, select  > **Activate prediction**. You can also select  > **Activate predictive text**.
- 2 To write the desired word, use the keys 2-9. Select each key only once for one letter. For example, to write "Nokia" when the English dictionary is selected, select **6** for N, **6** for o, **5** for k, **4** for i, and **2** for a.
The word suggestion changes after each key selection.
- 3 When you finish writing the word correctly, move the cursor right to confirm it, or select **0** to add a space.
If the word is not correct, select * repeatedly to view the matching words the dictionary has found one by one.
If the ? character is displayed after the word, the word is not in the dictionary. To add a word to the dictionary, select the underlined word, enter the word

using traditional text input, and select **OK**. The word is added to the dictionary. When the dictionary is full, a new word replaces the oldest added word.

4 Start writing the next word.

Switch between text modes

To deactivate predictive text input for all editors in your device, select  > **Deactivate prediction**, or quickly double-tap #. Alternatively, you can select  > **Predictive text > Off**.

Touch input settings

Select **Menu > Settings and Phone > Touch input**.

To configure text input settings for the touch screen, select from the following:

Handwriting training — Open the handwriting training application. Train the device to recognise your handwriting better. This option is not available in all languages.

Writing language — Define which language-specific characters in your handwriting are recognised and how the on-screen keyboard is laid out.

Writing speed — Select a suitable writing speed.

Guiding line — Show or hide the guiding line in the writing area. The guiding line helps you write in a straight line, and it also helps the device recognise your writing.

Pen trail width — Select the thickness of the text written with the stylus.

Writing colour — Select the colour of the text written with the stylus.

Adaptive search — Activate adaptive search.

Touch screen calibration — Calibrate the touch screen as instructed.

7. Messaging

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.


Messaging main view


Select **Menu > Messaging** (network service).


To create a new message, select **New message**.


Tip: To avoid rewriting messages that you send often, use texts in the Templates folder in My folders. You can also create and save your own templates.


Messaging contains the following folders:


 **Inbox** — Received messages, except e-mail and cell broadcast messages, are stored here.


 **My folders** — Organise your messages into folders.

 **Mailbox** — Connect to your remote mailbox to retrieve your new e-mail messages, or view your previously retrieved e-mail messages offline.

 **Drafts** — Draft messages that have not been sent are stored here.

 **Sent** — The last messages that have been sent, excluding messages sent using Bluetooth connectivity, are stored here. You can change the number of messages to save in this folder.

 **Outbox** — Messages waiting to be sent are temporarily stored in the outbox, for example, when your device is outside network coverage.

 **Delivery reports** — You can request the network to send you a delivery report of the text messages and multimedia messages you have sent (network service).

Write and send messages

Select **Menu** > **Messaging**.



Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

Before you can create a multimedia message or write a mail, you must have the correct connection settings defined.

The wireless network may limit the size of MMS messages. If the inserted picture exceeds this limit, the device may make it smaller so that it can be sent by MMS.

Only devices that have compatible features can receive and display multimedia messages. The appearance of a message may vary depending on the receiving device.

Check the size limit of mail messages with your service provider. If you attempt to send a mail message that exceeds the size limit of the mail server, the message is left in the Outbox folder, and the device attempts to resend it periodically. Sending a mail requires a data connection, and continuous attempts to resend the mail may incur charges from your service provider. In the Outbox folder, you can delete such a message or move it to the Drafts folder.

Messaging requires network services.

Send a text or multimedia message

Select **New message**.

Send an audio or mail message

Select **Options** > **Create message**, and the relevant option.

Select recipients or groups from the contacts list

Select  from the toolbar.

Enter the number or mail address manually

Tap the To field.

Enter the subject of the mail or multimedia message

Enter it in the Subject field. If the Subject field is not visible, select **Options > Message header fields** to change the fields that are visible.

Write the message

Tap the message field.

Add an object to a message or mail

Select  and the relevant type of content.

The message type may change to multimedia message based on the inserted content.





Send the message or mail


Select  or press the call key.

Your device supports text messages beyond the limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly. Characters with accents, other marks, or some language options take more space, and limit the number of characters that can be sent in a single message.

Messaging inbox**Receive messages**

Select **Menu > Messaging and Inbox**.

In the Inbox folder,  indicates an unread text message,  an unread multimedia message,  an unread audio message, and  data received through Bluetooth connectivity.




When you receive a message,  and **1 new message** are displayed in the home screen. To open the message, select **Show**. To open a message in the Inbox folder, select the message. To reply to a received message, select **Options > Reply**.

Multimedia messages




Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

You may receive a notification that a multimedia message is waiting in the multimedia message centre. To start a packet data connection to retrieve the message to your device, select **Options > Retrieve**.

When you open a multimedia message () , you may see an image and a message.  is shown if sound is included, or  if video is included. To play the sound or the video, select the indicator.

To see the media objects that have been included in the multimedia message, select **Options > Objects**.

If the message includes a multimedia presentation,  is displayed. To play the presentation, select the indicator.

Data, settings, and web service messages

Your device can receive many kinds of messages that contain data, such as business cards, ringing tones, operator logos, calendar entries, and e-mail notifications. You may also receive settings from your service provider in a configuration message.

To save the data from the message, select **Options** and the corresponding option.

Web service messages are notifications (for example, news headlines) and may contain a text message or a link. For availability and subscription, contact your service provider.

Set up e-mail

To set up e-mail, select **Menu > Messaging and Mailbox**.

You can set up several e-mail accounts, for example, a personal e-mail account and a corporate e-mail account.

To set up e-mail from your home screen, select the relevant plug-in. Alternatively, to set up an e-mail account, select **Menu > Applications > Sett. wizard**.

Mailbox

Define e-mail settings

Select **Menu > Messaging and Mailbox**.

To use e-mail, you must have defined a valid internet access point (IAP) in the device and have defined your e-mail settings correctly.

You must have a separate e-mail account. Follow the instructions given by your remote mailbox and internet service provider (ISP).

If you select **Messaging > Mailbox** and have not set up your e-mail account, you are prompted to do so. To start creating the e-mail settings with the mailbox guide, select **Start**.

When you create a new mailbox, the name you give to the mailbox replaces Mailbox in the Messaging main view. You can have up to six mailboxes.

Open the mailbox

Select **Menu > Messaging** and a mailbox.

When you open the mailbox, the device asks if you want to connect to the mailbox.

To connect to your mailbox and retrieve new e-mail headers or messages, select **Yes**. When you view messages online, you are continuously connected to a remote mailbox using a data connection.

To view previously retrieved e-mail messages offline, select **No**.

To create a new e-mail message, select **Options > Create message > E-mail**.

When you are online, to end the data connection to the remote mailbox, select **Options > Disconnect**

Retrieve e-mail messages


Select **Menu > Messaging** and a mailbox.

If you are offline, select **Options > Connect** to open a connection to the remote mailbox.



Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

- 1 When you have an open connection to a remote mailbox, select **Options > Retrieve e-mail > New** to retrieve all new messages, **Selected** to retrieve only selected messages, or **All** to retrieve all messages from the mailbox.
To stop retrieving messages, select **Cancel**.
- 2 To close the connection and view the e-mail messages offline, select **Options > Disconnect**.
- 3 To open an e-mail message, select the message. If the e-mail message has not been retrieved and you are offline, you are asked if you want to retrieve this message from the mailbox.

To view e-mail attachments, open the message, and select the attachment field indicated by . If the attachment has not been retrieved to the device, select **Options > Retrieve**.

To retrieve e-mail messages automatically, select **Options > E-mail settings > Automatic retrieval**.

Setting the device to retrieve e-mail automatically may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.


Delete e-mail messages

Select **Menu > Messaging** and a mailbox.

To delete the contents of an e-mail message from the device while still retaining it in the remote mailbox, select **Options > Delete > Phone only**.

The device mirrors the e-mail headers in the remote mailbox. Although you delete the message content, the e-mail header stays in your device. If you want to remove the header as well, you must be connected to the server when deleting the message from your device and the remote mailbox. If there is no connection to the server, the header is deleted when you make a connection from your device to the remote mailbox again to update the status.

To delete an e-mail from the device and the remote mailbox, select **Options > Delete > Phone and server**.

To cancel deleting an e-mail that has been marked to be deleted from the device and server during the next connection () , select **Options > Restore**.

Disconnect from the mailbox

When you are online, to end the data connection to the remote mailbox, select **Options > Disconnect**.

Mail for Exchange

With Mail for Exchange, you can receive your work e-mail to your device. You can read and reply to your e-mails, view and edit compatible attachments, view calendar information, receive and reply to meeting requests, schedule meetings, and view, add, and edit contact information.

ActiveSync

Use of the Mail for Exchange application is limited to over-the-air synchronisation of PIM information between the Nokia device and the authorised Microsoft Exchange server.

Mail for Exchange can be set up only if your company has Microsoft Exchange Server. In addition, your company's IT administrator must have activated Mail for Exchange for your account.

Before starting to set up Mail for Exchange, ensure that you have the following:

- A corporate e-mail ID
- Your office network user name
- Your office network password
- Your network domain name (contact your company's IT department)
- Your Mail for Exchange server name (contact your company's IT department)

Depending on your company's Mail for Exchange server configuration, you may need to enter other information in addition to those listed. If you do not know the correct information, contact your company's IT department.

With Mail for Exchange, the use of the lock code may be mandatory. The default lock code of your device is 12345, but your company's IT administrator may have set a different one for you to use.

You can access and modify the Mail for Exchange profile and settings in the Messaging settings.

View messages on a SIM card

Select **Menu** > **Messaging and Options** > **SIM messages**.

Before you can view SIM messages, you must copy them to a folder in your device.

- 1 Select **Options** > **Mark/Unmark** > **Mark** or **Mark all** to mark messages.
- 2 Select **Options** > **Copy**. A list of folders opens.
- 3 To start copying, select a folder. To view the messages, open the folder.

Cell broadcast messages

Select **Menu** > **Messaging and Options** > **Cell broadcast**.

Cell broadcast (network service) allows you to receive messages on various topics, such as weather or traffic conditions, from your service provider. For available topics and relevant topic numbers, contact your service provider. This service may not be available for all regions.

Service commands

Select **Menu** > **Messaging and Options** > **Service commands**.

With service commands (network service) you can enter and send service requests (also known as USSD commands), such as activation commands for network services, to your service provider. This service may not be available for all regions.

Messaging settings

The settings may be preconfigured in your device, or you may receive them in a message. To enter settings manually, fill in all fields marked with **Must be defined** or an asterisk.

Some or all message centres or access points may be preset for your device by your service provider, and you may not be able to change, create, edit, or remove them.

Text message settings

Select **Menu > Messaging and Options > Settings > Text message**.

Select from the following:

Message centres — View a list of all text message centres that have been defined.

Message centre in use — Select which message centre to use to deliver text messages.

Character encoding — To use character conversion to another encoding system when available, select **Reduced support**.

Receive report — Request the network to send you a delivery report of the text messages you have sent (network service).

Message validity — Select for how long the message centre resends your message if the first attempt fails (network service). If the message cannot be sent within this time period, the message is deleted from the message centre.

Message sent as — To find out if your message centre is able to convert text messages into these other formats, contact your service provider.

Preferred connection — Select the connection to use.

Reply via same centre — Reply to messages using the same text message centre number (network service).

Multimedia message settings

Select **Menu > Messaging and Options > Settings > Multimedia message**.

Select from the following:

Image size — Define the size of the image in a multimedia message.

MMS creation mode — If you select **Guided**, the device informs you if you try to send a message that may not be supported by the recipient. If you select **Restricted**, the device prevents you from sending messages that may not be supported. To include content in your messages without notifications, select **Free**.

Access point in use — Select which access point is used as the preferred connection.

Multimedia retrieval — Select how you want to receive messages, if available. To receive messages automatically in your home network, select **Auto in home netw..** Outside your home network, you receive a notification that there is a message to retrieve in the multimedia message centre. If you select **Always automatic**, your device automatically makes an active packet data connection to retrieve the message both in and outside your home network. Select **Manual** to retrieve multimedia messages from the message centre manually, or **Off** to prevent receipt of any multimedia messages. Automatic retrieval may not be supported in all regions.

Allow anonymous msgs. — Reject messages from anonymous senders.

Receive adverts — Receive multimedia message advertisements (network service).

Receive reports — Display the status of sent messages in the log (network service).

Deny report sending — Prevent your device from sending delivery reports of received messages.

Message validity — Select for how long the message centre resends your message if the first attempt fails (network service). If the message cannot be sent within this time period, the message is deleted from the message centre.

The device requires network support to indicate that a sent message has been received or read. Depending on the network and other circumstances, this information may not always be reliable.

E-mail settings

Manage mailboxes

Select **Menu** > **Messaging and Options** > **Settings** > **E-mail**.

To select which mailbox you want to use to send and receive e-mail, select **Mailbox in use** and a mailbox.

To remove a mailbox and its messages from your device, select **Mailboxes**, tap the mailbox to be removed if it is not already highlighted, and select **Options** > **Delete**.

To create a new mailbox, select **Mailboxes** > **Options** > **New mailbox**. The name you give to the new mailbox replaces Mailbox in the Messaging main view. You can have up to six mailboxes.

Select **Mailboxes** and a mailbox to change the connection settings, user settings, retrieval settings, and automatic retrieval settings.


8. Personalise your device

You can personalise your device by changing the home screen, tones, or themes.

Change the look of your device

Select **Menu** > **Settings and Personal** > **Themes**.

You can use themes to change the look of the display, such as wallpaper and main menu layout.

To change the theme that is used for all the applications in your device, select **General**. To preview a theme before activating it, scroll to the theme, and wait for a few seconds. To activate the theme, select **Options** > **Set**. The active theme is indicated by .

To change the layout of the main menu, select **Menu**.

To change the look of the home screen, select **Home scr. theme**.

To have a wallpaper image or a slide show of changing images as the background in the home screen, select **Wallpaper** > **Image** or **Slide show**.

To change the image displayed in the home screen when a call is received, select **Call image**.

Profiles

Select **Menu** > **Settings** and **Personal** > **Profiles**.

You can use profiles to set and customise the ringing tones, message alert tones, and other tones for different events, environments, or caller groups. The name of the selected profile is displayed at the top of the home screen. If the General profile is in use, only the date is displayed.

To change a profile, scroll to the profile, and select **Options** > **Activate**.

To personalise a profile, scroll to the profile, and select **Options** > **Personalise**. Select the setting you want to change.

To set the profile to be active until a certain time within the next 24 hours, scroll to the profile, select **Options** > **Timed**, and set the time. When the time expires, the profile changes back to the previously active non-timed profile. When the profile is timed, ⌚ is displayed in the home screen. The Offline profile cannot be timed.

To create a new profile, select **Options** > **Create new**.

9. Music folder

Music player

Music player supports file formats such as AAC, AAC+, eAAC+, MP3, and WMA. Music player does not necessarily support all features of a file format or all the variations of file formats.

You can also use Music player to listen to podcasts. Podcasting is a method for delivering audio or video content over the internet using either RSS or Atom technologies for playback on mobile devices and computers.

Play a song or a podcast



To open Music player, select **Menu > Music > Music player**.


You may have to refresh the music and podcast libraries after you have updated the song or podcast selection in your device. To add all available items to the library, select **Options > Refresh library**.




To play a song or a podcast:


- 1 Select categories to navigate to the song or podcasts you want to hear.
- 2 To play an item, select the item from the list.

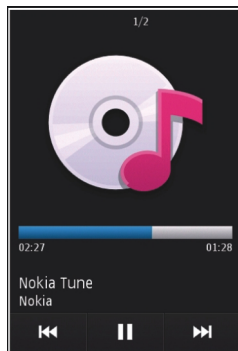

To pause playback, tap ; to resume, tap .

To fast-forward or rewind, tap and hold  or .



To go to the next item, tap . To return to the beginning of the item, tap . To skip to the previous item, tap  again within 2 seconds after a song or podcast has started.

To turn random play () on or off, select **Options** > **Shuffle play**.

To repeat the current item () , all items () , or to turn repeat off, select **Options** > **Repeat**.

If you play podcasts, shuffle and repeat are automatically turned off.

To adjust the volume, press the volume key.

To modify the tone of the music playback, select **Options** > **Equaliser**.

To modify the balance and stereo image or to enhance the bass, select **Options** > **Settings**.

To return to the home screen and leave the player playing in the background, press the end key.

To close the player, select **Options** > **Exit**.

Playlists

Select **Menu** > **Music** > **Music player** and **Playlists**.

To view details of the playlist, select **Options** > **Playlist details**.

Create a playlist

- 1 Select **Options** > **New playlist**.
- 2 Enter a name for the playlist, and select **OK**.
- 3 To add songs now, select **Yes**; or to add the songs later, select **No**.
- 4 If you select **Yes**, select artists to find the songs you want to add to the playlist. Select **Add** to add items.
To show the song list under an artist title, select **Expand**. To hide the song list, select **Collapse**.
- 5 When you have made your selections, select **Done**.
If a compatible memory card is inserted, the playlist is saved to the memory card.

To add more songs later, when viewing the playlist, select **Options** > **Add songs**.

To add songs, albums, artists, genres, and composers to a playlist from the different views of the music menu, select an item and **Options > Add to playlist > Saved playlist** or **New playlist**.

To remove a song from a playlist, select **Options > Remove**.

This does not delete the song from the device; it only removes it from the playlist.

To reorder songs in a playlist, select the song you want to move, and **Options > Reorder playlist**.

To grab a song and drop it to a new position, select the song in the desired position and **Drop**.

To finish reordering the playlist, select **Done**.

Podcasts

Select **Menu > Music > Music player and Podcasts**.

The podcast menu displays the podcasts available in the device.

Podcast episodes have three states: never played, partially played, and completely played. If an episode is partially played, it plays from the last playback position the next time it is played. If an episode has never been played or completely played, it plays from the beginning.

Transfer music from a computer

You can use the following methods to transfer music:

- To install Nokia Ovi Player to manage and organise your music files, download the PC software from www.ovi.com, and follow the instructions.
- To view your device on a computer as a mass memory device where you can transfer any data files, make the connection with a compatible USB data cable or Bluetooth connectivity. If you are using a USB data cable, select **Mass storage**

as the connection mode. A compatible memory card must be inserted in the device.

- To synchronise music with Windows Media Player, connect a compatible USB data cable, and select **Media transfer** as the connection mode. A compatible memory card must be inserted in the device.

To change the default USB connection mode, select **Menu > Settings and Connectivity > USB > USB connection mode**.

Nokia Ovi Player

With Nokia Ovi Player, you can download music from Ovi Music, transfer your music to your device from your computer, and manage and organise your music files. To download Nokia Ovi Player, go to www.ovi.com.

You need an internet connection to download music.

Download, transfer, and manage music between your computer and mobile device

- 1 Open Nokia Ovi Player on your computer. If you want to download music, register or sign in.
- 2 Connect your device to the computer with a compatible USB data cable.
- 3 To select the connection mode on your device, select **Media transfer**.

Ovi Music

With Ovi Music (network service), you can search, browse, buy, and download music to your device.

Select **Menu > Music > Ovi Music**.

To download music, you first need to register for the service.

Downloading music may involve additional costs and the transmission of large amounts of data (network service). For information about data transmission charges, contact your network service provider.

To access Ovi Music, you must have a valid internet access point in the device. You may be asked to select the access point to use when connecting to Ovi Music.

Select the access point

Select **Default access point**.

The availability and appearance of Ovi Music settings may vary. The settings may also be predefined and you may not be able to modify them. When browsing Ovi Music, you may be able to modify the settings.

Modify Ovi Music settings

Select **Options > Settings**.

Ovi Music is not available for all countries or regions.

Nokia Podcasting

With the Nokia Podcasting application (network service), you can search, discover, subscribe to, and download podcasts over the air, and play, manage, and share audio and video podcasts with your device.

Podcasting settings

To open Nokia Podcasting, select **Menu > Music > Podcasting**.

Before using Nokia Podcasting, define your connection and download settings.

The recommended connection method is WLAN. Check with your service provider for terms and data service fees before using different connection methods. For example, a flat rate data plan can allow large data transfers for one monthly fee.

Connection settings

To edit the connection settings, select **Options > Settings > Connection** and from the following:

Default access point — Select the access point to define your connection to the internet.

Search service URL — Define the podcast search service URL to be used in searches.

Download settings

To edit the download settings, select **Options > Settings > Download** and from the following:

Save to — Define the location where you want to save your podcasts.

Update interval — Define how often podcasts are updated.

Next update date — Define the date of the next automatic update.

Next update time — Define the time of the next automatic update.

Automatic updates only occur if a specific default access point is selected and Nokia Podcasting is running. If Nokia Podcasting is not running, the automatic updates are not activated.

Download limit (%) — Define the percentage of memory that is reserved for podcast downloads.

If limit exceeds — Define what to do if the downloads exceed the download limit.

Setting the application to retrieve podcasts automatically may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

To restore the default settings, select **Options > Restore default** in the settings view.

Download podcasts

After you have subscribed to a podcast, you can download, play, and manage the podcast episodes.

Select **Menu > Music > Podcasting**.

View a list of subscribed podcasts

Select **Podcasts**.

View individual episode titles

Select the podcast title.

An episode is a particular media file of a podcast.

Start a download

Select the episode title.

You can download multiple episodes at the same time.

Start playing a podcast before the download is complete

Select and hold a podcast, and from the pop-up menu, select **Play preview**.

Successfully downloaded podcasts are stored in the Podcasts folder, but may not be displayed immediately.

Radio


Listen to the radio

Select **Menu > Music > Radio**.

The FM radio depends on an antenna other than the wireless device antenna. A compatible headset or accessory needs to be attached to the device for the FM radio to function properly.

When you open the application for the first time, you can choose to have the local stations tuned automatically.

To listen to the next or the previous station, select  or .

To mute the radio, select .

Select **Options** and from the following:

Stations — View saved radio stations.

Tune stations — Search for radio stations.

Save — Save the radio station.

Activate loudspeaker or **Deactivate loudspeaker** — Turn the loudspeaker on or off.

Alternative frequencies — Select whether you want the radio to automatically search for a better RDS frequency for the station if the frequency level becomes low.

Play in background — Return to the home screen with the radio playing in the background.

Manage radio stations

Select **Menu** > **Music** > **Radio**.

To listen to saved stations, select **Options** > **Stations**, and select a station from the list.

To remove or rename a station, select **Options** > **Stations** > **Options** > **Delete** or **Rename**.

To set the desired frequency manually, select **Options** > **Tune stations** > **Options** > **Manual tuning**.

10. Nokia Video Centre

With Nokia Video Centre (network service), you can download and stream video clips over the air from compatible internet video services using a packet data or WLAN connection. You can also transfer video clips from a compatible PC to your device and view them in Video centre.

Using packet data access points to download videos may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

Your device may have predefined services.

Service providers may provide free content or charge a fee. Check the pricing in the service or from the service provider.

View and download video clips

Connect to video services

- 1 Select **Menu > Applications > Video centre**.
- 2 To connect to a service to install video services, select **Add new services** and the desired video service from the service catalogue.

View a video clip

To browse the content of installed video services, select **Video feeds**.

The content of some video services is divided into categories. To browse video clips, select a category.

To search for a video clip in the service, select **Video search**. Search may not be available in all services.

Some video clips can be streamed over the air, but others must be first downloaded to your device. To download a video clip, select **Options > Download**. Downloads

continue in the background if you exit the application. The downloaded video clips are saved in My videos.

To stream a video clip or view a downloaded one, select **Options** > **Play**.

When the video clip is playing, to use the control keys for controlling the player, tap the screen.

To adjust the volume, use the volume key.



Warning:

Continuous exposure to high volume may damage your hearing. Listen to music at a moderate level, and do not hold the device near your ear when the loudspeaker is in use.

Select **Options** and from the following:

Resume download — Resume a paused or failed download.

Cancel download — Cancel a download.

Preview — Preview a video clip. This option is available if supported by the service.

Video details — View information about a video clip.

Refresh list — Refresh the list of video clips.

Open link in browser — Open a link in the web browser.

Schedule downloads

Setting the application to download video clips automatically may involve the transmission of large amounts of data through your service provider's network. For information about data transmission charges, contact your service provider.

To schedule an automatic download for video clips in a service, select **Options** > **Schedule downloads**.

Video centre automatically downloads new video clips daily at the time you define.

To cancel scheduled downloads, select **Manual download** as the download method.

Video feeds

Select **Menu > Applications > Video centre**.

The content of the installed video services is distributed using RSS feeds. To view and manage your feeds, select **Video feeds**.

Select **Options** and from the following:

Feed subscriptions — Check your current feed subscriptions.

Feed details — View information about a video.

Add feed — Subscribe to new feeds. Select **Via Video directory** to select a feed from the services in the video directory.

Refresh feeds — Refresh the content of all feeds.

Manage account — Manage your account options for a particular feed, if available.

Move — Move video clips to a desired location.

To view the videos available in a feed, select a feed from the list.

My videos

My videos is a storage place for all video clips in the Video centre application. You can list downloaded video clips and video clips recorded with the device camera in separate views.

- 1 To open a folder and view video clips, select the folder. When a video clip is playing, to use the control keys for controlling the player, tap the screen.
- 2 To adjust the volume, press the volume key.

Select **Options** and from the following:

Resume download — Resume a paused or failed download.

Cancel download — Cancel a download.

Video details — View information about a video clip.

Find — Find a video clip. Enter a search term that matches the file name.

Memory status — View the amount of free and used memory.

Sort by — Sort video clips. Select the desired category.

Move and copy — Move or copy video clips. Select **Copy** or **Move** and the desired location.

Transfer videos from your PC

Transfer your own video clips to Video centre from compatible devices using a compatible USB data cable. Video centre displays only the video clips which are in a format supported by your device.

- 1 To view your device on a PC as a mass memory device where you can transfer any data files, make the connection with a USB data cable.
- 2 Select **Mass storage** as the connection mode. A compatible memory card needs to be inserted in the device.
- 3 Select the video clips you want to copy from your PC.
- 4 Transfer the video clips to **E:\My Videos** in the memory card.

The transferred video clips appear in the My videos folder in Video centre. Video files in other folders of your device are not displayed.

Video centre settings

In the Video centre main view, select **Options** > **Settings** and from the following:

Video service selection — Select the video services that you want to appear in Video centre. You can also add, remove, edit, and view the details of a video service. You cannot edit preinstalled video services.

Connection settings — To define the network destination used for the network connection, select **Network connection**. To select the connection manually each time Video centre opens a network connection, select **Always ask**.

To set GPRS connection on or off, select **Confirm GPRS usage**.

To set roaming on or off, select **Confirm roaming**.

Parental control — Set an age limit to videos. The required password is the same as the device lock code. The factory setting for the lock code is **12345**. In video-on-demand services, videos which have the same or a higher age limit than you have set, are hidden.

Preferred memory — Select whether downloaded videos are saved in the device memory or on a compatible memory card.

Thumbnails — Select whether to download and view thumbnail images in video feeds.

11. Camera

Your device supports an image capture resolution of 2048x1536 pixels. The image resolution in this guide may appear different.


Activate the camera

To activate the camera, press the capture key.

Image capture

On-screen controls and indicators for still image capture

The still image viewfinder displays the following:

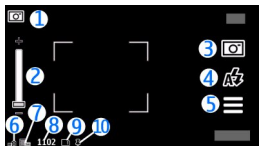

- 1 Capture mode indicator
- 2 Zoom slider. To turn the zoom slider on and off, tap the screen.
- 3 Capture icon. Tap to capture an image.
- 4 Flash mode. Tap to change settings.
- 5 Capture settings. Tap to change settings.
- 6 Battery charge level indicator
- 7 Image resolution indicator
- 8 Image counter (the estimated number of images you can capture using the current image quality setting and available memory)
- 9 Memory in use. Depending on the setup of your device, there are the following options: device memory (📁), or memory card (💾).
- 10 GPS signal indicator

Capture and recording settings

To open the capture and recording settings view before capturing an image or recording a video clip, select **Menu** > **Applications** > **Camera** and

The capture and recording settings view provides you with shortcuts to different items and settings before capturing an image or recording a video clip.


The capture and recording settings return to the default settings after you close the camera.


Select from the following:

A Select the scene.

 or  Switch between video and image mode.

 or  Show or hide the viewfinder grid (images only).

 Activate the self-timer (images only).

 Activate sequence mode (images only).






 Open Gallery.


Image settings:

 Select a colour effect.

 Adjust the white balance. Select the current lighting conditions. This allows the camera to reproduce colours more accurately.

 Adjust the exposure compensation (images only). If you are shooting a dark subject against a very light background, such as snow, adjust the exposure to +1 or +2 to compensate for the background brightness. For light subjects against a dark background, use -1 or -2.

 Adjust light sensitivity (images only). Increase the light sensitivity in low light conditions to avoid too dark images and blurry images. Increasing the light sensitivity may also increase the image noise.

 Adjust contrast (images only). Adjust the difference between the lightest and darkest parts of the image.

 Adjust sharpness (images only).

The screen display changes to match the settings you define.



The capture settings are shooting-mode specific. Switching between the modes does not reset the defined settings.

If you select a new scene, the capture settings are replaced by the selected scene. You can change the capture settings after selecting a scene if needed.

Saving the captured image may take longer if you change the zoom, lighting, or colour settings.

Capture an image

When capturing an image, note the following:

- Use both hands to keep the camera steady.
 - The quality of a digitally zoomed image is lower than that of a non-zoomed image.
 - The camera goes into battery saving mode after about a minute of inactivity.
 - Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.
- 1 To switch from video mode to image mode, if necessary, select  > .
 - 2 Press the capture key. Do not move the device before the image is saved and the final image displayed.

Zoom in or out when capturing an image


Use the zoom slider.


Leave the camera open in the background and use other applications

Press the menu key. To return to the camera, press and hold the capture key.

After capturing an image

After you capture an image, select from the following options (available only if you have selected **Options > Settings > Show captured image > Yes**):

 — Send the image in a multimedia or e-mail message, or through connection methods such as Bluetooth connectivity.

 — Upload the image to a compatible online album.

 **Delete** — Delete the image.

Use the image as wallpaper in the home screen

Select **Options** > **Use image** > **Set as wallpaper**.

Set the image as a default call image

Select **Options** > **Use image** > **Set as call image**.

Assign the image to a contact

Select **Options** > **Use image** > **Assign to contact**.

Return to the viewfinder, to capture a new image

Press the capture key.

Flash and video light

The camera of your device has an LED flash for low light conditions.

To select the desired flash mode, select the current flash mode indicator, which is one of the following:  **Automatic**,  **Reduce red**,  **On**, and  **Off**.

Avoid touching the flash LEDs. The LEDs may get hot after prolonged usage.

Keep a safe distance when using the flash. Do not use the flash on people or animals at close range. Do not cover the flash while taking a picture.

Increase light levels when recording video in low light

Select .

Scenes

A scene helps you to find the right colour and lighting settings for the current environment. The settings of each scene have been set according to a certain style or environment.

The default scene in image and video modes is **Automatic** (indicated with **A**).

To change the scene, select  > **Scene modes** and a scene.

To make your own scene suitable for a certain environment, select **User defined** > **Change**. In the user defined scene you can adjust different lighting and colour settings. To copy the settings of another scene, select **Based on scene mode** and the desired scene. To save the changes and return to the scenes list, select **Back**. To activate your own scene, select **User defined** > **Select**.

Location information

Your device does not have an internal GPS antenna. To use this feature, use a compatible GPS receiver (accessory sold separately).

You can automatically add capture location information to the file details of the captured material.

The location coordinate values may not be displayed due to local authorities' requirements.



Select **Menu** > **Applications** > **Camera**.


To add location information to all captured material, select **Options** > **Settings** > **Show GPS info** > **On**.

It may take several minutes to obtain the coordinates of your location. The availability and quality of GPS signals may be affected by your location, buildings, natural obstacles, and weather conditions. If you share a file that includes location

information, also the location information is shared, and your location may be visible to third parties viewing the file. The device requires network services to acquire location information.



Location information indicators:

 — Location information unavailable. GPS stays on in the background for several minutes. If a satellite connection is found and the indicator changes to  within that time, all the images captured and video clips recorded during that time are tagged based on the received GPS positioning information.

 — Location information is available. Location information is added to the file details.

You in the image — self-timer

Use the self-timer to delay the capture so that you can include yourself in the image.

To set the self-timer delay, select  >  and the delay needed before the image is captured.


To activate the self-timer, select **Activate**. The stopwatch icon on the screen blinks and the remaining time is displayed when the timer is running. The camera captures the image after the selected delay elapses.

To switch off the self-timer, select  >  > .

Tip: Select **2 seconds** to keep your hand steady when capturing an image.

Capture images in a sequence


Select **Menu** > **Applications** > **Camera**.

To start capturing images in a quick sequence, select **Menu** > **Applications** > **Camera** and  > **Sequence**. To close the settings window, tap the screen above

the window. Press and hold the capture key. The device captures images until you release the key or until the memory runs out. If you press the capture key briefly, the device captures 18 images in a sequence.




The captured images are displayed in a grid. To view an image, select the image. To return to the sequence mode viewfinder, press the capture key.

You can also use sequence mode with the self-timer.

To deactivate sequence mode, select  > **Single shot**.


Video recording

Record a video clip

- 1 To switch from image mode to video mode, if necessary, select  > .
- 2 To start recording, press the capture key, or select . A red record icon is displayed.
- 3 To pause recording, select **Pause**. To resume, select **Continue**. If you pause recording and do not press any key within one minute, the recording stops. To zoom in or out, use the zoom keys.
- 4 To stop recording, press the capture key. The video clip is automatically saved in Gallery.

Video recording on-screen controls and indicators

The video viewfinder displays the following:

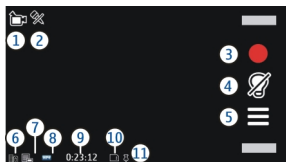

- 1 Capture mode indicator
- 2 Audio mute on indicator
- 3 Capture icon. Select to record video clips.
- 4 Video light indicator
- 5 Recording settings. Select to change settings.
- 6 Battery charge level indicator
- 7 Video quality indicator. To change this setting, select **Options > Settings > Video quality**.
- 8 Video clip file type
- 9 Available recording time. When you are recording, the current video length indicator also shows the elapsed and remaining time.
- 10 The location to which the video clip is saved
- 11 GPS signal indicator

After recording a video clip

After you record a video clip, select from the following options (available only if you have selected **Options > Settings > Show last captured video > Yes**):

► **Play** — Play the video clip you just recorded.



📷 — Upload the image to a compatible online album.

🗑️ **Delete** — Delete the video clip.

To return to the viewfinder to record a new video clip, press the capture key.


12. Gallery

To store and organise your images, video clips, sound clips, and streaming links, select **Menu > Gallery**.


Tip: To access the images and video clips view quickly, tap the media key () to open the media bar, and select .


View and organise files

Select **Menu > Gallery** and from the following:


 **Images & videos** — View images in the image viewer and videos in Video centre.

 **Songs** — Open Music player.

 **Sound clips** — Listen to sound clips.

 **Other media** — View presentations.

You can browse, open, and create folders; and mark, copy, move, and add items to folders.

Files stored on your compatible memory card (if inserted) are indicated with .

To open a file, select a file from the list. Video clips and files with the .ram file extension open and play in Video centre, and music and sound clips in Music player.

To copy or move files to the memory card (if inserted) or device memory, select a file, **Options > Organise > Copy or Move**, and from the available options.

View images and videos

Select **Menu > Gallery** and **Images & videos**.

By default, the images, video clips, and folders are organised by date and time.

To open a file, select a file from the list. To zoom in an image, use the volume key.

To edit a video clip or an image, select **Options > Edit**.

Select **Options > Use file** and from the following:


Set as wallpaper — Use the image as wallpaper in the home screen.


Set as call image — Set the image as a generic call image.


Assign to contact — Set the image as a call image for a contact.

The toolbar helps you select frequently used functions with images, video clips, and folders.

From the toolbar, select from the following:

 **Send** — Send an image or a video clip.

 **Edit** — Edit an image or a video clip.

 **Delete** — Delete an image or a video clip.

Organise images and video clips

Select **Menu > Gallery**.

Create a new folder

Select **Images & videos > Options > Folder options > New folder**.

Move a file

Select the file and **Options > Folder options > Move to folder**.

13. Share online

About Share online

Select **Menu > Share online**.

100 Share online

With Share online (network service), you can post your images, video clips, and sound clips from your device to compatible online sharing services, such as albums and blogs. You can also view and send comments to the posts in these services, and download content to your compatible Nokia device.

The supported content types and the availability of the Share online service may vary.

Subscribe to an online sharing service

Select **Menu** > **Share online**.

- 1 Go to the service provider's website, and make sure your Nokia device is compatible with the service.
- 2 Create an account as instructed on the website. You receive a username and password needed to set up your device with the account.

Activate a service

- 1 Select and hold the service, and from the pop-up menu, select **Activate**.
- 2 Allow the device to open a network connection. If prompted, select an internet access point from the list.
- 3 Sign in to your account as instructed on the service provider's website.

For the availability and cost of the third party services and data transfer costs, contact your service provider or the relevant third party.

Manage your accounts

To view your accounts, select **Options** > **Settings** > **My accounts**.

To create a new account, select **Options** > **Add new account**.

To change your user name or password for an account, select the account and **Options** > **Open**.

To set the account as the default when sending posts from your device, select **Options > Set as default**.

To remove an account, select the account and **Options > Delete**.

Create a post

Select **Menu > Share online**.

To post your images or video clips to a service, select and hold the service, and from the pop-up menu, select **New upload**. If the online sharing service provides channels for posting files, select the desired channel.

To add your image, video clip, or sound clip to the post, select **Options > Add**.

Enter a title or description for the post, if available.

To add tags to the post, select **Tags**.

To enable the posting of location information contained in the file, select **Location**.

To send the post to the service, select **Options > Upload**.

Post files from Gallery

You can post your images and video clips from Gallery to an online sharing service.

- 1 Select **Menu > Gallery** and your images and video clips to post.
- 2 Select **Options > Send > Upload** and the desired account.
- 3 Edit your post as required.
- 4 Select **Options > Upload**.

14. Internet

About the web browser



Select **Menu** > **Internet** > **Web**.

Catch up on the news, and visit your favourite websites. You can use your phone web browser to view web pages on the internet.

To browse the web, you must be connected to the internet.

Browse the web

Select **Menu** > **Internet** > **Web**.

Tip: If you do not have a flat-rate data plan from your service provider, to save data costs in your phone bill, you can use a WLAN to connect to the internet.

Go to a website

Select the web address bar, enter a web address, and select ►.

Tip: To search the internet, select the web address bar, enter the search word, and select the link below the web address bar.

Zoom in or out

Double-tap the screen.

A cache is a memory location that is used to store data temporarily. If you have tried to access or have accessed confidential information requiring passwords, empty the cache after each use. The information or services you have accessed are stored in the cache.



Empty the cache

Select  >  > **Privacy** > **Clear privacy data** > **Cache**.



Add a bookmark

If you visit the same websites all the time, add them to your Bookmarks view, so you can easily access them.

Select **Menu** > **Internet** > **Web**.

While browsing, select  > .


Go to a bookmarked website while browsing



Select  >  and a bookmark.

Subscribe to a web feed

You don't have to visit your favourite websites regularly to keep up with what's new on them. You can subscribe to web feeds and get links to latest content automatically.

Select **Menu** > **Internet** > **Web**.

Web feeds on web pages are usually indicated with . They are used to share, for example, the latest news headlines or blog entries.

Go to a blog or web page that contains a web feed, and select  >  and the desired feed.


Update a feed

In the Web feeds view, select and hold the feed, and from the pop-up menu, select **Refresh**.

Set a feed to automatically update

In the Web feeds view, select and hold the feed, and from the pop-up menu, select **Edit > Automatic updates**.

Unreadable characters while browsing the web

If unreadable characters are displayed, select **Menu > Internet > Web** and  **> Page > Default encoding** and the correct encoding for the character set of the language.

15. Positioning

Positioning with your device

You can use applications such as GPS data to find out your location, or measure distances and coordinates. These applications require a GPS connection.

Your device does not have an internal GPS antenna. To use applications that require a GPS connection, use a compatible GPS receiver (accessory sold separately). Use Bluetooth connectivity to connect to the GPS receiver.

You can also use network-based positioning with your device.

Network positioning

You can use the mobile network to find out your current location, even indoors. This is faster but less accurate than with GPS, and you cannot use the location as a starting point for navigation.

To use the mobile network for positioning, in the device settings, select the network-based positioning method.

About GPS

The Global Positioning System (GPS) is operated by the government of the United States, which is solely responsible for its accuracy and maintenance. The accuracy of location data can be affected by adjustments to GPS satellites made by the United States government and is subject to change with the United States Department of Defense civil GPS policy and the Federal Radionavigation Plan. Accuracy can also be affected by poor satellite geometry. Availability and quality of GPS signals may be affected by your location, buildings, natural obstacles, and weather conditions. GPS signals may not be available inside buildings or underground and may be impaired by materials such as concrete and metal.

GPS should not be used for precise location measurement, and you should never rely solely on location data from the GPS receiver and cellular radio networks for positioning or navigation.

The trip meter has limited accuracy, and rounding errors may occur. Accuracy can also be affected by availability and quality of GPS signals.

The coordinates in the GPS are expressed using the international WGS-84 coordinate system. The availability of the coordinates may vary by region.

Check the satellite signal status

Your device does not have an internal GPS antenna. To use applications that require a GPS connection, use a compatible GPS receiver (accessory sold separately).

To check how many satellites the GPS receiver has found, and whether it is receiving satellite signals, select **Menu > Applications > Location and GPS data > Position > Options > Satellite status**.

When you receive a position request, the service that is making the request is displayed. Select **Accept** to allow your position information to be sent or **Reject** to deny the request.

Landmarks

Select **Menu > Applications > Location and Landmarks**.

With Landmarks, you can save the position information of specific locations in your device. You can sort the saved locations into different categories, such as business, and add other information to them, such as addresses. You can use your saved landmarks in compatible applications, such as GPS data.

GPS coordinates are expressed using the international WGS-84 coordinate system.

Select **Options** and from the following:

New landmark — Create a new landmark. To make a positioning request for your current location, select **Current position**. To enter the position information manually, select **Enter manually**.

Edit — Edit or add information to a saved landmark (for example, a street address).

Add to category — Add a landmark to a category in Landmarks. Select each category to which you want to add the landmark.

Send — Send one or several landmarks to a compatible device. Your received landmarks are placed in the Inbox folder in Messaging.

You can sort your landmarks into preset categories, and create new categories. To edit and create new landmark categories, open the categories tab, and select **Options > Edit categories**.

GPS data

GPS data is designed to provide route guidance information to a selected destination and traveling information, such as the approximate distance to the destination and approximate duration of travel. You can also view position information about your current location.

108 Maps

Select **Menu** > **Applications** > **Location and GPS data**.

Positioning settings

Select **Menu** > **Applications** > **Location and Positioning**.

Positioning methods

Select from the following:

Bluetooth GPS — Use a compatible external GPS receiver with Bluetooth connectivity.

Network based — Use information from the cellular network (network service).

Positioning server

To define an access point and positioning server for network-assisted positioning methods, such as network-based positioning, select **Positioning server**.

The positioning server may be preset by your service provider, and you may not be able to edit the settings.

Notation settings

To select which measurement system you want to use for speeds and distances, select **Measurement system** > **Metric** or **Imperial**.

To define in which format the coordinate information is displayed in your device, select **Coordinate format** and the desired format.

16. Maps

About Maps

Select **Menu** > **Applications** > **Maps**.



With Maps, you can see your current location on the map, browse maps of different cities and countries, search for places of interest, plan routes from one location to another, save locations, and send them to compatible devices. You can also purchase traffic information and navigation services, if available for your country or region.

Some services may not be available in all countries, and may be provided only in selected languages. The services may be network dependent. For more information, contact your network service provider.

Your device does not have an in-built GPS receiver. To use Maps services that require a GPS connection, use a compatible external GPS receiver (sold separately).

When you use Maps for the first time, you may need to select an internet access point for downloading maps.

When you have an active data connection and browse the map on the display, a new map is automatically downloaded, if you browse to an area not covered by the maps that have already been downloaded.

Tip: You can also use Maps without an internet connection, and browse the maps that are saved in your device or memory card, if available in your device.




Note: Downloading content such as maps, satellite images, voice files, guides or traffic information may involve transmission of large amounts of data (network service).

Almost all digital cartography is inaccurate and incomplete to some extent. Never rely solely on the cartography that you download for use in this device.

Move on a map

Select **Menu** > **Applications** > **Maps**.

When the GPS connection is active,  shows your current location on the map.

View your current or last known location

Select .

Move on the map

Drag the map. By default, the map is oriented north.

When you have an active data connection and browse the map on the display, a new map is automatically downloaded, if you browse to an area not covered by the maps that have already been downloaded. The maps are automatically saved in the device memory or on a compatible memory card, if available in your device.

Zoom in and out on the map

Select + and -.

Change the map type


Select **Options** > **Map mode**.

Find locations


You can search for specific addresses, points of interest, and other locations, such as hotels and restaurants.

Select **Menu** > **Applications** > **Maps**.

Find an address

- 1 Select  > **Address**.
- 2 Start entering the required information. The fields marked with an asterisk (*) are mandatory.
- 3 Select **Options** > **Search**.
- 4 Select the address from the list of proposed matches.

Find a place

- 1 Select  > **Places**.
- 2 Select from specific categories, or enter the search terms and select **Search**.
- 3 Select the place from the list of proposed matches.

Plan routes

You can create routes and view them on the map.

Select **Menu** > **Applications** > **Maps**.

Create a route

- 1 Tap your starting point on the map. To add the destination and more locations to the route, select **Add new route point**. If you want to use your current position as the starting point, add the destination to the route.
- 2 Tap the information area above the map, and select **Add to route**.
- 3 Select **Add new route point**, and add the destination and more locations to the route.

Change the order of the locations in the route

Tap a location, and select **Move**. Tap the place where you want to move the location to.

Show the route on the map

Select **Show route**.

Navigate to the destination

Select **Show route** > **Options** > **Start driving** or **Start walking**. To be able to navigate, you need to purchase a licence.

Save the route

Select **Show route** > **Options** > **Save route**.

Save and send locations

You can save your favourite locations to your device and send them to compatible devices.

Select **Menu** > **Applications** > **Maps**.

Save a location to your device

Tap the location, tap the information area above the map, and select **Save**.

View your saved locations

In the main view, select **Options** > **Favourites**.

Send a location to a compatible device

Tap the location, and select **Send**.

View your saved items

You can sort the locations and routes you have saved to your device, and view them on the map. You can also create collections of your favourite places, such as restaurants and museums.

Select **Menu** > **Applications** > **Maps**.

View the saved locations and routes

Select **Options** > **Favourites**.

Sort the saved locations

- 1 Select **Options** > **Favourites**.
- 2 Go to **Places**.
- 3 Select **Options** > **Sort**.

View a location on the map

- 1 Select **Options** > **Favourites** > **Places**.

- 2 Select the location.
- 3 Select **Show on map**.

Create a collection

Select **Options > Favourites > Options > New collection**.

Synchronise your favourite locations with Ovi Maps

The Ovi website contains the internet services that Nokia provides. The Ovi Maps section contains services related to Maps. You can synchronise your saved locations, collections, and routes with Ovi Maps, if you have a Nokia account in Ovi. To create the account, go to www.ovi.com.

Select **Menu > Applications > Maps**.

Synchronise saved items with Ovi Maps

Select **Options > Favourites > Synchronise with Ovi**.

Set the device to synchronise items automatically

Select **Options > Tools > Settings > Synchronisation > Synchronisation > At start-up and shut-d..** The device starts the synchronisation when you open and close the Maps application.

Synchronising may involve the transmission of large amounts of data through your service provider's network. Contact your service provider for information about data transmission charges.

Walk to your destination

When you purchase a licence for pedestrian navigation, you can create routes that include pedestrian zones and parks, prioritise walkways and smaller roads, and omit motorways.

With the licence, you also get the enhanced search service to your device, if available for your country or region. The enhanced search service enables you to find local events and travelling-related information when you perform searches.

Select **Menu > Applications > Maps**.

Purchase a licence for pedestrian navigation

Select **Options > Shop & licences > Options > Shops for other regions > All regions > City explorer**. You can pay for the licence through a credit card or in your phone bill, if supported by your service provider.

Start navigating

Tap a location, tap the information area above the map, and select **Walk to**.

The distance between the start and end points of a walking route is limited to a maximum of 50 kilometres (31 miles) and the travelling speed to a maximum of 30 kph (18 mph). If the speed limit is exceeded, navigation stops and is resumed once the speed is back within limits.

If the destination is on off-road terrain, the route is displayed as a straight line to indicate the walking direction.

There is no voice guidance available for pedestrian navigation, but the device guides you with a tone or vibration approximately 20 metres (22 yards) before you need to turn or make another manoeuvre. The guiding method depends on the settings of the profile currently active in your device.

See an overview of the route

Select **Options > Route overview**.

Stop navigating

Select **Stop**.

Drive to your destination

You can purchase a licence for navigating on foot or by car. The licence is region-specific and can be used only in the selected area.

To help navigating and driving, you also have lane assistance and speed limit warning services in your device, if available for your country or region.

Select **Menu** > **Applications** > **Maps**.

Purchase a licence

Select **Options** > **Shop & licences** > **Shop**, and select the drive navigation option for your region.

Start navigating by car

Select a location, tap the information area above the map, and select **Drive to**.

When you use car navigation for the first time, you are asked to select the language of the voice guidance and download the related voice guidance files.



Note: Downloading content such as maps, satellite images, voice files, guides or traffic information may involve transmission of large amounts of data (network service).

To switch between different views during the navigation, tap the information area above the map, and select **2D view**, **3D view**, **Arrow view**, or **Route overview**.

Find an alternative route

Select **Options** > **Diff. route**.

Repeat the voice guidance

Select **Options** > **Repeat**.

Adjust the volume of the voice guidance

Select **Options** > **Volume**.

View the trip distance and duration

Select **Options** > **Dashboard**.

Stop navigating

Select **Stop**.

Your first consideration while using Maps should be road safety. The service should not be used by the driver of a motor vehicle while driving.

View traffic and safety information

The real-time traffic information service provides information about traffic events that may affect your travel. You can purchase and download the traffic information service to your device, if available in your country or region.

When you purchase the licence, the location of speed cameras is shown on your route during navigation and tracking, if this feature is enabled and available for your country or region. Some jurisdictions prohibit or regulate the use of speed camera location data. Nokia is not responsible for the accuracy, or the consequences of use of speed camera location data.

Select **Menu** > **Applications** > **Maps**.

Content such as satellite images, guides, weather and traffic information and related services are generated by third parties independent of Nokia. The content may be inaccurate and incomplete to some extent and is subject to availability. Never rely solely on the aforementioned content and related services.

Purchase a licence for the traffic information service

Select **Options** > **Shop & licences** > **Shop**, and select the traffic information service for your region.

View information about traffic events

When navigating by car, select **Options** > **Traffic info**. The events are shown on the map as triangles and lines.

View the details and possible rerouting options

Select **Options** > **Show details**.

Update the traffic information

Select **Update traffic info**.

Set your device to avoid traffic events

In the main view, select **Options** > **Tools** > **Settings** > **Navigation** > **Reroute due to traffic**.

17. Connectivity

Your device offers several options to connect to the internet or to another compatible device or PC.

Data connections and access points

Your device supports packet data connections (network service), such as GPRS in the GSM network.

You can also use a WLAN data connection. Only one connection in one wireless LAN can be active at a time, but several applications can use the same internet access point.

To establish a data connection, an access point is required. You can define different kinds of access points, such as the following:

- MMS access point to send and receive multimedia messages
- Internet access point (IAP) to send and receive e-mail and connect to the internet

Check the type of access point you need with your service provider for the service you want to access. For availability and subscription to packet data connection services, contact your service provider.

Network settings

Select **Menu > Settings and Connectivity > Network**.

Select from the following:

Operator selection — Select **Automatic** to set the device to search for and select one of the available networks, or **Manual** to manually select the network from a list. If the connection to the manually selected network is lost, the device sounds an error tone and asks you to reselect a network. The selected network must have a roaming agreement with your home network.

Cell info display — Set the device to indicate when it is used in a cellular network based on microcellular network (MCN) technology and to activate cell info reception.

Wireless LAN

Your device can detect and connect to wireless local area networks (WLAN). Using a WLAN, you can connect your device to the internet and compatible devices that have WLAN support.

About WLAN

To use a wireless LAN (WLAN) connection, it must be available in the location, and your device must be connected to the WLAN. Some WLANs are protected, and you need an access key from the service provider to connect to them.



Note: Using WLAN may be restricted in some countries. For example, in France, you are only allowed to use WLAN indoors. For more information, contact your local authorities.

Features that use WLAN, or that are allowed to run in the background while using other features, increase the demand on battery power and reduce the battery life.

Your device supports the following WLAN features:

- IEEE 802.11b/g and WAPI standards
- Operation at 2.4 GHz
- Wired equivalent privacy (WEP) with keys up to 128 bits, Wi-Fi protected access (WPA), and 802.1x authentication methods. These functions can be used only if they are supported by the network.



Important: Always enable one of the available encryption methods to increase the security of your wireless LAN connection. Using encryption reduces the risk of unauthorised access to your data.

WLAN connections

To use a wireless LAN (WLAN) connection, you must create an internet access point (IAP) for WLAN. Use the access point for applications that need to connect to the internet.

A WLAN connection is established when you create a data connection using a WLAN internet access point. The active WLAN connection ends when you end the data connection.

You can use WLAN during a voice call or when packet data is active. You can only be connected to one WLAN access point device at a time, but several applications can use the same internet access point.

When the device is in the offline profile, you can still use WLAN (if available). Remember to comply with any applicable safety requirements when establishing and using a WLAN connection.

Tip: To check the unique media access control (MAC) address that identifies your device, open the dialler and enter ***#62209526#**.

WLAN wizard

Select **Menu > Settings and Connectivity > Wireless LAN**.

The WLAN wizard helps you to connect to a wireless LAN (WLAN) and manage your WLAN connections.

If the search finds WLANs, to create an internet access point (IAP) for a connection and start the web browser using this IAP, select the connection and **Start web browsing**.

If you select a secured WLAN, you are asked to enter the relevant password. To connect to a hidden network, you must enter the correct network name (service set identifier, SSID).

If you already have the web browser running using the currently active WLAN connection, to return to the web browser, select **Continue web browsing**.

To end the active connection, select the connection and **Disconnect WLAN**.

WLAN internet access points

Select **Menu > Settings and Connectivity > Wireless LAN > Options**.

Select from the following:

Filter WLAN networks — Filter out wireless LANs (WLANs) from the list of found networks. The selected networks are not displayed the next time the application searches for WLANs.

Details — View the details of a network shown in the list. If you select an active connection, the connection details are displayed.

Operating modes

There are two operating modes in WLAN: infrastructure and ad hoc.


The infrastructure operating mode allows two kinds of communication: wireless devices are connected to each other through a WLAN access point device, or wireless devices are connected to a wired LAN through a WLAN access point device.

In the ad hoc operating mode, devices can send and receive data directly with each other.

Wireless LAN settings

Select **Menu > Settings and Connectivity > Wireless LAN > Options > Settings**.

Select from the following:

Show WLAN availability — Select whether  is displayed when a wireless LAN (WLAN) is available.

Tip: To access the WLAN Wizard application and view the available options, select the WLAN icon, and in the pop-up window, select the highlighted text next to the WLAN icon.

Scan for networks — If you set **Show WLAN availability** to **Yes**, you can select how often the device searches for available WLANs and updates the indicator.

Internet connectivity test — Select whether you want the device to test the internet capability of the selected WLAN automatically, to ask for permission every time, or to never perform the connectivity test. If you select **Run automatically** or allow the test to be performed when the device asks for it, and the connectivity test is performed successfully, the access point is saved to the internet destinations.




To view advanced settings, select **Options > Advanced settings**. Changing the advanced settings for the WLAN is not recommended.

Access points

Create a new access point

Select **Menu > Settings and Connectivity > Destinations**.

You may receive access point settings in a message from a service provider. Some or all access points may be preset for your device by your service provider, and you may not be able to change, create, edit, or remove them.

When you open one of the access point groups (, , ) , you can see the access point types:



indicates a protected access point




indicates a packet data access point



indicates a wireless LAN (WLAN) access point

Tip: You can create internet access points in a WLAN with the WLAN wizard.

To create a new access point, select  **Access point**.

The device asks to check for available connections. After the search, connections that are already available are shown and can be shared by a new access point.

If you skip this step, you are asked to select a connection method and to define the settings needed.

To edit the settings of an access point, open one of the access point groups, and select an access point. Follow the instructions from your service provider.

Connection name — Enter a name for the connection.

Data bearer — Select the data connection type.

Depending on the data connection you select, only certain setting fields are available. Fill in all fields marked with **Must be defined** or with a red *. Other fields can be left empty, unless your service provider has instructed otherwise.

To use a data connection, your service provider must support this feature, and if necessary, activate it for your SIM card.

Create access point groups

Select **Menu > Settings and Connectivity > Destinations**.

Some applications allow you to use access point groups for network connections.

To avoid selecting a single access point every time the device makes a network connection, you can create a group that contains various access points to connect to that network and define the order in which the access points are used.

For example, you can add wireless LAN (WLAN) and packet data access points to an internet access point group, and use the group for browsing the web. If you give WLAN the highest priority, the device connects to the internet through WLAN, if available, and through a packet data connection if not.


To create a new access point group, select **Options > Manage > New destination**.

To add access points to an access point group, select the group and **Options > New access point**. To copy an existing access point from another group, select the group, tap the relevant access point if it is not already highlighted, and select **Options > Organise > Copy to other dest..**

To change the priority of an access point within the group, select **Options > Organise > Change priority**.

Packet data access points

Select **Menu > Settings and Connectivity > Destinations > Access point**, and follow the instructions on the screen.

To edit a packet data access point, open one of the access point groups, and select an access point marked with .

Follow the instructions from your service provider.

Select from the following:

Access point name — You obtain the access point name from your service provider.

User name — The user name may be needed to make a data connection, and is usually provided by your service provider.

Prompt password — If you must enter the password every time you log in to a server, or if you do not want to save your password in the device, select **Yes**.

Password — A password may be needed to make a data connection and is usually provided by your service provider.

Authentication — Select **Secure** to always send your password encrypted or **Normal** to send your password encrypted when possible.

Homepage — Depending on the access point you are setting up, enter the web address or the address of the multimedia message centre.

Use access point — Select **After confirmation** if you want the device to ask for confirmation before the connection using this access point is created, or **Automatically** if you want the device to connect to the destination using this access point automatically.

Select **Options** > **Advanced settings** and from the following:

Network type — Select the internet protocol type to transfer data to and from your device. The other settings depend on the selected network type.

Phone IP address (for IPv4 only) — Enter the IP address of your device.


DNS addresses — Enter the IP addresses of the primary and secondary DNS servers, if required by your service provider. To obtain these addresses, contact your internet service provider.

Proxy server address — Enter the address of the proxy server.

Proxy port number — Enter the port number of the proxy server.

WLAN internet access points

Select **Menu > Settings and Connectivity > Destinations > Access point**, and follow the instructions.

To edit a wireless LAN (WLAN) access point, open one of the access point groups, and select an access point marked with .

Follow the instructions from your WLAN service provider.

Select from the following:

WLAN network name — Select **Enter manually** or **Search for networks**. If you select an existing network, WLAN network mode and WLAN security mode are determined by the settings of its access point device.

Network status — Define whether the network name is displayed.

WLAN network mode — Select **Ad-hoc** to create an ad hoc network and to allow devices to send and receive data directly; a WLAN access point device is not needed. In an ad hoc network, all devices must use the same WLAN network name.

WLAN security mode — Select the encryption used: **WEP**, **802.1x**, or **WPA/WPA2** (802.1x and WPA/WPA2 are not available for ad hoc networks). If you select **Open network**, no encryption is used. The WEP, 802.1x and WPA functions can be used only if the network supports them.

Homepage — Enter the web address of the starting page.

Use access point — Set the device to create a connection using this access point automatically or after confirmation.

The available options may vary.

Active data connections

Select **Menu > Settings and Connectivity > Connection mgr..**

126 Connectivity

In the active data connections view, you can see open data connections:



data calls



packet data connections



wireless LAN (WLAN) connections

To end a connection, select **Options** > **Disconnect**.

To end all open connections, select **Options** > **Disconnect all**.

To view the details of a connection, select **Options** > **Details**.

Synchronisation

With the Sync application, you can synchronise your notes, messages, contacts, and other information with a remote server.

Select **Menu** > **Settings** > **Connectivity** > **Data transfer** > **Sync**.

You may receive synchronisation settings as a configuration message from your service provider.

A synchronisation profile contains the necessary settings for synchronisation. When you open the application, the default or previously used synchronisation profile is displayed.

Include or exclude content types

Select a content type.

Synchronise data

Select **Options** > **Synchronise**.

Create a new synchronisation profile

Select **Options** > **New sync profile**.

Manage synchronisation profiles

Select **Options** and the desired option.

Bluetooth connectivity

About Bluetooth

Bluetooth technology in your device enables wireless connections between electronic devices within a range of 10 metres (33 feet). A Bluetooth connection can be used to send images, videos, text, business cards, calendar notes, or to connect wirelessly to devices that use Bluetooth technology.

Since devices using Bluetooth technology communicate using radio waves, your device and the other devices do not need to be in direct line-of-sight. The two devices only need to be within a maximum of 10 metres of each other, although the connection can be subject to interference from obstructions such as walls or other electronic devices.

Several Bluetooth connections can be active at a time. For example, if your device is connected to a headset, you can also transfer files to another compatible device at the same time.

This device is compliant with Bluetooth Specification 2.0 + EDR supporting the following profiles: advanced audio distribution, basic imaging, device identification, dial-up networking, file transfer, generic access, generic audio/video distribution, generic object exchange, hands-free, headset, object push, phone book access, serial port, and SIM access. To ensure interoperability between other devices supporting Bluetooth technology, use Nokia approved accessories for this model. Check with the manufacturers of other devices to determine their compatibility with this device.

Features using Bluetooth technology increase the demand on battery power and reduce the battery life.

Settings

Select **Menu > Settings and Connectivity > Bluetooth**.

When you open the application for the first time, you are asked to define a name for your device. You can change the name later.

Select from the following:

Bluetooth — Turn Bluetooth connectivity on or off.

My phone's visibility — To allow your device to be found by other devices with Bluetooth wireless technology, select **Shown to all**. To set a time period after which the visibility is set from shown to hidden, select **Set visibility period**. To hide your device from other devices, select **Hidden**.

My phone's name — Edit the name shown to other devices with Bluetooth wireless technology.

Remote SIM mode — Enable or disable another device, such as a compatible car kit accessory, to use the SIM card in your device to connect to the network.

Security tips

Select **Menu > Settings and Connectivity > Bluetooth**.

When you are not using Bluetooth connectivity, to control who can find your device and connect to it, select **Bluetooth > Off** or **My phone's visibility > Hidden**. Deactivating Bluetooth connectivity does not affect other functions of the device.

Do not pair with or accept connection requests from an unknown device. This helps to protect your device from harmful content. Operating the device in hidden mode is a safer way to avoid malicious software.

Send data using Bluetooth connectivity

You can have several Bluetooth connections active at a time. For example, if you are connected to a compatible headset, you can also transfer files to another compatible device.

- 1 Open the application where the item you want to send is stored.
- 2 Go to an item, and select **Options > Send > Via Bluetooth**.

Devices with Bluetooth wireless technology that are within range are displayed. Device icons are as follows:



computer



phone



audio or video device



other device

To interrupt the search, select **Cancel**.

- 3 Select the device with which you want to connect.
- 4 If the other device requires pairing before data can be transmitted, a tone sounds, and you are asked to enter a passcode. The same passcode must be entered in both devices.

When the connection is established, **Sending data** is displayed.

Tip: When searching for devices, some devices may show only the unique address (device address). To find the unique address of your device, in the dialler, enter ***#2820#**.

Pair devices


Select **Menu > Settings and Connectivity > Bluetooth**.

To pair with compatible devices and view your paired devices, open the **Paired devices** tab.


Before pairing, create your own passcode (1 to 16 digits), and agree with the owner of the other device to use the same code. Devices that do not have a user interface have a factory-set passcode. The passcode is used only once.

130 Connectivity

- 1 To pair with a device, select **Options** > **New paired device**. Devices that are within range are displayed.
- 2 Select the device, and enter the passcode. The same passcode must be entered on the other device, as well.
- 3 Some audio accessories connect automatically to your device after pairing. Otherwise, to connect to an accessory, select **Options** > **Connect to audio device**.

Paired devices are indicated by  in the device search.

To set a device as authorised or unauthorised, select from the following:



Set as authorised — Connections between your device and the authorised device can be made without your knowledge. You will not be asked for authorisation or acceptance separately. Use this status only for your own devices, such as your compatible headset or PC, or devices that belong to someone you trust.  indicates authorised devices in the paired devices view.

Set as unauthorised — Connection requests from this device must be accepted separately every time.

To cancel a pairing with a device, select **Options** > **Delete**.

To cancel all pairings, select **Options** > **Delete all**.

Receive data using Bluetooth connectivity

When you receive data using Bluetooth connectivity, a tone sounds, and the device asks you if you want to accept the message. If you accept,  is displayed, and you can find an informative message about the data in the Inbox folder in Messaging. Messages received using Bluetooth connectivity are indicated with .

Block devices

Select **Menu** > **Settings and Connectivity** > **Bluetooth**.

To block a device from establishing a Bluetooth connection to your device, open the **Paired devices** tab.

Tap a device you want to block, if it is not already highlighted, and select **Options > Block**.

To unblock a device, open the **Blocked devices** tab, tap a device, if it is not already highlighted, and select **Options > Delete**.

To unblock all blocked devices, select **Options > Delete all**.

If you reject a pairing request from another device, you are asked if you want to block all future connection requests from this device. If you accept the query, the remote device is added to the list of blocked devices.

Remote SIM mode

Select **Menu > Settings and Connectivity > Bluetooth**.

Before the remote SIM mode can be activated, the two devices must be paired and the pairing initiated from the other device. When pairing, use a 16-digit passcode, and set the other device as authorised.

To use the remote SIM mode with a compatible car kit accessory, activate Bluetooth connectivity, and enable the use of the remote SIM mode with your device.

Activate the remote SIM mode from the other device.

When the remote SIM mode is on in your device, **Remote SIM mode** is displayed in the home screen. The connection to the wireless network is turned off, as indicated by **X** in the signal strength indicator area, and you cannot use SIM card services or features requiring cellular network coverage.

132 Connectivity


When the wireless device is in the remote SIM mode, you can only use a compatible connected accessory, such as a car kit, to make or receive calls. Your wireless device will not make any calls while in this mode, except to the emergency numbers programmed into your device. To make calls from your device, you must leave the remote SIM mode. If the device is locked, enter the lock code to unlock it.

To leave the remote SIM mode, press the power key, and select **Exit remote SIM mode**.

Transfer data using a USB cable



Select **Menu** > **Settings and Connectivity** > **USB**.

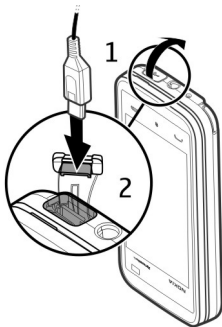

Select the USB mode every time a compatible data cable is connected

Select **Ask on connection** > **Yes**.

If the **Ask on connection** option is not active, or you want to change the USB mode during an active connection, select **USB connection mode** and from the following:

PC Suite — Use Nokia PC applications such as Nokia Ovi Suite or Nokia Software Updater.

Mass storage — Transfer data between your device and a compatible PC.

Image transfer — Print images using a compatible printer.

Media transfer — Synchronise music with Nokia Music or Windows Media Player.

PC connections

You can use your mobile device with a variety of compatible PC connectivity and data communications applications. With Nokia Ovi Suite you can, for example, transfer files and images between your device and a compatible computer.

To use Ovi Suite with USB connection mode, select **PC Suite mode**.

For more information about Ovi Suite, see the support area at www.ovi.com.

Administrative settings

Select **Menu > Settings and Connectivity > Admin. settings**.

Packet data settings

Select **Menu > Settings and Connectivity > Admin. settings > Packet data**.

The packet data settings affect all access points using a packet data connection.

Select from the following:

Packet data connection — If you select **When available** and you are in a network that supports packet data, the device registers to the packet data network. Starting an active packet data connection (for example, to send and receive e-mail) is quicker than if the device establishes a packet data connection when needed. If there is no packet data coverage, the device periodically tries to establish a packet data connection. If you select **When needed**, the device uses a packet data connection only if you start an application or action that needs it.

Access point — The access point name is needed to use your device as a packet data modem to a compatible computer.

SIP settings

Select **Menu > Settings and Connectivity > Admin. settings > SIP settings**.

Session Initiation Protocol (SIP) settings are needed for certain network services using SIP. You may receive the settings in a special text message from your service provider. You can view, delete, or create these setting profiles in SIP settings.

18. Search

About Search

Select **Menu > Internet > Search**.

Search (network service) enables you to use various internet-based search services to find, for example, websites and images. The content and availability of the services may vary.

Start a search

Select **Menu > Internet > Search**.

To search the contents of your mobile device, enter search terms in the search field, or browse the content categories. While you enter the search terms, the results are organised into categories. The most recently accessed results appear at the top of the result list, if they match your search terms.

To search for web pages on the internet, select **Search the Internet** and a search provider, and enter your search terms in the search field. The search provider you selected is set as your default internet search provider.


If a default search provider is already set, select it to start a search, or select **More search services** to use another search provider.

To change the default search provider, select **Options > Settings > Search services**.

To change the country or region setting to find more search providers, select **Options > Settings > Country or region**.

19. Ovi Store

About Ovi Store

 In Ovi Store, you can download mobile games, applications, videos, images, themes, and ringing tones to your device. Some items are free of charge; others you need to pay for with your credit card or in your phone bill. The availability of payment methods depends on your country of residence and your network service provider. Ovi Store offers content that is compatible with your mobile device and relevant to your tastes and location.

20. Other applications

Clock

Set time and date

Select **Menu > Applications > Clock**.

Select **Options > Settings** and from the following:

Time — Set the time.



Date — Set the date.

Automatic time update — Set the network to automatically update the time, date, and time zone information for your device (network service).

Alarm clock

Select **Menu > Applications > Clock**.

To set a new alarm, select **New alarm**. Set the alarm time. Select **Repeat** to set whether and when the alarm is repeated, and select **Done**.

To view your active and inactive alarms, select **Alarms**. When the alarm is active,  is displayed. When the alarm is repeated,  is displayed.

To remove an alarm, select **Alarms**, scroll to the alarm, and select **Options** > **Remove alarm**.

To turn off the alarm when the alarm expires, select **Stop**. To snooze the alarm, select **Snooze**.

If your device is switched off when an alarm expires, your device switches itself on and starts sounding the alarm tone.

To define the snooze time, select **Options** > **Settings** > **Alarm snooze time**.

To change the alarm tone, select **Options** > **Settings** > **Clock alarm tone**.

World clock

With the world clock, you can view the current time in different locations.

Select **Menu** > **Applications** > **Clock**.

View the time

Select **World clock**.

Add locations to the list

Select **Options** > **Add location**.

Set your current location

Go to a location, and select **Options > Set as current location**. The time in your device is changed according to the selected location. Ensure that the time is correct and matches your time zone.

Calendar

To open the calendar, select **Menu > Calendar**.

Calendar views







To switch between the month, week, day, and to-do note views, select **Options > Change view** and the desired view.

To change the starting day of the week or the view that is displayed when you open the calendar, or to modify calendar alarm settings, select **Options > Settings**.

To go to a certain date, select **Options > Go to date**.

Calendar toolbar

From the toolbar, select from the following:

-  **Next view** — Select the month view.
-  **Next view** — Select the week view.
-  **Next view** — Select the day view.
-  **Next view** — Select the to-do view.
-  **New meeting** — Add a new meeting reminder.
-  **New to-do note** — Add a new to-do note.

File manager

About File manager

Select **Menu** > **Applications** > **File mgr..**

With File manager, you can browse, manage, and open files on your device, memory card, or a compatible external drive.

The available options depend on the memory you select.

Find and organise files

Select **Menu** > **Applications** > **File mgr..**

To find a file, select **Options** > **Find**. Enter a search text that matches the file name.

To move and copy files and folders, or to create new folders in the memory, select **Options** > **Organise** and the desired option.

To sort files, select **Options** > **Sort by** and the desired category.

Edit the memory card

You can format a memory card to erase the data on it, or you can protect the data on the memory card with a password.

Select **Menu** > **Applications** > **File mgr..**

Rename or format a memory card

Select the memory card, **Options** > **Memory card options**, and the desired option.

Password protect a memory card

Select the memory card and **Options** > **Memory card password**.

These options are available only if a compatible memory card is inserted in the device.

Back up files

Select **Menu > Applications > File mgr..**

It is recommended that you back up the device memory regularly to a memory card or a compatible computer.

Back up data from the device memory to a memory card

Select **Options > Back up phone memory.**

Restore data from the memory card to the device memory

Select **Options > Restore from mem. card.**

You can also connect your device to a compatible computer, and use Nokia Ovi Suite to back up data.

Application manager

About Application manager

Select **Menu > Settings and Application mgr..**

With Application manager, you can see the software packages installed in your device. You can view details of installed applications, remove applications, and define installation settings.

You can install the following types of applications and software to your device:

- JME applications based on Java™ technology with the .jad or .jar file extensions
- Other applications and software suitable for the Symbian operating system with the .sis or .sisx file extensions
- Widgets with the .wgz file extension

Only install software that is compatible with your device.

Install applications

You can transfer installation files to your device from a compatible computer, download them during browsing, or receive them in a multimedia message, as an e-mail attachment, or using other connectivity methods, such as Bluetooth connectivity.

You can use Nokia Application Installer in Nokia Ovi Suite to install an application to your device.

Select **Menu > Settings and Application mgr..**

The installation files are located in the Installation files folder, and the installed applications in the Installed apps. folder.

Icons indicate the following:



SIS or SISX application



Java application



Widget



Application installed on the memory card



Important: Only install and use applications and other software from trusted sources, such as applications that are Symbian Signed or have passed the Java Verified™ testing.

Before installing an application, check the following:

- View the application type, version number, and the supplier or manufacturer of the application. Select **Options > View details**.

- View the security certificate details of the application. Select **Details:** > **Certificates:** > **View details**. Control the use of digital certificates in Certificate management.

If you install a file that contains an update or repair to an existing application, you can only restore the original application if you have the original installation file or a full backup copy of the removed software package. To restore the original application, remove the application, and install the application again from the original installation file or the backup copy.

The JAR file is required for installing Java applications. If it is missing, the device may ask you to download it. If there is no access point defined for the application, you are asked to select one.

Install an application

- 1 Locate the installation file in the Installation files folder in Application manager, or search for it in File manager or your Inbox in Messaging.
- 2 In Application manager, select the application you want to install and **Options** > **Install**. In other applications, select the installation file to start the installation.

During installation, the device shows information about the progress of the installation. If you install an application without a digital signature or certification, the device displays a warning. Continue installation only if you are sure of the origin and contents of the application.

Open an installed application

Select the application in the menu. If the application does not have a default folder defined, it is installed in the Installed apps. folder in the main menu.

See which software packages are installed or removed

Select **Options** > **View log**.



Important: Your device can only support one antivirus application. Having more than one application with antivirus functionality could affect performance and operation or cause the device to stop functioning.

After you install applications to a compatible memory card, installation files (.sis, .sisx) remain in the device memory. The files may use large amounts of memory and prevent you from storing other files. To maintain sufficient memory, use Nokia Ovi Suite to back up installation files to a compatible PC, then use the file manager to remove the installation files from the device memory. If the .sis file is a message attachment, delete the message from the Messaging inbox.

Remove applications

Select **Menu > Settings and Application mgr..**

To remove a software package, select **Installed apps. > Options > Uninstall.** Select **Yes** to confirm.

If you remove software, you can only reinstall it if you have the original software package or a full backup of the removed software package. If you remove a software package, you may no longer be able to open documents created with that software.

If another software package depends on the software package that you removed, the other software package may stop working. Refer to the documentation of the installed software package for details.

Application manager settings

Select **Menu > Settings and Application mgr..**

Select **Installation settings** and from the following:

Software installation — Select whether Symbian software that has no verified digital signature can be installed.

Online certificate check — Select to check the online certificates before installing an application.

Default web address — Set the default web address used when checking online certificates.

RealPlayer

With RealPlayer, you can play video clips or stream media files over the air without saving them to the device first.

RealPlayer does not necessarily support all file formats or all the variations of file formats.

Select **Menu > Applications > RealPlayer**.


RealPlayer toolbar

In the Video clips, Streaming links, and Recently played views, the following toolbar icons may be available:

 **Send** — Send a video clip or streaming link.

 **Play** — Play the video clip or video stream.

 **Delete** — Delete the video clip or streaming link.

 **Remove** — Remove a file from the recently played list.

Play video clips

Select **Menu > Applications > RealPlayer**.

To play a video clip, select **Video clips**, and a clip.

To list recently played files, in the application main view, select **Recently played**.

In the list of video clips, scroll to a clip, select **Options** and from the following:

Use video clip — Assign a video to a contact or set it as a ringing tone.

Mark/Unmark — Mark items in the list to send or delete multiple items at the same time.

View details — View details of the selected item, such as format, resolution, and duration.


Settings — Edit settings for video playback and streaming.

In the Video clips, Recently played and Streaming links views, the following toolbar icons may be available:

 **Send** — Send a video clip or streaming link.

 **Play** — Play the video clip or video stream.

 **Delete** — Delete the video clip or streaming link.

 **Remove** — Remove a file from the recently played list.

Stream content over the air


In RealPlayer, you can only open an RTSP link. However, RealPlayer plays a RAM file if you open an HTTP link to it in a browser.

Select **Menu > Applications > RealPlayer**.

To stream content over the air (network service), select **Streaming links** and a link. You can also receive a streaming link in a text message or multimedia message, or open a link on a web page.

Before live content begins streaming, your device connects to the site and starts loading the content. The content is not saved in your device.

Recorder

 You can use the recorder to record voice memos and telephone conversations. You can also send sound clips to your friends.

Select **Menu > Applications > Recorder**.

Record a sound clip

Select .

Stop recording a sound clip

Select .


Listen to the sound clip

Select .

Send a sound clip as a message

Select **Options** > **Send**.

Record a telephone conversation

Open the recorder during a voice call, and select . Both parties hear a tone at regular intervals during recording.

Select the recording quality or where to save sound clips

Select **Options** > **Settings**.

The recorder cannot be used when a data call or GPRS connection is active.

Write notes

Select **Menu** > **Applications** > **Notes**.

To write a note, select **Options** > **New note**. Tap the note field to enter text, and select .

You can save plain text files (.txt file format) you receive to Notes.

Make calculations

Select **Menu** > **Applications** > **Calculator**.

This calculator has limited accuracy and is designed for simple calculations.

To make a calculation, enter the first number of the calculation. Select a function such as add or subtract. Enter the second number of the calculation, and select =.

Converter

With Converter, you can convert measures from one unit to another.

The converter has limited accuracy, and rounding errors may occur.

Select **Menu** > **Applications** > **Converter**.

Dictionary

Select **Menu** > **Applications** > **Dictionary**.

To translate words from one language to another, enter text in the search field. As you enter text, suggestions of words to translate are displayed. To translate a word, select the word from the list.

All languages may not be supported.

Select **Options** and from the following:

Listen — Listen to the selected word.

History — Find previously translated words from the current session.

Languages — Change the source or target language, download languages from the internet, or remove a language from the dictionary. You cannot remove the English language from the dictionary. You can have two additional languages installed, besides English.

21. Settings

Some settings may be preset for the device by your service provider, and you may not be able to change them.

Phone settings

Date and time settings

Select **Menu** > **Settings** and **Phone** > **Date and time**.

Select from the following:

Time — Enter the current time.

Time zone — Select your location.

Date — Enter the date.

Date format — Select the date format.

Date separator — Select the symbol that separates days, months, and years.

Time format — Select the time format.

Time separator — Select the symbol that separates hours and minutes.

Clock type — Select the clock type.

Clock alarm tone — Select the tone for the alarm clock.

Alarm snooze time — Adjust the snooze time.

Workdays — Select your working days. You can then set an alarm only for working day mornings, for example.

Automatic time update — To update the time, date, and time zone, select **On**. This network service may not be available on all networks.

Language settings

Select **Menu** > **Settings** and **Phone** > **Language**.

To change the device language, select **Phone language**.

To change the writing language, select **Writing language**.

To turn predictive text input on or off, select **Predictive text**.

Display settings

Select **Menu > Settings and Phone > Display**.

Select from the following:

Brightness — Adjust the brightness of your device display.

Font size — Select the size of text and icons on the display.

Welcome note / logo — Set a note or image to be displayed when you switch on the device.

Light time-out — Set how long the light stays on when you stop using the device.

Voice commands

To activate enhanced voice commands, to start applications and profiles, press and hold the call key in the home screen.

To control your device with enhanced voice commands, press and hold the call key in the home screen, and say a voice command. The voice command is the name of the application or profile displayed in the list.

Select **Menu > Settings and Phone > Voice commands**.

Select **Options** and from the following:

Change command — Edit the voice commands.

Playback — Listen to the synthesised voice tag.

Remove voice command — Remove a voice command that you added manually.

Settings — Adjust the settings.

Voice command tutorial — Open the tutorial for voice commands.

Accessory settings

Select **Menu > Settings and Phone > Accessories**.

Some accessory connectors indicate which type of accessory is connected to the device.

Select an accessory and from the following:

Default profile — Set the profile that you want activated each time you connect a certain compatible accessory to your device.

Automatic answer — Select whether you want the device to answer an incoming call automatically after 5 seconds. If the ringing type is set to **Beep once** or **Silent**, automatic answer is disabled.

Lights — Set whether lights remain on after the time-out.

The available settings depend on the type of accessory.

Application settings

Select **Menu > Settings and Phone > Application sett..**

In application settings, you can edit the settings of some of the applications in your device.

To edit the settings, you can also select **Options > Settings** in each application.

Device updates

With Device updates, you can connect to a server and receive configuration settings for your device, create new server profiles, view existing software version and device information, or view and manage existing server profiles.

Select **Menu > Settings and Phone > Phone mgmt. > Device updates**.

150 Settings

If software updates over the air are supported by your network, you may also be able to request updates through the device.

You may receive server profiles and different configuration settings from your service providers and company information management department. These configuration settings may include connection and other settings used by different applications in your device.

Receive configuration settings

- 1 Select **Options** > **Server profiles**.
- 2 Go to a profile, and select **Options** > **Start configuration**.

Create a server profile

Select **Options** > **Server profiles** > **Options** > **New server profile**.

Delete a server profile

Select **Options** > **Delete**.

Security settings

Phone and SIM

Select **Menu** > **Settings and Phone** > **Phone mgmt.** > **Security** > **Phone and SIM card**.

Select from the following:

PIN code request — When active, the code is requested each time the device is switched on. Deactivating the PIN code request may not be allowed by some SIM cards.

PIN code and **PIN2 code** — Change the PIN and PIN2 code. These codes can only include numbers. Avoid using access codes similar to the emergency numbers to prevent accidental dialling of the emergency number. If you forget the PIN or PIN2 code, contact your service provider. If you forget the lock code, contact a Nokia Care point or your service provider.

Lock code — The lock code is used to unlock the device. To avoid unauthorised use of your device, change the lock code. The preset code is 12345. The new code can be 4-255 characters long. Alphanumeric characters and both uppercase and lowercase characters can be used. The device notifies you if the lock code is not properly formatted. Keep the new code secret and separate from your device.

Phone autolock period — To avoid unauthorised use, you can set a time-out after which the device automatically locks. A locked device cannot be used until the correct lock code is entered. To turn off autolock, select **None**.

Lock if SIM card changed — Set the device to ask for the lock code when an unknown SIM card is inserted into your device. The device maintains a list of SIM cards that are recognised as the owner's cards.

Remote phone locking — Enable or disable remote lock.

Closed user group — Specify a group of people to whom you can call and who can call you (network service).

Confirm SIM services — Set the device to display confirmation messages when you are using a SIM card service (network service).

Certificate management

Select **Menu > Settings and Phone > Phone mgmt. > Security > Certificate management**.

Digital certificates should be used if you want to connect to an online bank or another site or remote server for actions that involve transferring confidential information. They should also be used if you want to reduce the risk of viruses or other malicious software and be sure of the authenticity of software when downloading and installing software.

Select from the following:

Authority certificates — View and edit authority certificates.

Trusted site certificates — View and edit trusted site certificates.

Personal certificates — View and edit personal certificates.

Phone certificates — View and edit device certificates.

Digital certificates do not guarantee safety; they are used to verify the origin of software.



Important: Even if the use of certificates makes the risks involved in remote connections and software installation considerably smaller, they must be used correctly in order to benefit from increased security. The existence of a certificate does not offer any protection by itself; the certificate manager must contain correct, authentic, or trusted certificates for increased security to be available. Certificates have a restricted lifetime. If "Expired certificate" or "Certificate not valid yet" is shown, even if the certificate should be valid, check that the current date and time in your device are correct.

View certificate details — check authenticity

You can only be sure of the correct identity of a server when the signature and the validity period of a server certificate have been checked.

You are notified if the identity of the server is not authentic or if you do not have the correct security certificate in your device.

To check the details of a certificate, select **Options > Certificate details**. The validity of the certificate is checked, and one of the following notes may be displayed:

Certificate not trusted — You have not set any application to use the certificate.

Expired certificate — The certificate validity period has ended.

Certificate not valid yet — The certificate validity period has not yet begun.

Certificate corrupted — The certificate cannot be used. Contact the certificate issuer.

Change the trust settings

Before changing any certificate settings, you must make sure that you really trust the owner of the certificate and that the certificate really belongs to the listed owner.

To change the settings for an authority certificate, select **Options > Trust settings**. Depending on the certificate, a list of the applications that can use the selected certificate is shown. For example:

Symbian installation: Yes — The certificate is able to certify the origin of a new Symbian operating system application.

Internet: Yes — The certificate is able to certify servers.

App. installation: Yes — The certificate is able to certify the origin of a new Java application.

To change the value, select **Options > Change trust setting**.

Security module

Select **Menu > Settings and Phone > Phone mgmt. > Security > Security module**.

To view or edit a security module (if available), select it from the list.

To view detailed information about a security module, select **Options > Security details**.

Restore original settings

Select **Menu > Settings and Phone > Phone mgmt. > Factory settings**.

You can reset some of the settings to their original values. To do this, you need the lock code.

After resetting, the device may take a longer time to power on. Documents and files are unaffected.

Protected content

To manage digital rights licences, select **Menu > Settings and Phone > Phone mgmt. > Security > Protected content**.

Digital rights management

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10, OMA DRM 1.0, and OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content.

If your device has OMA DRM-protected content, to back up both the licence and the content, use the backup feature of Nokia Ovi Suite.

Other transfer methods may not transfer the licence which need to be restored with the content for you to be able to continue the use of OMA DRM-protected content after the device memory is formatted. You may also need to restore the licence in case the files on your device get corrupted.

If your device has WMDRM-protected content, both the licence and the content will be lost if the device memory is formatted. You may also lose the licence and the

content if the files on your device get corrupted. Losing the licence or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.

Some licence may be connected to a specific SIM card, and the protected content can be accessed only if the SIM card is inserted in the device.

Notification lights

Select **Menu > Settings and Phone > Notification lights**.

To turn the standby breathing light on or off, select **Standby br. light**.

When the standby breathing light is turned on, the menu key lights up periodically.

To turn the notification light on or off, select **Notification light**.

When the notification light is turned on, the menu key lights up for a period you define to notify of missed events, such as missed calls or unread messages.

Call settings

Call settings

With call settings, you can define call specific settings in your device.

Select **Menu > Settings and Calling > Call**.

Select from the following:

Send my caller ID — Select **Yes** to show your phone number to the person you are calling. To use the setting agreed upon with your service provider, select **Set by network** (network service).

Call waiting — Set your device to notify you of incoming calls while you are in a call (network service), or check whether the feature is activated.

Reject call with message — Send a text message when you reject a call, informing the caller why you could not answer the call.

Message text — Write the standard text message that is sent when you reject a call.

Automatic redial — Set your device to make a maximum of 10 attempts to connect the call after an unsuccessful call attempt. To stop automatic redialling, press the end key.

Show call duration — Display the length of a call during a call.

Summary after call — Display the length of a call after a call ends.

Speed dialling — Activate speed dialling.

Anykey answer — Activate anykey answer.

Line in use — This setting (network service) is shown only if the SIM card supports two subscriber numbers, that is, two phone lines. Select which phone line you want to use to make calls or send text messages. Calls on both lines can be answered irrespective of the selected line. If you select **Line 2**, and have not subscribed to this network service, you are not able to make calls. When line 2 is selected, **2** is displayed in the home screen.

Line change — Prevent phone line selection (network service), if supported by your SIM card. To change this setting, you need the PIN2 code.

The available options may vary.


Call divert

Select **Menu > Settings and Calling > Call divert**.

Call divert allows you to divert incoming calls to your voice mailbox or another phone number. For details, contact your service provider.

- 1 Select the type of calls to divert and a diverting option. For example, to divert all voice calls, select **Voice calls > All voice calls**.
- 2 To activate call divert, select **Activate**.

- 3 To divert calls to your voice mailbox, select **To voice mailbox**.
- 4 To divert calls to another phone number, select **To other number**, and enter the number, or select **Find** to retrieve a number saved in the contacts list.

Several diverting options can be active at the same time. When all calls are diverted,  is displayed in the home screen.

Call barring

With call barring (network service), you can restrict the calls that you make or receive with the device. For example, you can restrict all outgoing international calls or incoming calls when you are abroad. To modify the settings, you need the barring password from your service provider.

Select **Menu > Settings and Calling > Call barring**.

When security features that restrict calls are in use (such as call barring, closed user group, and fixed dialling), calls may be possible to the official emergency number programmed into your device. Call barring and call diverting cannot be active at the same time.

Bar voice calls or check the barring status

Select the desired barring option and **Activate** or **Check status**. Call barring affects all calls, including data calls.

22. Troubleshooting

Q: What is my password for the lock, PIN, or PUK codes?

A: The default lock code is 12345. If you forget the lock code, contact your device dealer. If you forget a PIN or PUK code, or if you have not received such a code, contact your network service provider.

For information about passwords, contact your access point provider, for example, a commercial internet service provider (ISP) or network service provider.

Q: How do I close an application that is not responding?

A: Press and hold the menu key.

Select and hold the application icon, and select **Exit**.

Q: Why do images look smudgy?

A: Ensure that the camera lens protection windows are clean.

Q: Why do missing, discoloured, or bright dots appear on the screen every time I switch on my device?

A: This is a characteristic of this type of display. Some displays may contain pixels or dots that remain on or off. This is normal, not a fault.

Q: Why can't I find my friend's device while using Bluetooth connectivity?

A: Check that both devices are compatible, have activated Bluetooth connectivity, and are not in hidden mode. Check also that the distance between the two devices is not over 10 metres (33 feet) and that there are no walls or other obstructions between the devices.

Q: Why can't I end a Bluetooth connection?

A: If another device is connected to your device, you can end the connection from the other device or deactivate Bluetooth connectivity in your device. Select **Menu > Settings and Connectivity > Bluetooth > Bluetooth > Off**.

Q: Why can't I see a wireless LAN (WLAN) access point even though I know I'm within its range?

A: The WLAN access point may use a hidden service set identifier (SSID). You can only access networks that use a hidden SSID if you know the correct SSID, and have created a WLAN internet access point for the network on your Nokia device.

Q: How do I turn the wireless LAN (WLAN) off on my Nokia device?

A: The WLAN on your Nokia device turns off when you are not connected or trying to connect to another access point, or not scanning for available networks. To further reduce battery consumption, you can specify that your Nokia device does not scan, or scans less often, for available networks in the background. The WLAN turns off in between background scans.

To change the background scan settings, do the following:

- 1 Select **Menu > Settings and Connectivity > Wireless LAN > Options > Settings**.
- 2 To increase the background scan time interval, adjust the time in **Scan for networks**. To stop background scans, select **Options > Settings > Show WLAN availability > Never**.
- 3 To save your changes, select **Back**.

When **Show WLAN availability** is set to **Never**, the WLAN availability icon is not displayed in the home screen. However, you can still manually scan for available WLAN networks, and connect to WLAN networks as usual.

Q: What do I do if the memory is full?

A: Delete items from the memory. If **Not enough memory to perform operation. Delete some data first.** or **Memory low. Delete some data from phone memory.** is displayed when you are deleting several items at the same time, delete items one by one, beginning with the smallest items.

Q: Why can't I select a contact for my message?

A: The contact card does not have a phone number, address, or e-mail address. Select **Menu > Contacts** and the relevant contact, and edit the contact card.

Q: How can I end the data connection when the device starts a data connection again and again?

A: The device may be trying to retrieve a multimedia message from the multimedia message centre. To stop the device from making a data connection, select **Menu > Messaging and Options > Settings > Multimedia message > Multimedia retrieval**. Select **Manual** to have the multimedia messaging centre save messages to be retrieved later, or **Off** to ignore all incoming multimedia messages. If you select **Manual**, you receive a notification when you have a new message in the multimedia message centre. If you select **Off**, the device does not make any network connections related to multimedia messaging.

To set the device to use a packet data connection only if you start an application or action that needs it, select **Menu > Settings and Connectivity > Admin. settings > Packet data > Packet data connection > When needed**.

If this does not help, switch the device off and then on again.

Q: Can I use my Nokia device as a fax modem with a compatible PC?

A: You cannot use your device as a fax modem. However, with call diverting (network service), you can divert incoming fax calls to a fax number.

Q: How do I calibrate the screen?

A: The screen is calibrated at the factory. If it is necessary to recalibrate the screen, select **Menu > Settings and Phone > Touch input > Touch screen calibration**. Follow the instructions.

Q: Why do I get the error message Expired certificate or Certificate not valid yet when I am installing a downloaded application?

A: If **Expired certificate** or **Certificate not valid yet** is displayed, even if the certificate should be valid, check that the current date and time in your device are correct. You may have skipped the setting of date and time when starting the device for the first time, or the mobile network may have failed to update these settings to your device. To resolve this, select **Menu > Settings and Phone > Phone mgmt. > Factory settings**. Restore the factory settings, and when the device restarts, set the correct date and time.

23. Protect the environment

Save energy

You do not need to charge your battery so often if you do the following:

- Close applications and data connections, such as your WLAN or Bluetooth connection, when not in use.
- Deactivate unnecessary sounds, such as touch screen and key tones.

Recycle



When this phone has reached the end of its working life, all of its materials can be recovered as materials and energy. To guarantee the correct disposal and reuse, Nokia co-operates with its partners through a program called We:recycle. For information on how to recycle your old Nokia products and where to find collection sites, go to www.nokia.com/werecycle, or call the Nokia Contact Center.

Recycle packaging and user guides at your local recycling scheme.

For more information on the environmental attributes of your phone, go to www.nokia.com/ecoprofile.

24. Nokia original accessories

For availability of approved accessories, check with your dealer.



An extensive range of accessories is available for your device. For more details, see www.nokia-asia.com/accessories.

Practical rules about accessories

- Keep all accessories out of the reach of small children.

- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that accessories installed in a vehicle are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.

Battery

Type: BL-4U

Talk time:

Up to 4.9 hours (GSM).

Standby:

Up to 14 days (GSM).



Important: Battery talk and stand-by times are estimates and only possible under optimal network conditions. Actual battery talk and standby times depend on SIM cards, features used, battery age and condition, temperatures to which battery is exposed, network conditions, and many other factors, and may be significantly shorter than those specified above. Ringing tones, hands free call handling, use in digital mode, and other features will also consume the battery, and the amount of time a device is used for calls will affect its stand-by time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time.

Product and safety information

Battery

Battery and charger information

This device is intended for use with a BL-4U rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries.

164 Product and safety information

This device is intended for use when supplied with power from the following chargers: AC-8. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, X, AR, U, A, C, K, or B.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, you need to replace the battery.



Important: Talk and standby times are estimates only. Actual times are affected by, for example, network conditions, device settings, features being used, battery condition, and temperature.

Take care of your device

Handle your device, battery, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.
- Do not store the device in cold temperatures.
- Do not attempt to open the device other than as instructed in the user guide.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Switch off the device and remove the battery from time to time for optimum performance.
- Keep your device away from magnets or magnetic fields.
- To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important information.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. ..

Additional safety information

Small children

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

Operating environment

This device meets RF exposure guidelines in the normal use position at the ear or at least 2.2 centimetres (7/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

To send data files or messages requires a quality connection to the network. Data files or messages may be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

Medical devices

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external RF energy. Switch off your device when regulations posted instruct you to do so. Hospitals or health care facilities may use equipment sensitive to external RF energy.

Implanted medical devices

Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.
- Hold the wireless device to the ear opposite the medical device.
- Turn the wireless device off if there is any reason to suspect that interference is taking place.
- Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

Hearing aids

Some digital wireless devices may interfere with some hearing aids.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more information, check with the manufacturer of your vehicle or its equipment.

Only qualified personnel should service the device or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

166 Product and safety information

Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft and may be illegal.

Potentially explosive environments


Switch off your device in any area with a potentially explosive atmosphere, for example near gas pumps at service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas where you would be advised to turn off your vehicle engine, below deck on boats, chemical transfer or storage facilities and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

Emergency calls



Important: This device operates using radio signals, wireless networks, landline networks, and user-programmed functions. If your device supports voice calls over the internet (internet calls), activate both the internet calls and the cellular phone. The device will attempt to make emergency calls over both the cellular networks and through your internet call provider if both are activated. Connections in all conditions cannot be guaranteed. You should never rely solely on any wireless device for essential communications like medical emergencies.

To make an emergency call:

- 1 If the device is not on, switch it on. Check for adequate signal strength. Depending on your device, you may also need to complete the following:
 - Insert a SIM card if your device uses one.
 - Remove certain call restrictions you have activated in your device.
 - Change your profile from offline profile mode to an active profile.
 - If the screen and keys are locked, slide the lock switch on the side of the device to unlock them.
- 2 Press the end key as many times as needed to clear the display and ready the device for calls.
- 3 To open the dialler, select **Telephone** or .
- 4 Enter the official emergency number for your present location. Emergency numbers vary by location.
- 5 Press the call key.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 0.78 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Index**A**

access codes	14
access points	120, 122
— groups	123
accessories	149
alarm	
— calendar note	137
alarm clock	135
answering calls	46
antennas	37
application manager	139
— settings	142
application settings	149
applications	139
attachments	66, 69
audio messages	64
auto-update for time/date	135

B

backing up data	139
backing up device memory	138
barring calls	157
battery	
— inserting	19
— saving power	16
blogs	103
Bluetooth	128, 130

Bluetooth connectivity

— blocking devices	130
— device visibility	128
— pairing devices	129
— settings	128
— turning on/off	128
bookmarks	103
browser	
See <i>web browser</i>	

C

cable connection	132
cache memory	102
calculator	145
calendar	137
— toolbar	137
calendar alarm	137
call log	51
call waiting	48
calls	44
— answering	46
— conference	47
— dialled	50
— duration of	51
— missed	50
— options during	45
— received	50
— redialling	155
— rejecting	46
— restricting	
See <i>fixed dialling</i>	
— settings	155

camera		— sending	53
— assigning images to contacts	92	— synchronising	126
— capturing images	92	— voice tags	53
— flash	93	copying content	33
— image mode	92	copyright protection	154
— indicators	89		
— location information	94	D	
— recording	97	data connections	125
— scenes	94	— PC connectivity	133
— self-timer	95	— synchronisation	126
— sending images	92	date and time	135
— sequence mode	95	date and time settings	147
— settings	90	declining calls	
— video mode	96	<i>See rejecting calls</i>	
cell broadcast messages	71	device	
certificates	151	— updating	149
clock	135, 136	device setup	33
— setting date	135	dialled numbers	50
— setting time	135	dictionary	146
computer connections	133	dismissing calls	46
<i>See also data connections</i>		display rotation	57
conference calls	47	display settings	40, 148
contacts	36, 52, 53	downloads	
— copying	33, 54	— podcasts	83
— defaults	53	DRM (digital rights management)	154
— deleting	53	duration of calls	51
— editing	52		
— images in	52	E	
— overview	52	e-mail	70
— ringing tones	54	e-mail messages	67
— saving	52	end all calls option	48

environmental tips 161

F

factory settings

— restoring 153

feeds, news 103

file management 138, 139

file manager 138

— organising files 138

fixed dialling 55

G

Gallery 98, 99

gallery 98

— organising 98

— viewing 98

general information 12

GPS

— position requests 106

GPS (Global Positioning System) 104

GPS (global positioning system) 105

H

headset 40

help application 12

home screen 27

I

IAPs (internet access points) 120

icons 34

images 98, 99

IMEI number 14

inbox

— message 65

inbox, message 65

indicators 34

installing applications 140

internet

See *web browser*

J

Java applications 139

JME Java application support 139

K

keyboard 57

keypad lock 26

keys and parts 23

L

landmarks 107

language settings 147

licences 154

location information 104

lock code 14

lock switch 26

locking

— remotely 40

locking the keys 26

loudspeaker 39

M

Mail for Exchange	70
mailbox	
— e-mail	67
— voice	46
maps	108
— browsing	109
— collections	112
— driving routes	115
— favourites	112
— finding locations	110
— routes	111
— saving locations	112
— sending locations	112
— synchronising	113
— traffic information	116
— walking routes	113
media	
— music player	76
— RealPlayer	143
media bar	32
media key	32
memory	
— clearing	17
memory card	138
menu	28
messages	
— e-mail	67
— folders for	63
— icon for incoming	65
— multimedia	66

— settings	72
— voice	46
MMS (multimedia message service)	64, 66, 72
multimedia messages	64, 66, 72
music player	76
— playlists	78
muting sound	46

N

navigation tools	104
network positioning	104
network settings	118
news feeds	103
Nokia original accessories	162
Nokia Ovi Player	79, 80
Nokia support information	12
notes	145
notification light	155

O

offline profile	38
outbox, message	63
Ovi Maps	113
Ovi Music	80
Ovi Store	135

P

packet data connection	
— access point settings	123
— counters	50

— settings	133
personal certificates	151
personalisation	74
personalising your device	33
Phone switch	33
photos	
<i>See camera</i>	
pictures	
— copying	33
PIN codes	14
podcasting	83
— settings	81
positioning information	104
positioning settings	108
presentations, multimedia	66
profiles	75
— offline restrictions	38
— personalisation	75
proximity sensor	44
proxy settings	124
PUK codes	14

R

radio	
— listening	83
— stations	84
RealPlayer	143
recorder	144
recording	
— video clips	96
recycling	161

rejecting calls	46
remote locking	40
remote mailbox	67
remote SIM mode	131
removing applications	142
ringing tones	75
roaming	118

S

scenes	
— image and video	94
searching	134
security	
— certificates	151
security code	14
security module	153
self-timer	
— camera	95
sensor settings	40, 57
sent messages folder	63
service commands	71
service messages	66
settings	147, 149
— access points	122, 123
— applications	149
— Bluetooth connectivity	128
— call divert	156
— calls	155
— camera	90
— certificates	151
— date and time	147

— display	148	songs	76
— language	147	speakerphone	39
— messages	72	speed dialling	48
— network	118	stylus	25
— packet data	133	support	12
— packet data access points	123	Symbian applications	139
— podcasting	81	synchronisation	126
— positioning	108		
— SIP	134	T	
— video centre	88	text input	58, 61, 62
— WLAN	121, 125	text messages	
Share online	99	— receiving and reading	65
— accounts	100	— replying to	65
— activating	100	— sending	64
— creating posts	101	— settings	72
— posting	101	— SIM messages	71
— subscribing	100	themes	74
sharing media files online	99	time and date	135
shooting modes		tones	75
— camera	94	touch screen	29, 44, 57, 59
SIM card		transferring content	33
— inserting	18	transferring music	79
— messages	71	troubleshooting	104, 157
— removing	42		
SIM card security	150	U	
SIP	134	updates	
SMS (short message service)	64	— device	149
software		— phone software	13
— updating	13	uploading media files	99
software applications	139	USB cable connection	132
software updates	13	useful information	12

V

video	
— viewing	98
Video Centre	85
video centre	
— downloading	85
— my videos	87
— transferring videos	88
— video feeds	87
— viewing	85
video clips	99
videos	
— copying	33
virtual keypad	59
voice calls	
See <i>calls</i>	
voice commands	49, 148
See also <i>voice dialling</i>	
voice control	148
voice dialling	49
volume controls	39

W

wallpaper	74
web browser	102, 104
— bookmarks	103
— browsing pages	102
— cache memory	102
web feeds	103
week settings	137
wireless LAN (WLAN)	118

wireless LAN settings	121
WLAN (wireless local area network)	125
world clock	136